
110M0–02

Removal & Installation and Disassembly & Reassembly

1. REMOVE FUEL SUCTION TUBE W/PUMP ASSY (SEE PAGE 11–25)

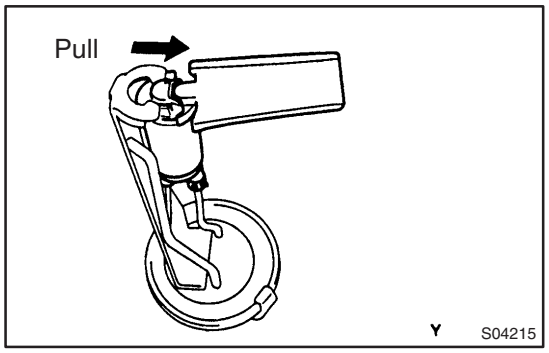


2. REMOVE FUEL PUMP ASSEMBLY

(a) Disconnect the lead wire from the connector of the fuel suction plate.

(b) Pull out the lower side of the fuel pump from the pump bracket.

(c) Disconnect the fuel hose from the fuel pump, and remove the fuel pump.

(d) Remove the rubber cushion from the fuel pump.

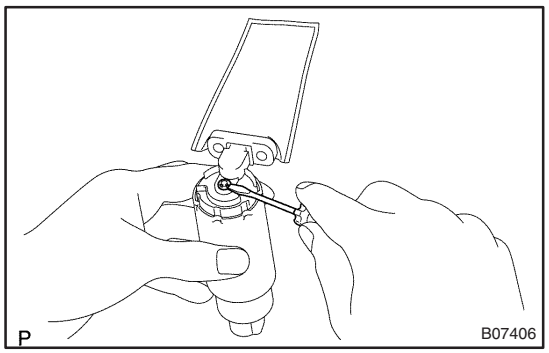

(e) Using a screwdriver, remove the clip.

(f) Pull out the pump filter.

3. INSTALL FUEL PUMP ASSEMBLY

(a) Install the pump filter with a new clip.

(b) Install the rubber cushion to the fuel pump.

(c) Connect the fuel hose to the outlet port of the fuel pump.

(d) Install the fuel pump by pushing the lower side of the fuel pump.

(e) Install the lead wire to the fuel pump and connector of the fuel suction plate.

4. INSTALL FUEL SUCTION TUBE W/PUMP ASSY (SEE PAGE 11–25)