
INJECTOR ASSY (1KD–FTV)(From August, 2004)


COMPONENTS

1118I–01

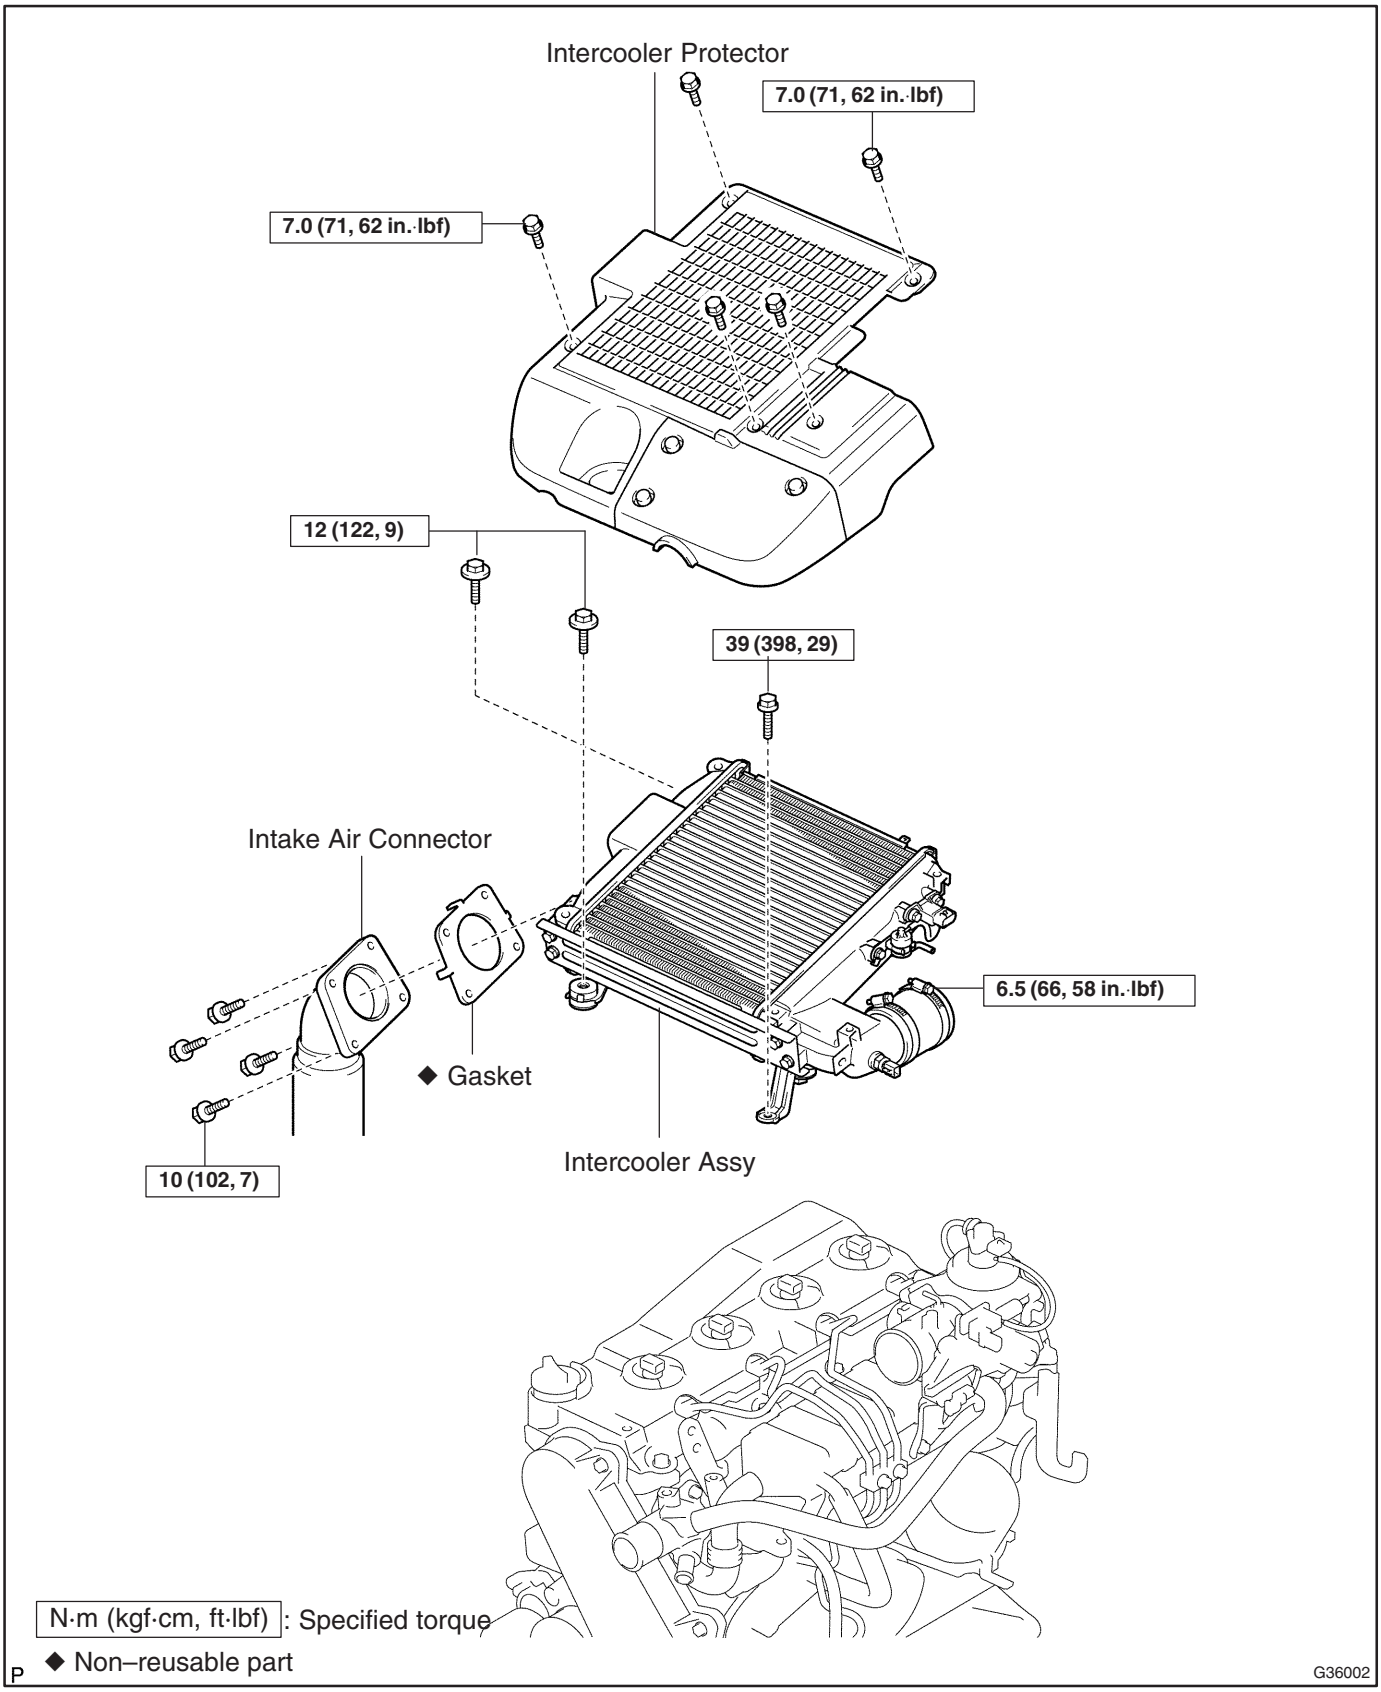

P

G36002

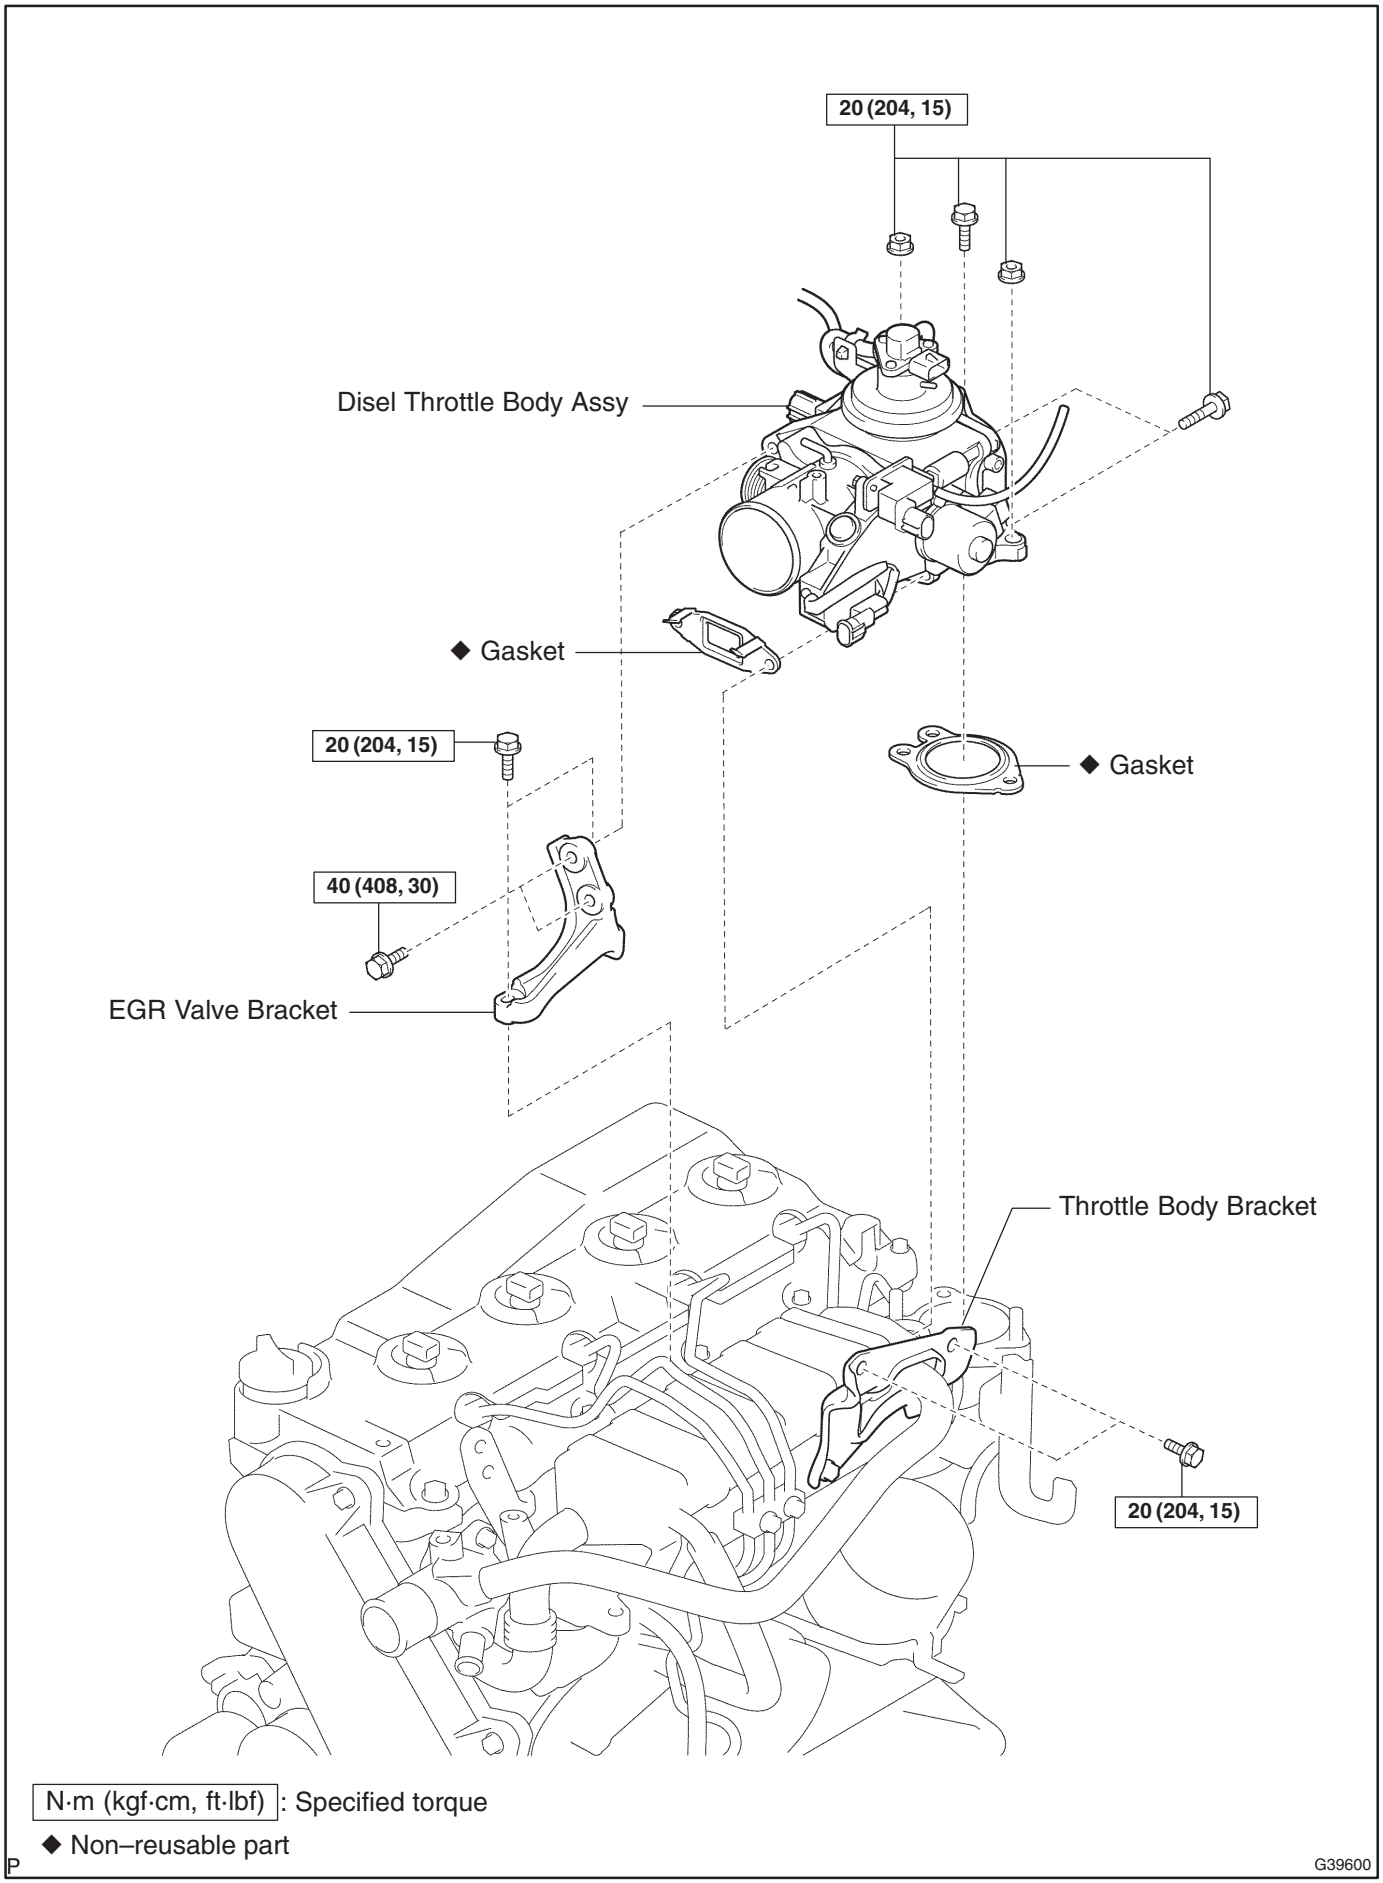


N·m (kgf·cm, ft·lbf): Specified torque

◆ Non–reusable part

P

G39600

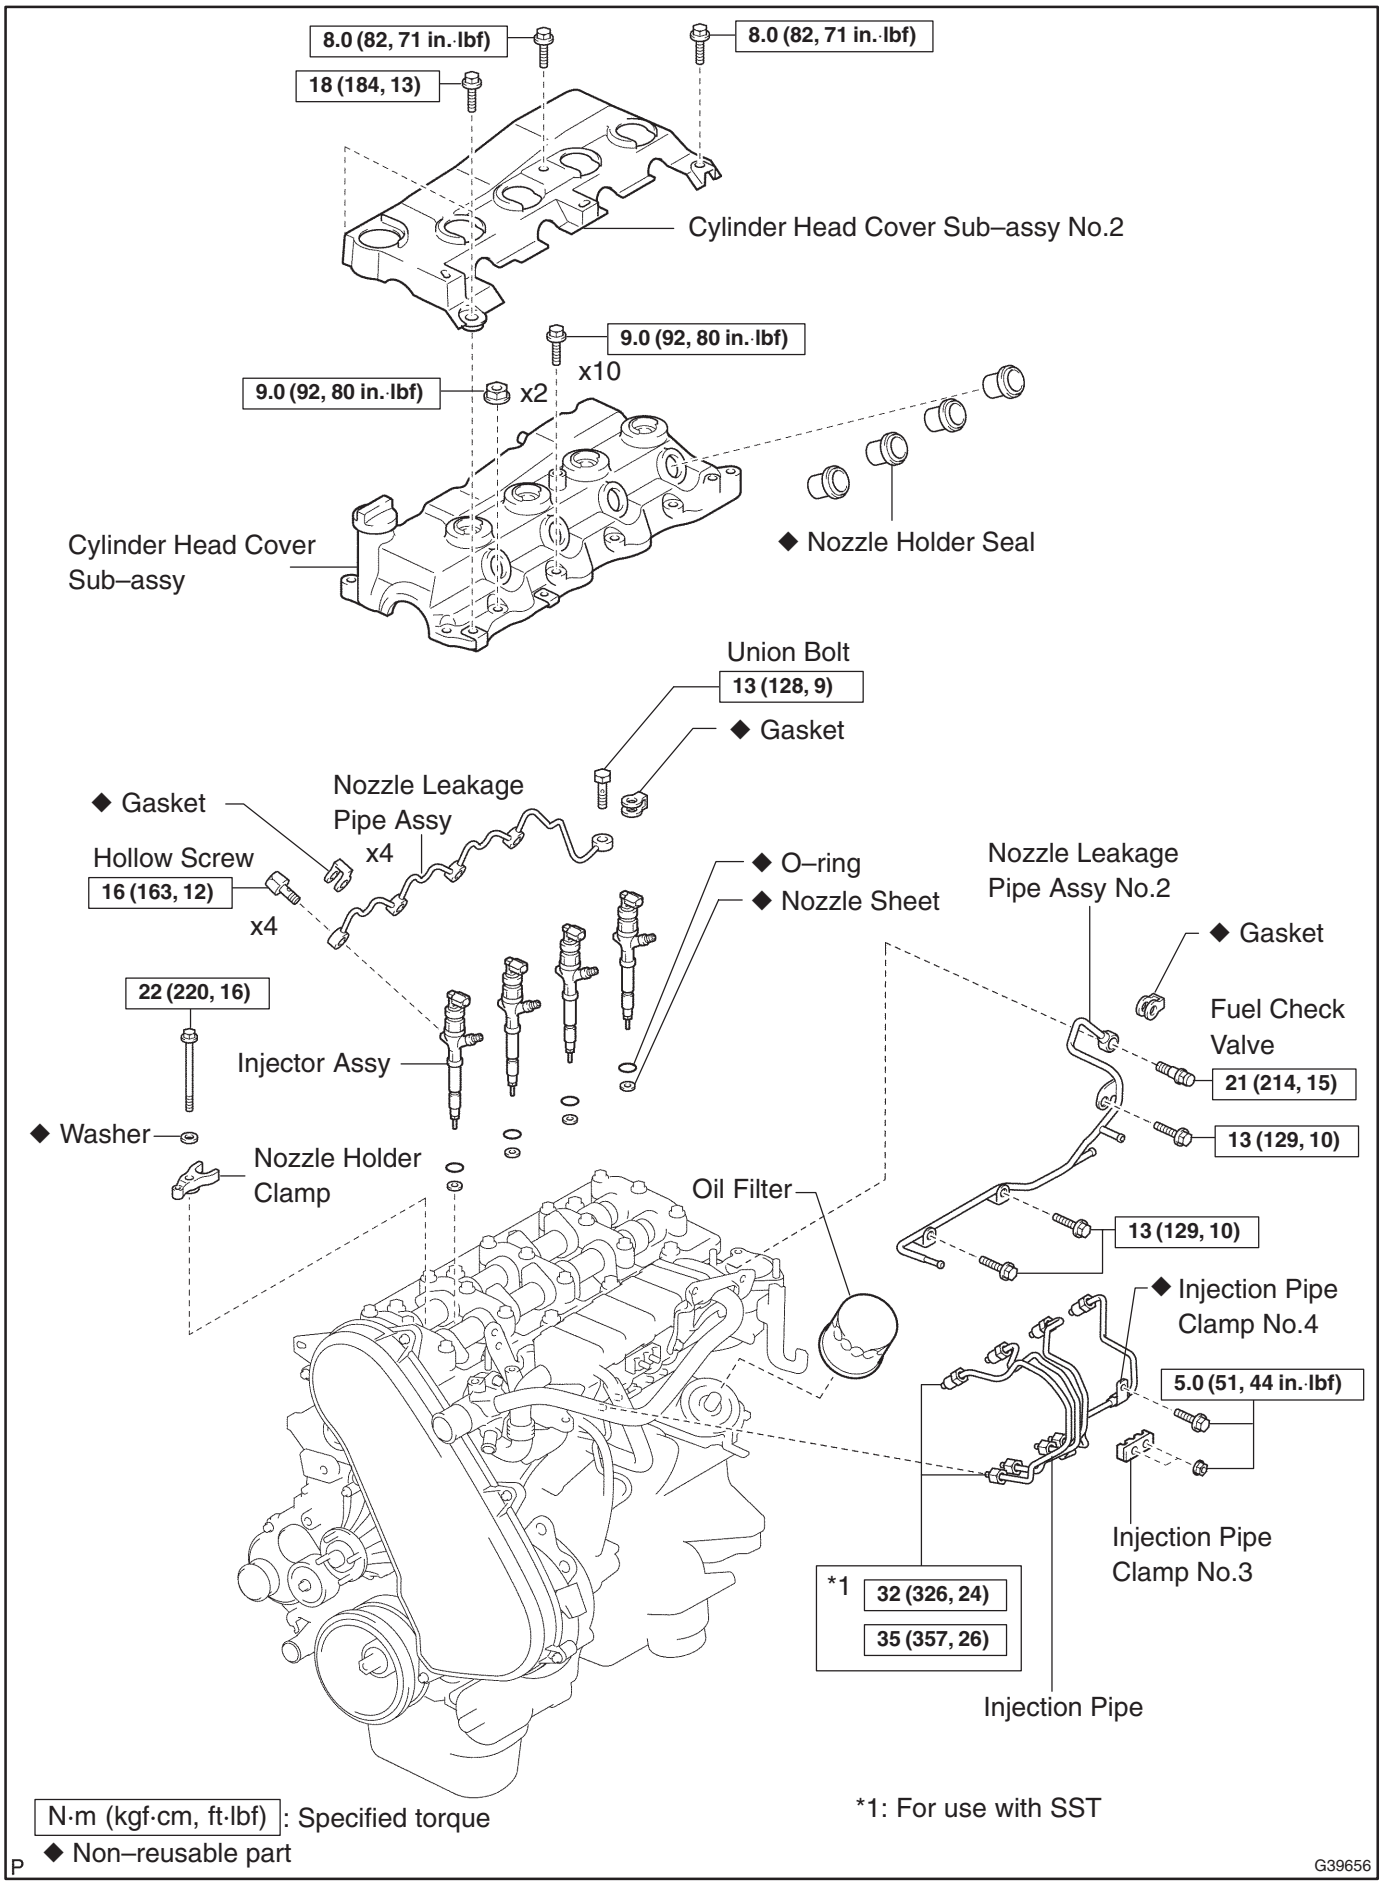
8.0 (82, 71 in.·lbf)
8.0 (82, 71 in.·lbf)
18 (184, 13)
Cylinder Head Cover Sub–assy No.2
9.0 (92, 80 in.·lbf)
x10
9.0 (92, 80 in.·lbf)
x2
Cylinder Head Cover Sub–assy
◆ Nozzle Holder Seal
Union Bolt
13 (128, 9)
◆ Gasket
◆ Gasket
Nozzle Leakage Pipe Assy
x4
Hollow Screw
16 (163, 12)
x4
◆ O–ring
◆ Nozzle Sheet
Nozzle Leakage Pipe Assy No.2
◆ Gasket
Fuel Check Valve
22 (220, 16)
Injector Assy
21 (214, 15)
13 (129, 10)
◆ Washer
Nozzle Holder Clamp
Oil Filter
13 (129, 10)
◆ Injection Pipe Clamp No.4
5.0 (51, 44 in.·lbf)
Injection Pipe Clamp No.3
*1
32 (326, 24)
35 (357, 26)
Injection Pipe
N·m (kgf·cm, ft·lbf): Specified torque
◆ Non–reusable part
*1: For use with SST
P
G39656