
AIR FUEL RATIO SENSOR (2TR–FE (UNLEADED GASOLINE))

REPLACEMENT


120HD–01

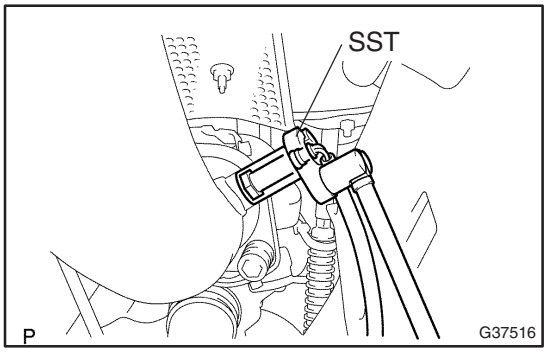

1. REMOVE AIR FUEL RATIO SENSOR

(a) Disconnect the air fuel ratio sensor connector.

(b) Remove the air fuel ratio sensor from the front pipe assy.
SST 09224–00010

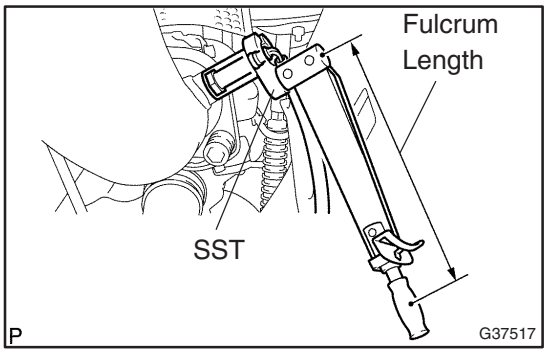

2. INSTALL AIR FUEL RATIO SENSOR

(a) Install the air fuel ratio sensor to the front pipe assy.
SST 09224–00010
Torque:
44 N·m (449 kgf·cm, 32 ft·lbf)
40 N·m (408 kgf·cm, 30 ft·lbf) (with SST)

NOTICE:
Use a torque wrench with a fulcrum length of 300 mm (11.81 in.).

(b) Connect the air fuel ratio sensor connector.