
OXYGEN SENSOR (2TR–FE (UNLEADED GASOLINE))

120HE–01


REPLACEMENT

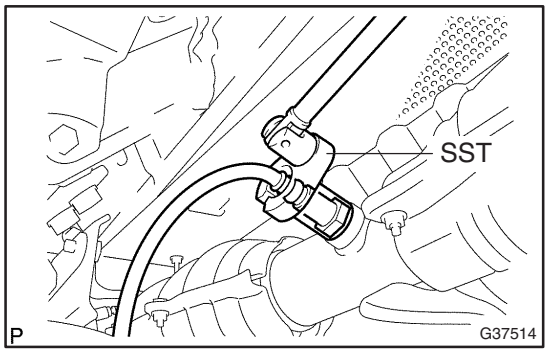

1. REMOVE OXYGEN SENSOR

(a) Disconnect the oxygen sensor connector.

(b) Remove the oxygen sensor from the front pipe assy.
SST 09224–00010

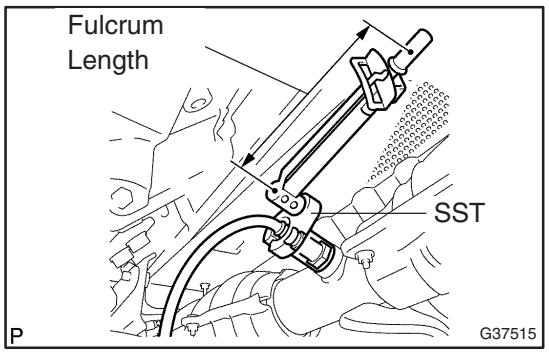

2. INSTALL OXYGEN SENSOR

(a) Install the oxygen sensor to the front pipe assy.
SST 09224–00010
Torque:
44 N·m (449 kgf·cm, 32 ft·lbf)
40 N·m (408 kgf·cm, 30 ft·lbf) (with SST)

NOTICE:

Use a torque wrench with a fulcrum length of 300 mm (11.81 in.).

(b) Connect the oxygen sensor connector.