
AIR SWITCHING VALVE ASSY (2TR–FE (UNLEADED GASOLINE))

120HF–01


REPLACEMENT

1. REMOVE AIR CLEANER ASSY (SEE PAGE 14–19)
2. REMOVE EXHAUST MANIFOLD HEAT INSULATOR NO.1 (SEE PAGE 14–19)

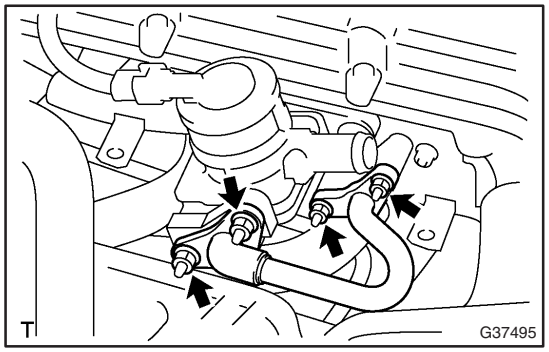

3. REMOVE INTAKE PIPE NO.4


(a) Remove the 4 nuts, intake pipe No.4 and 2 gaskets.

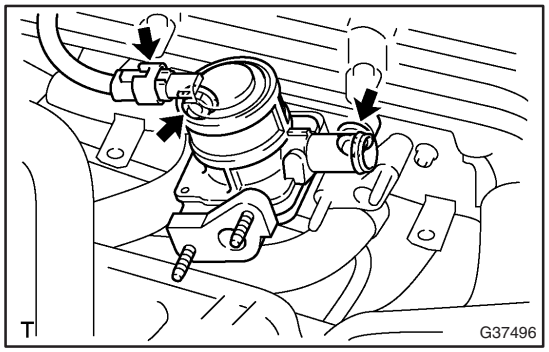

4. REMOVE AIR SWITCHING VALVE ASSY

(a) Disconnect the connector.


(b) Remove the 2 nuts and air switching valve assy.

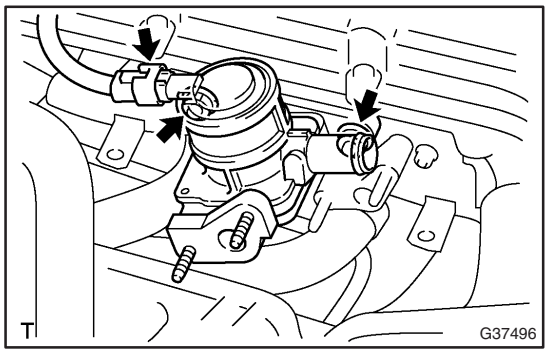

5. INSTALL AIR SWITCHING VALVE ASSY

(a) Install the 2 nuts and air switching valve assy.
Torque: 20 N·m (204kgf·cm, 15 ft·lbf)

(b) Connect the connector.

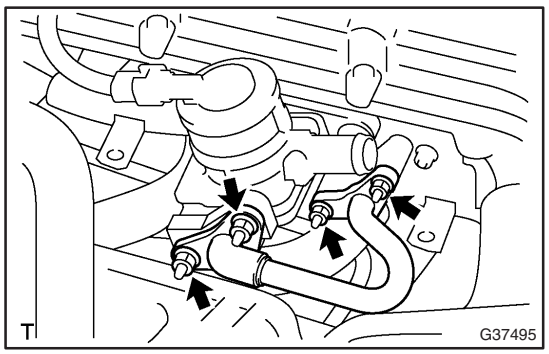

6. INSTALL INTAKE PIPE NO.4

(a) Install 2 new gaskets and intake pipe No.4 with the 4 nuts.
Torque: 20 N·m (204kgf·cm, 15 ft·lbf)

7. INSTALL EXHAUST MANIFOLD HEAT INSULATOR NO.1 (SEE PAGE 14–19)
8. INSTALL AIR CLEANER ASSY (SEE PAGE 14–19)