
AIR PUMP ASSY (2TR–FE (UNLEADED GASOLINE))


120HG–01

REPLACEMENT

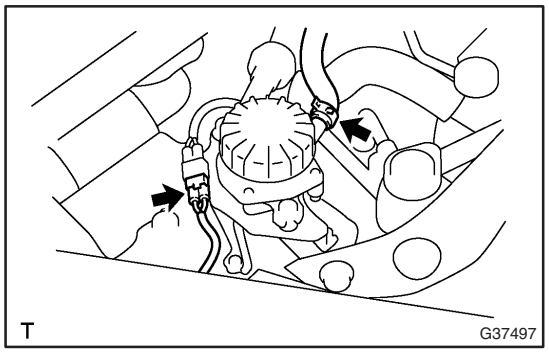


1. REMOVE AIR PUMP ASSY


(a) Disconnect the hose and connector.

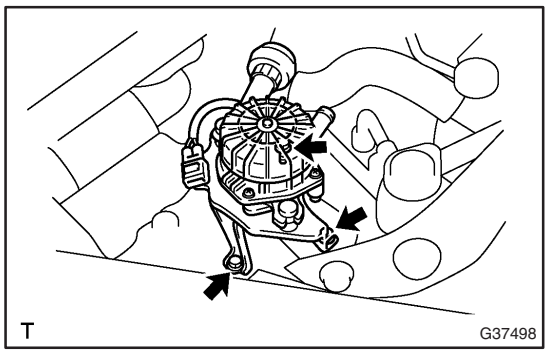

(b) Remove the 3 bolts and air pump assy w/ bracket.

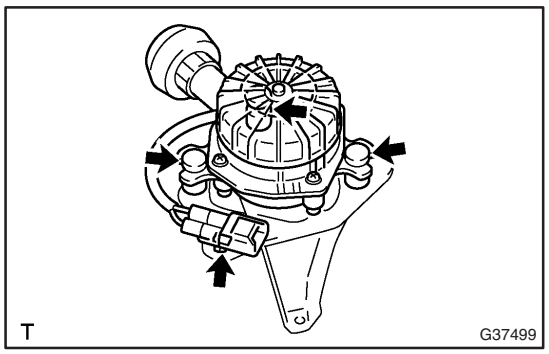


(c) Remove the 3 insulators, connector and air pump assy from the bracket.

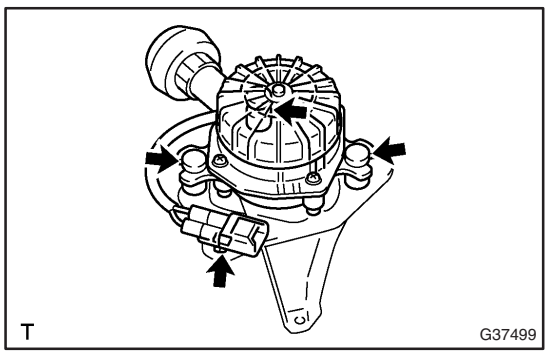


2. INSTALL AIR PUMP ASSY

(a) Install the 3 insulators, connector and air pump assy to the bracket.

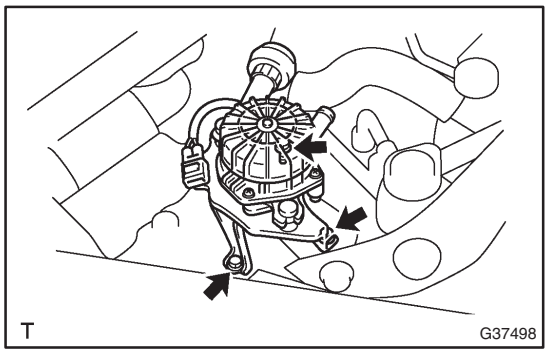

(b) Install the 3 bolts and air pump assy w/ bracket.
Torque: 18 N·m (184kgf·cm, 13 ft·lbf)

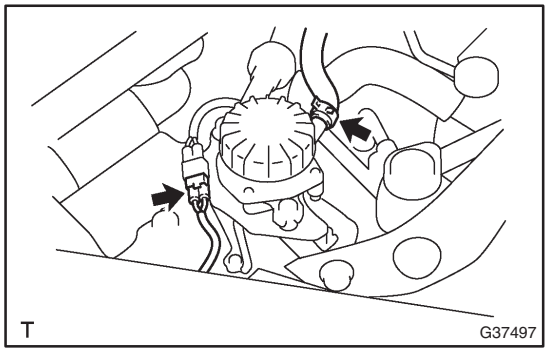

(c) Connect the hose and connector.