
EMISSION CONTROL SYSTEM (1GR–FE)(From August, 2004)

INSPECTION

120HH–01

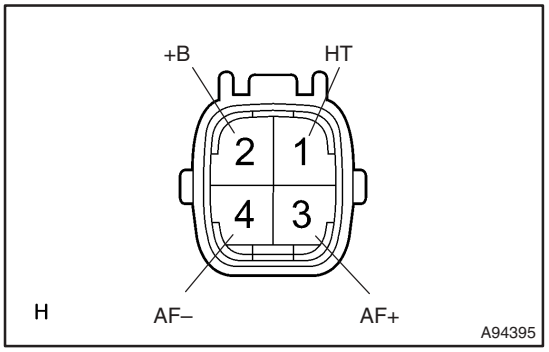


1. INSPECT AIR FUEL RATIO SENSOR (BANK1,BANK2 AIR FUEL RATIO SENSOR)

(a) Using an ohmmeter, measure the resistance between the terminals.

Resistance:

Terminal No.	Resistance
1 (HT) – 2 (+B)	1.8 to 3.4 Ω at 20°C (68°F)
1 (HT) – 4 (AF–)	No Continuity

If the resistance is not as specified, replace the sensor.

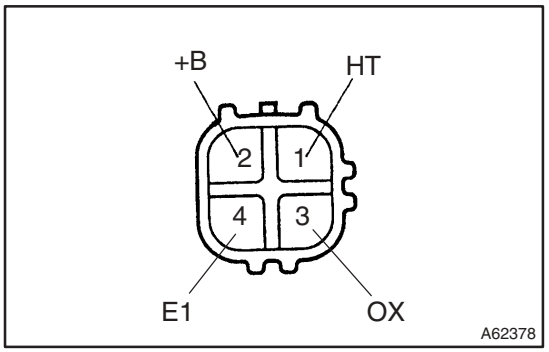

2. INSPECT HEATED OXYGEN SENSOR (BANK1,BANK2 OXYGEN SENSOR)

(a) Using an ohmmeter, measure the resistance between the terminals.

Resistance:

Terminal No.	Resistance
1 (HT) – 2 (+B)	11 to 16 Ω at 20°C (68°F)
1 (HT) – 4 (E1)	No Continuity

If the resistance is not as specified, replace the sensor.