


PARTIAL ENGINE ASSY (2TR–FE)

COMPONENTS

1420E–01

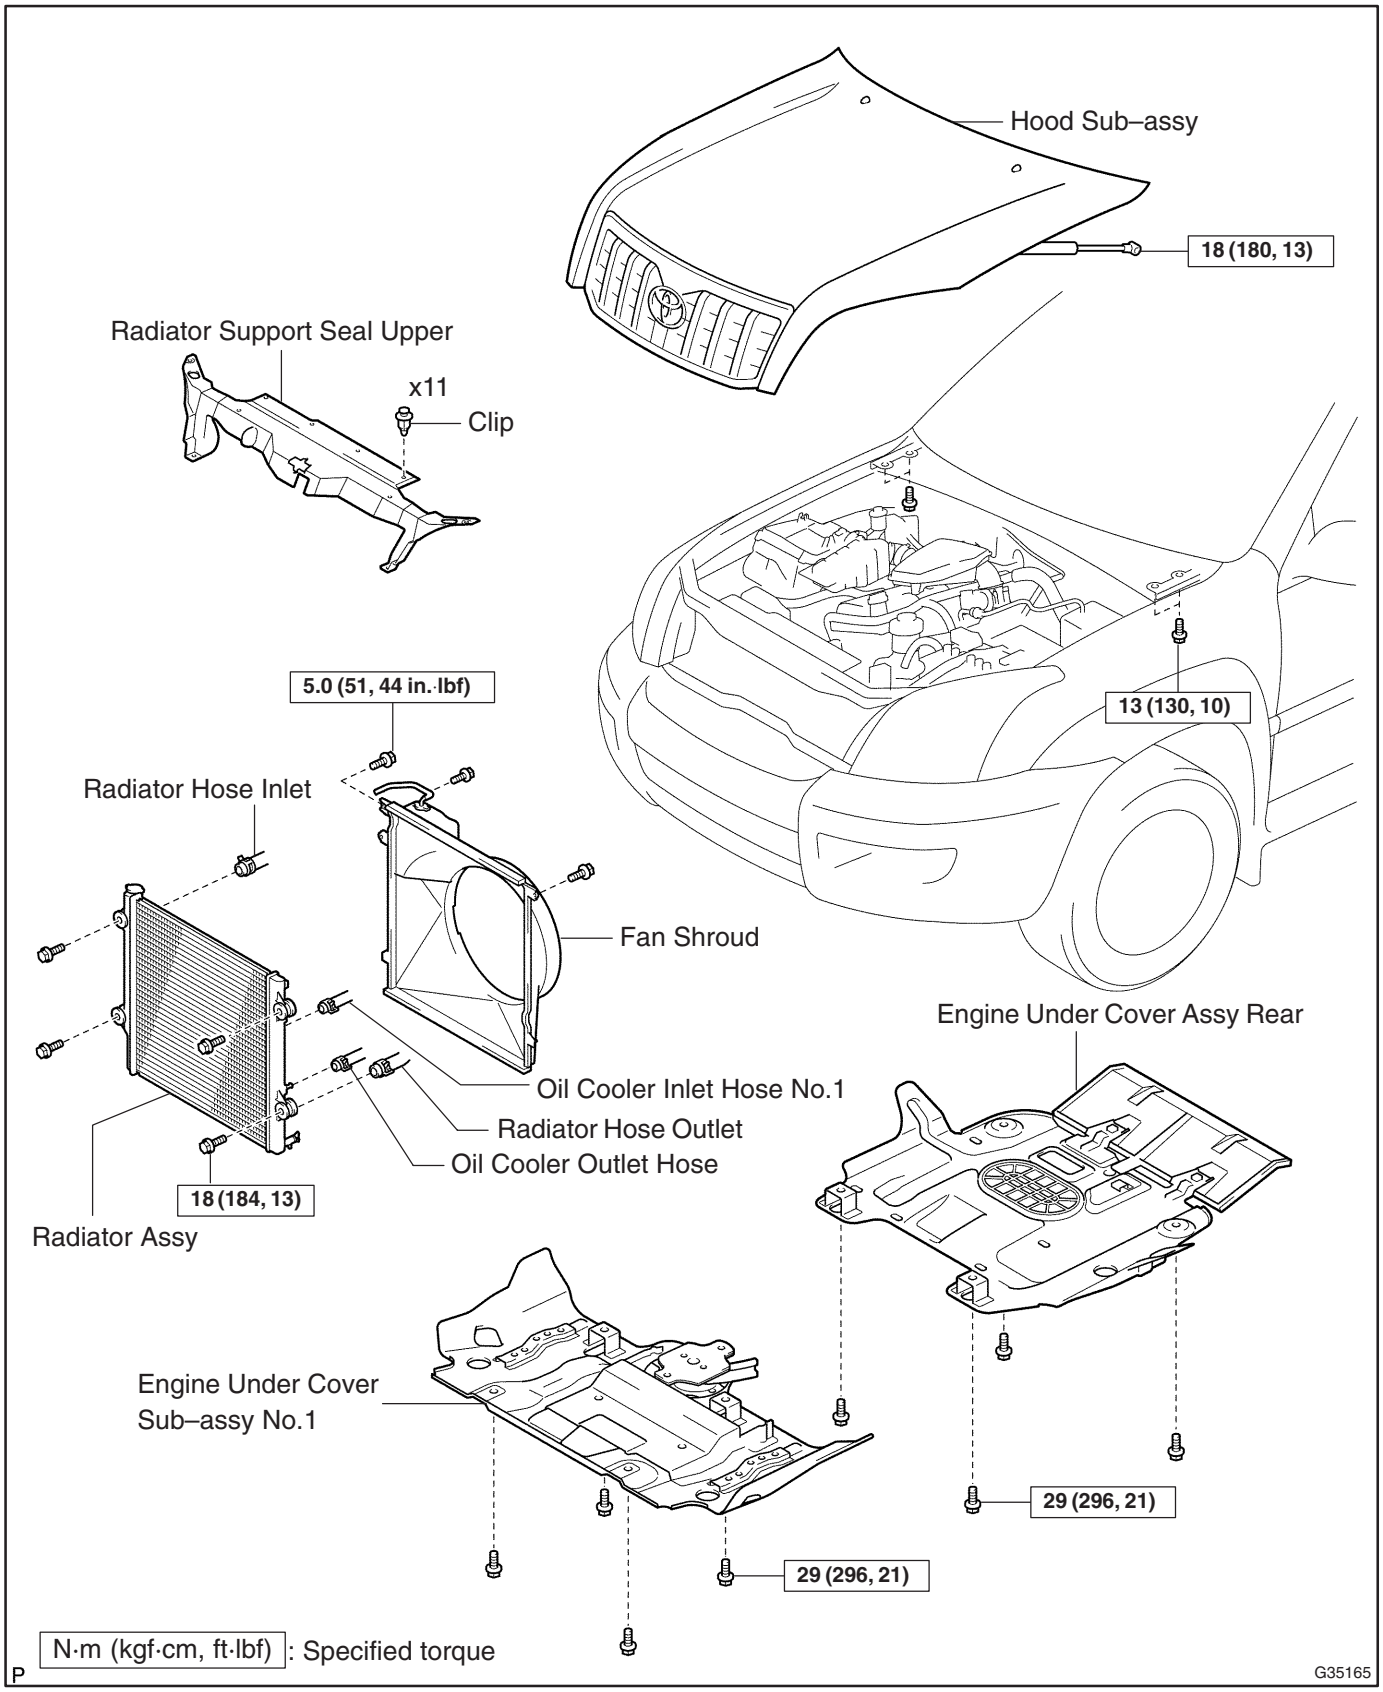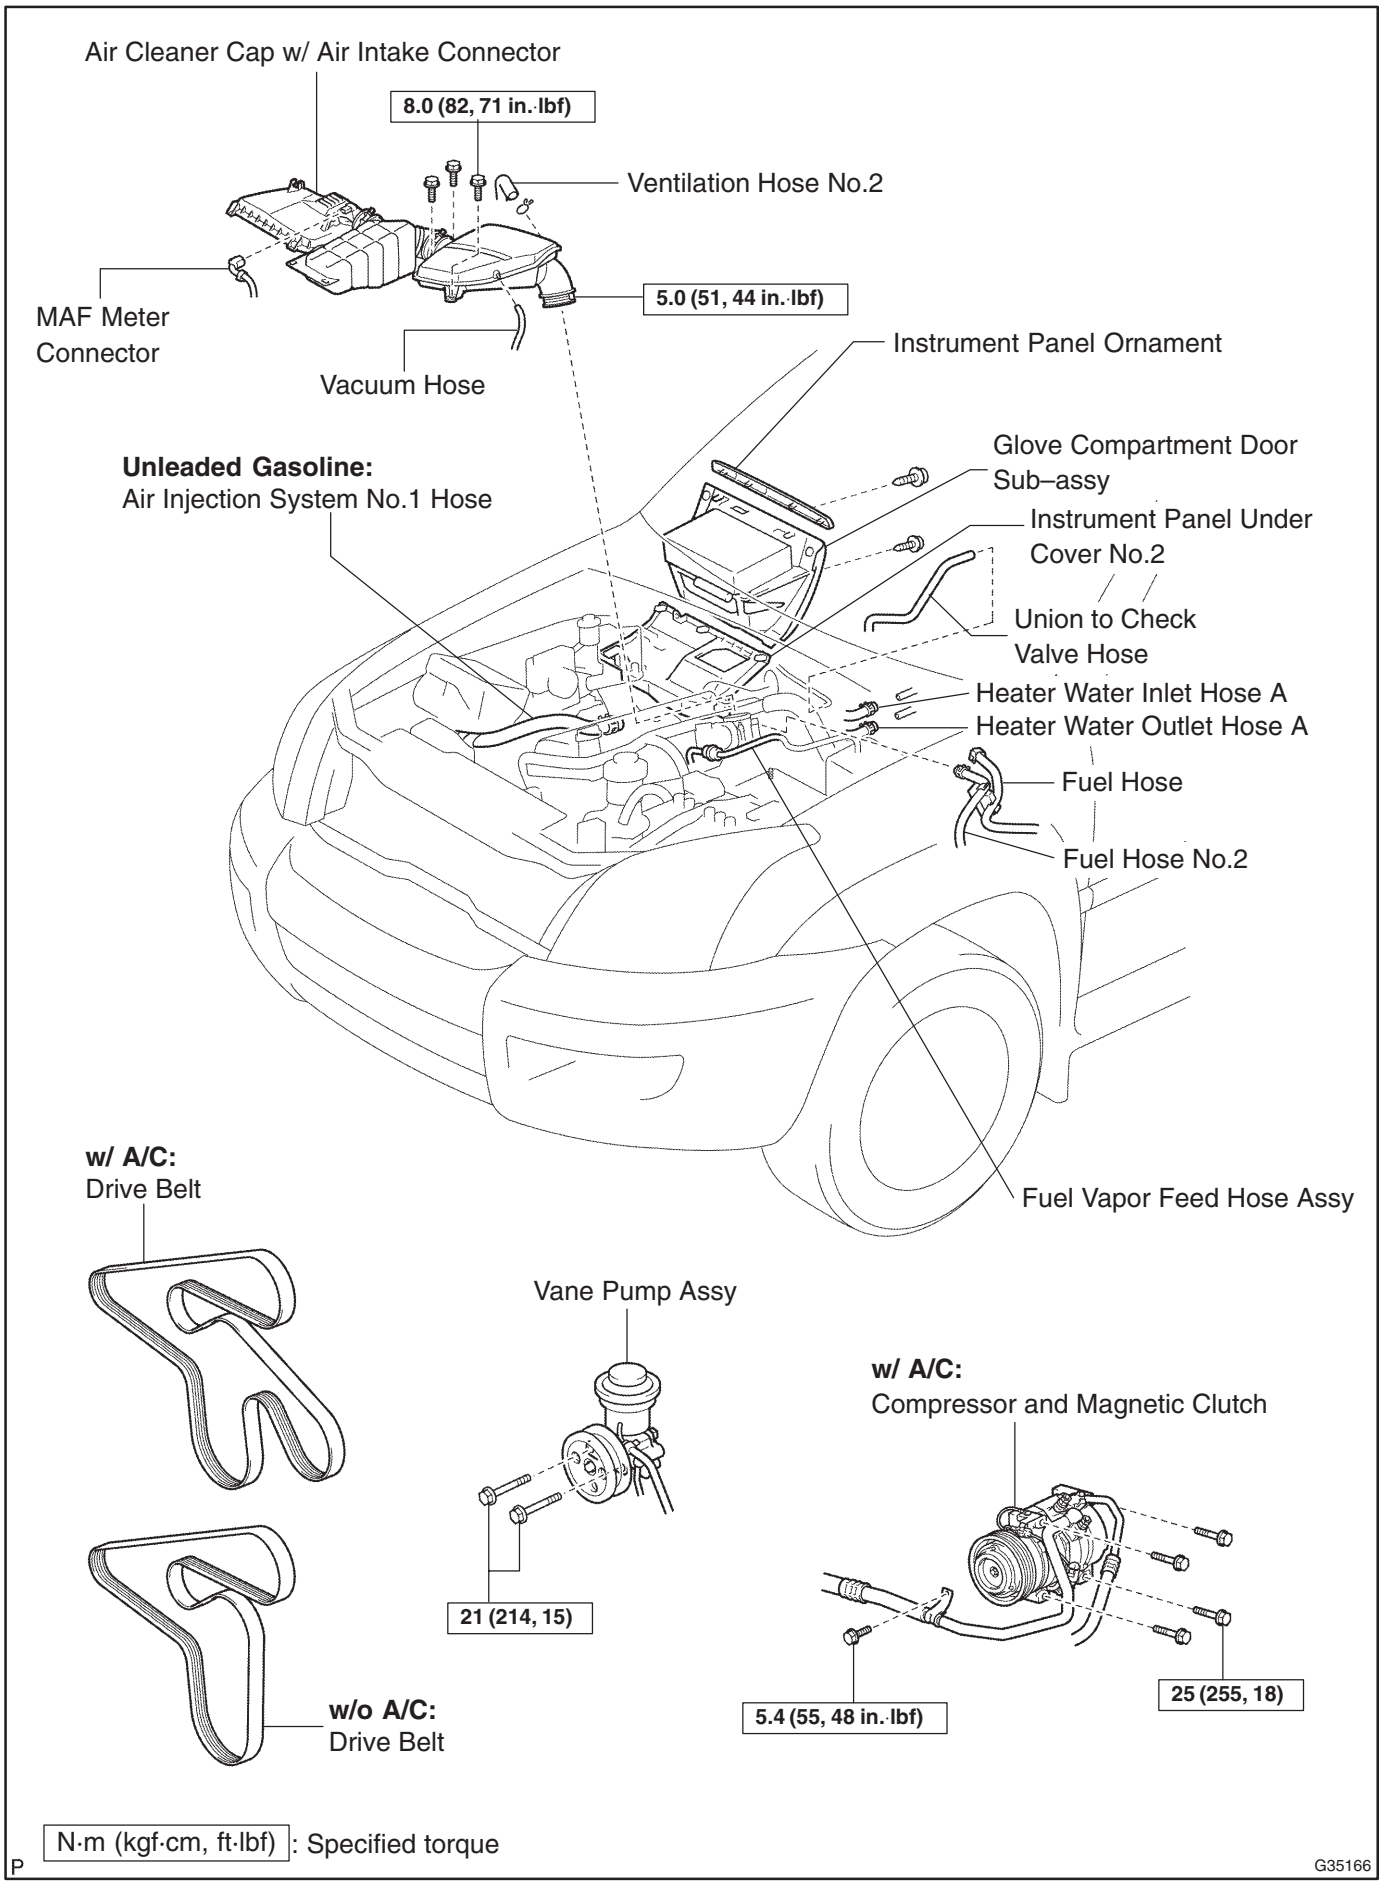



Air Cleaner Cap w/ Air Intake Connector
8.0 (82, 71 in.·lbf)
Ventilation Hose No.2
5.0 (51, 44 in.·lbf)
MAF Meter Connector
Vacuum Hose
Instrument Panel Ornament
Glove Compartment Door Sub–assy
Unleaded Gasoline:
Air Injection System No.1 Hose
Instrument Panel Under Cover No.2
Union to Check Valve Hose
Heater Water Inlet Hose A
Heater Water Outlet Hose A
Fuel Hose
Fuel Hose No.2
Fuel Vapor Feed Hose Assy
w/ A/C:
Drive Belt
Vane Pump Assy
21 (214, 15)
w/ A/C:
Compressor and Magnetic Clutch
5.4 (55, 48 in.·lbf)
25 (255, 18)
w/o A/C:
Drive Belt
N·m (kgf·cm, ft·lbf): Specified torque
P
G35166

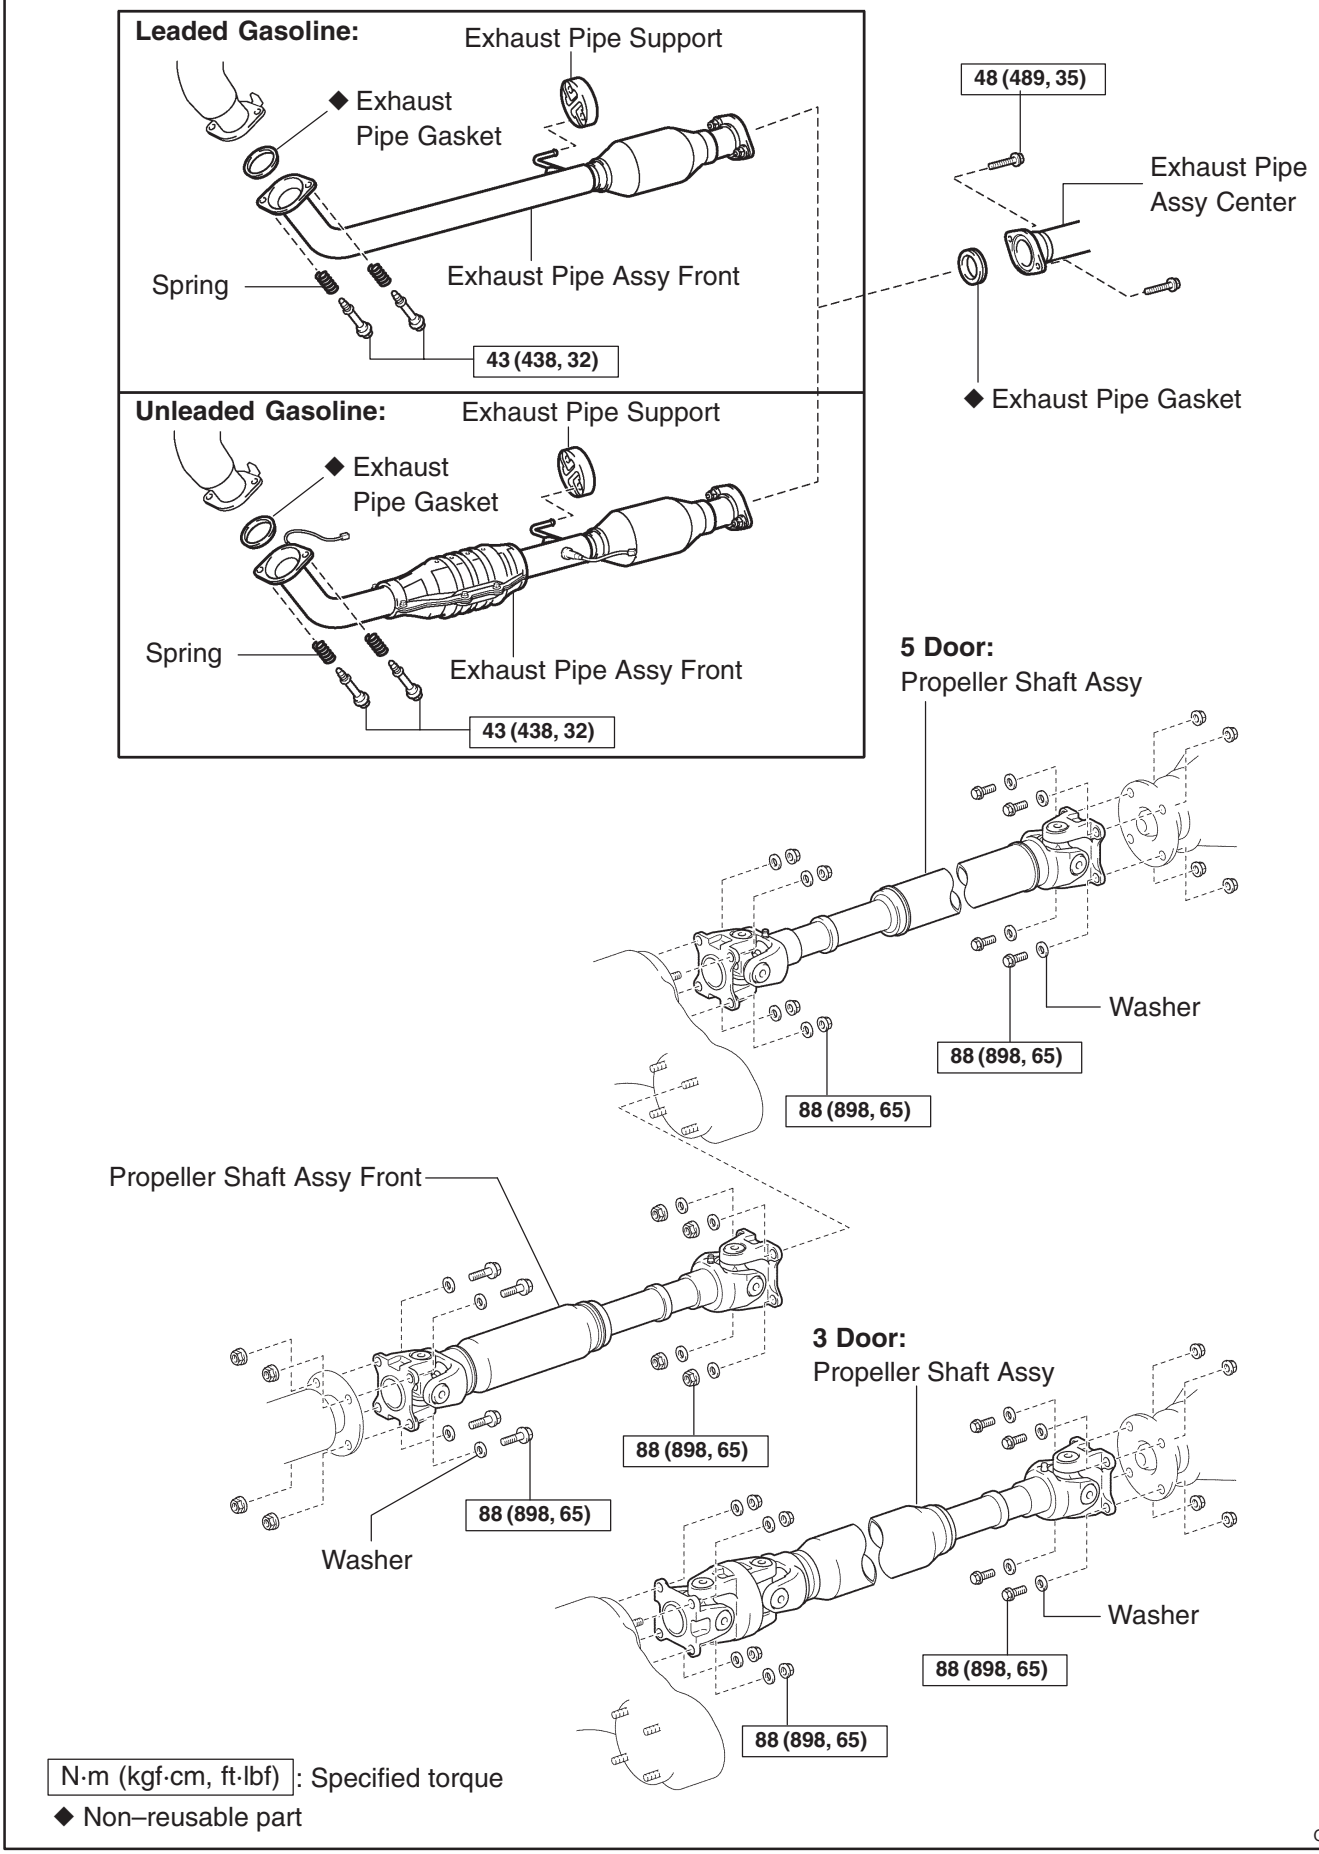



N·m (kgf·cm, ft·lbf): Specified torque

◆ Non–reusable part

G37583

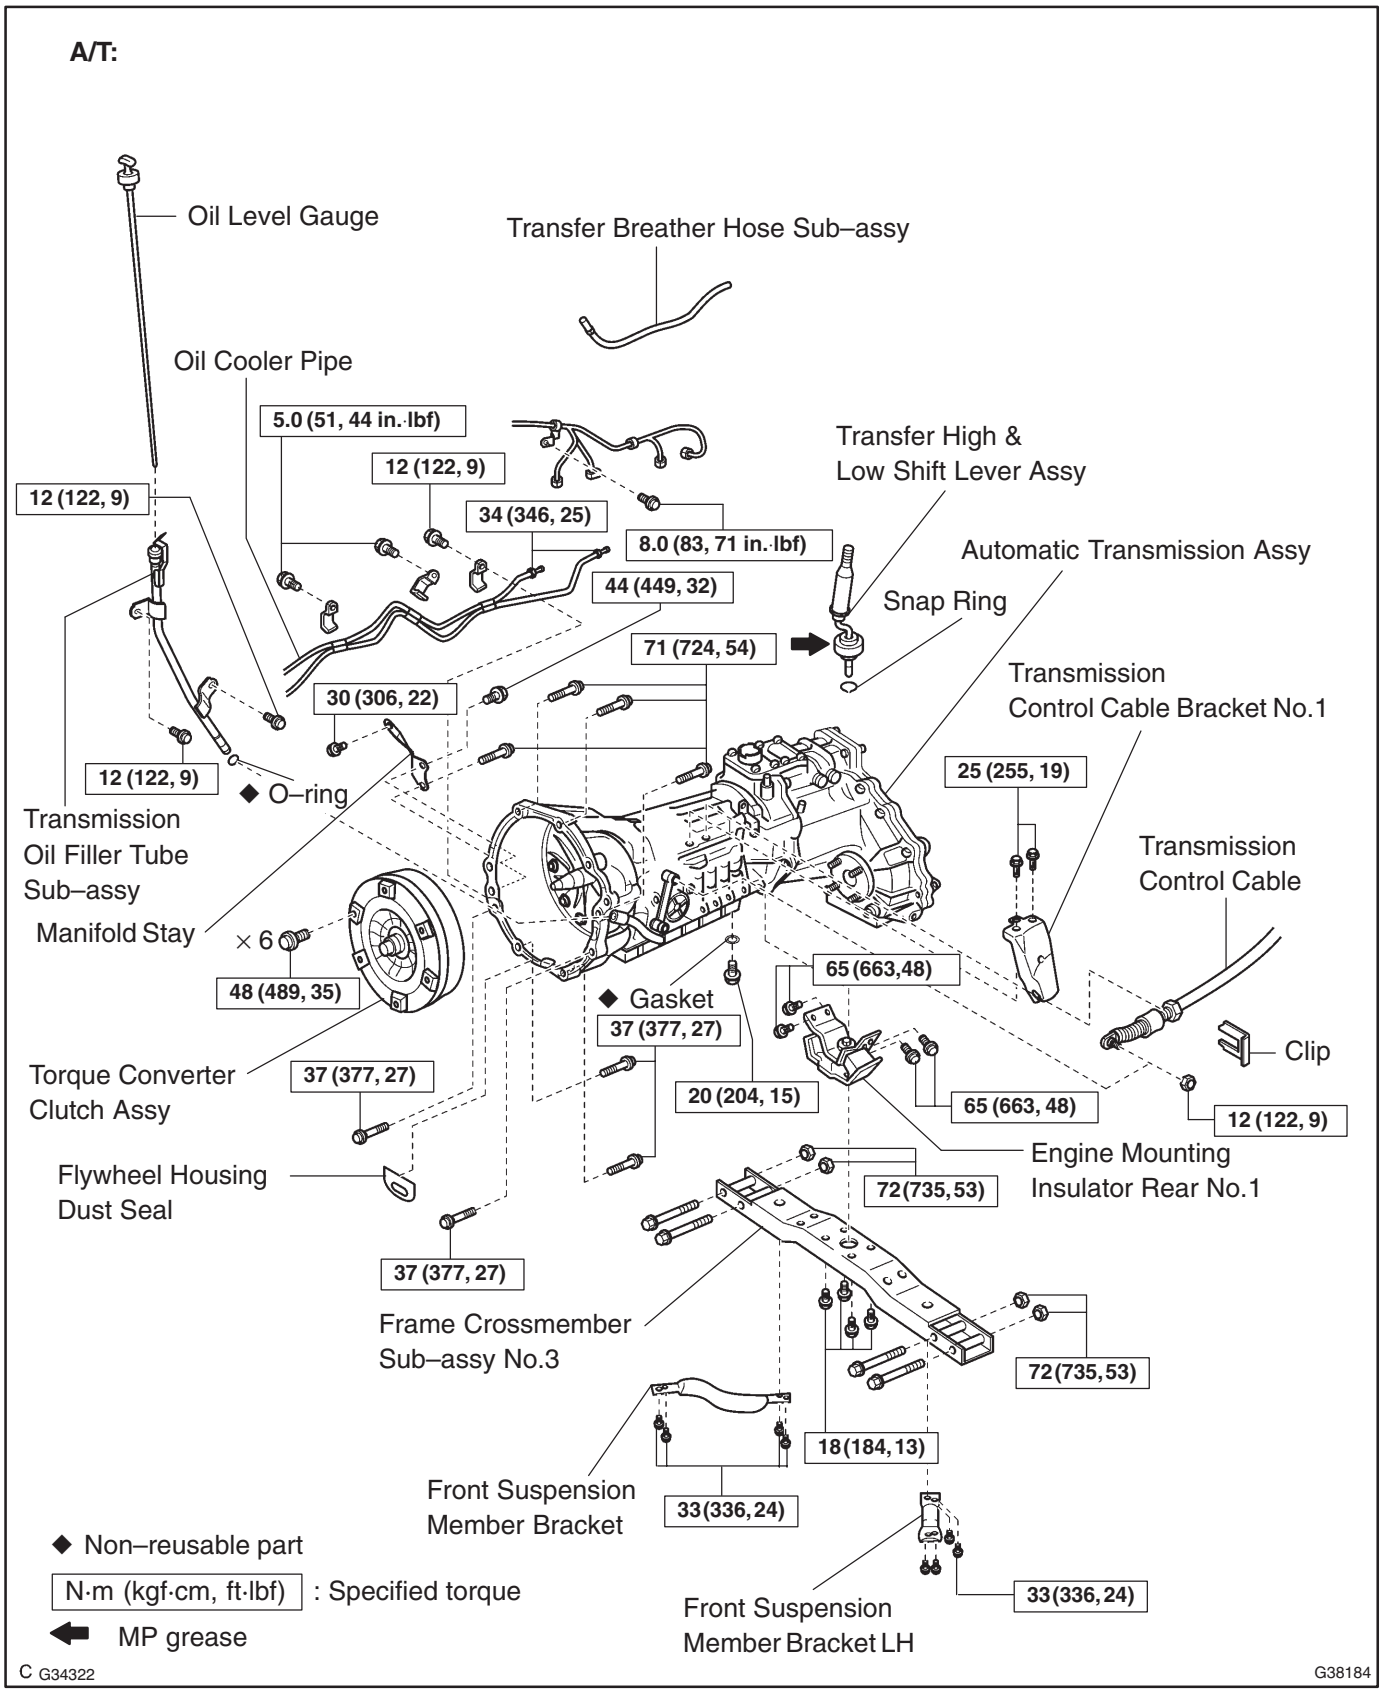
A/T:
Oil Level Gauge
Transfer Breather Hose Sub–assy
Oil Cooler Pipe
5.0 (51, 44 in.·lbf)
12 (122, 9)
34 (346, 25)
8.0 (83, 71 in.·lbf)
Transfer High & Low Shift Lever Assy
12 (122, 9)
44 (449, 32)
Automatic Transmission Assy
Snap Ring
71 (724, 54)
30 (306, 22)
Transmission Control Cable Bracket No.1
12 (122, 9)
◆ O–ring
25 (255, 19)
Transmission Oil Filler Tube Sub–assy
Transmission Control Cable
Manifold Stay
× 6
48 (489, 35)
◆ Gasket
65 (663,48)
37 (377, 27)
Clip
Torque Converter Clutch Assy
37 (377, 27)
20 (204, 15)
65 (663, 48)
12 (122, 9)
Engine Mounting Insulator Rear No.1
Flywheel Housing Dust Seal
72(735,53)
37 (377, 27)
Frame Crossmember Sub–assy No.3
72(735,53)
18(184,13)
Front Suspension Member Bracket
33(336,24)
◆ Non–reusable part
N·m (kgf·cm, ft·lbf) : Specified torque
MP grease
Front Suspension Member Bracket LH
33(336,24)
C G34322
G38184

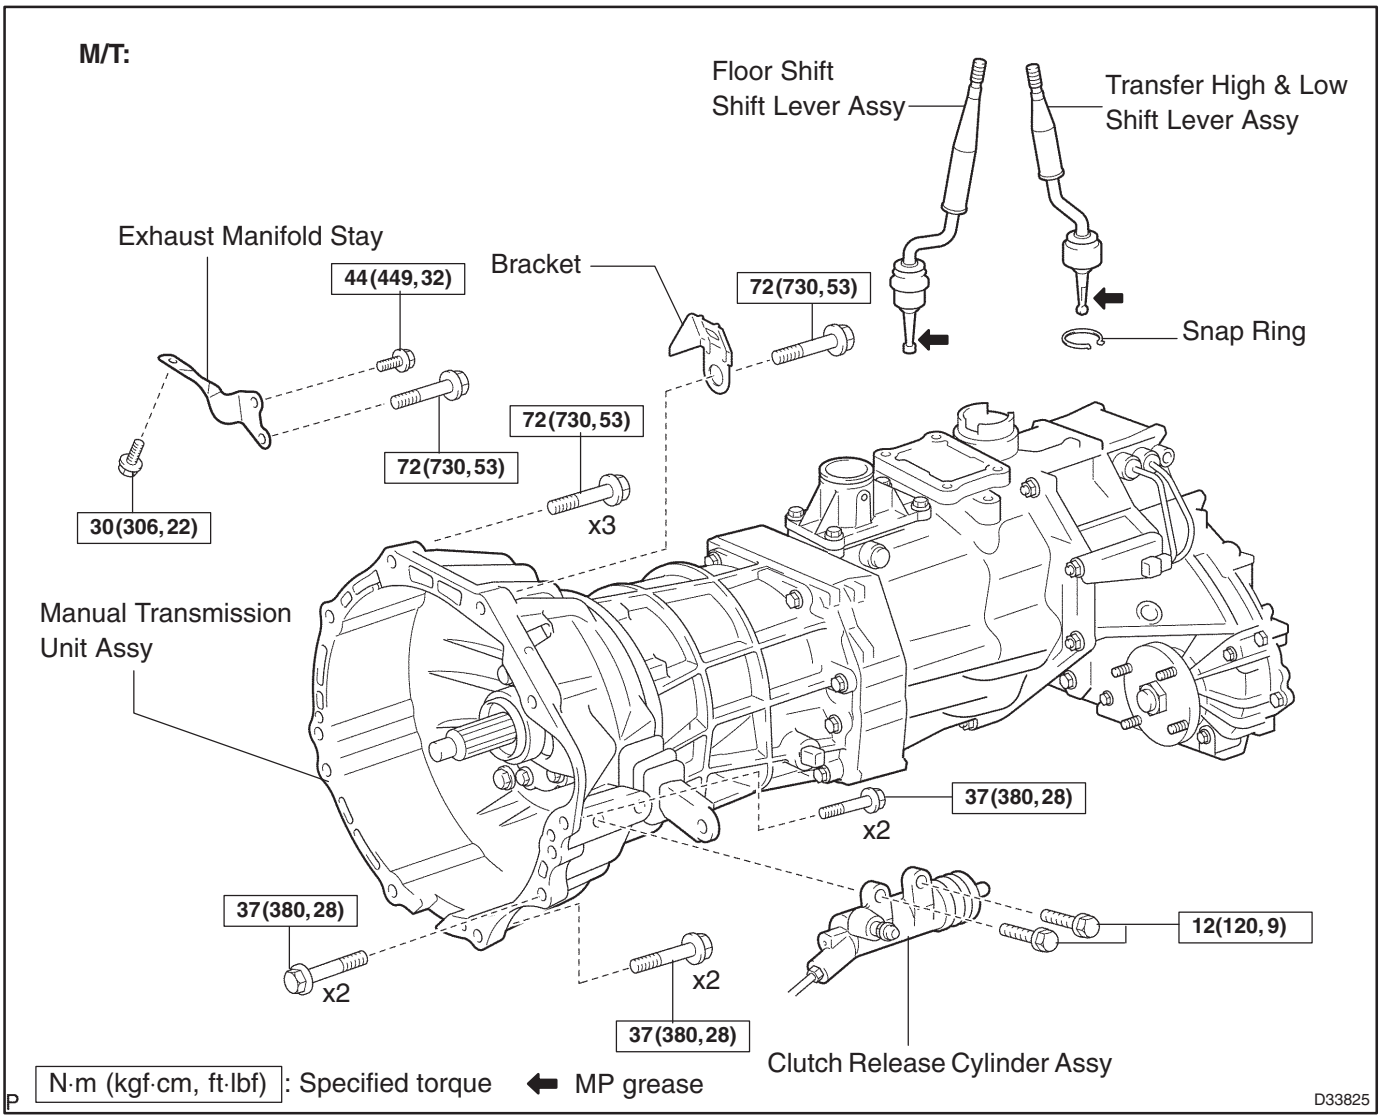

M/T:
Floor Shift
Shift Lever Assy
Transfer High & Low
Shift Lever Assy
Exhaust Manifold Stay
44(449,32)
Bracket
72(730,53)
Snap Ring
72(730,53)
72(730,53)
30(306,22)
x3
Manual Transmission
Unit Assy
37(380,28)
x2
37(380,28)
x2
12(120,9)
37(380,28)
Clutch Release Cylinder Assy
N·m (kgf·cm, ft·lbf): Specified torque
MP grease
D33825

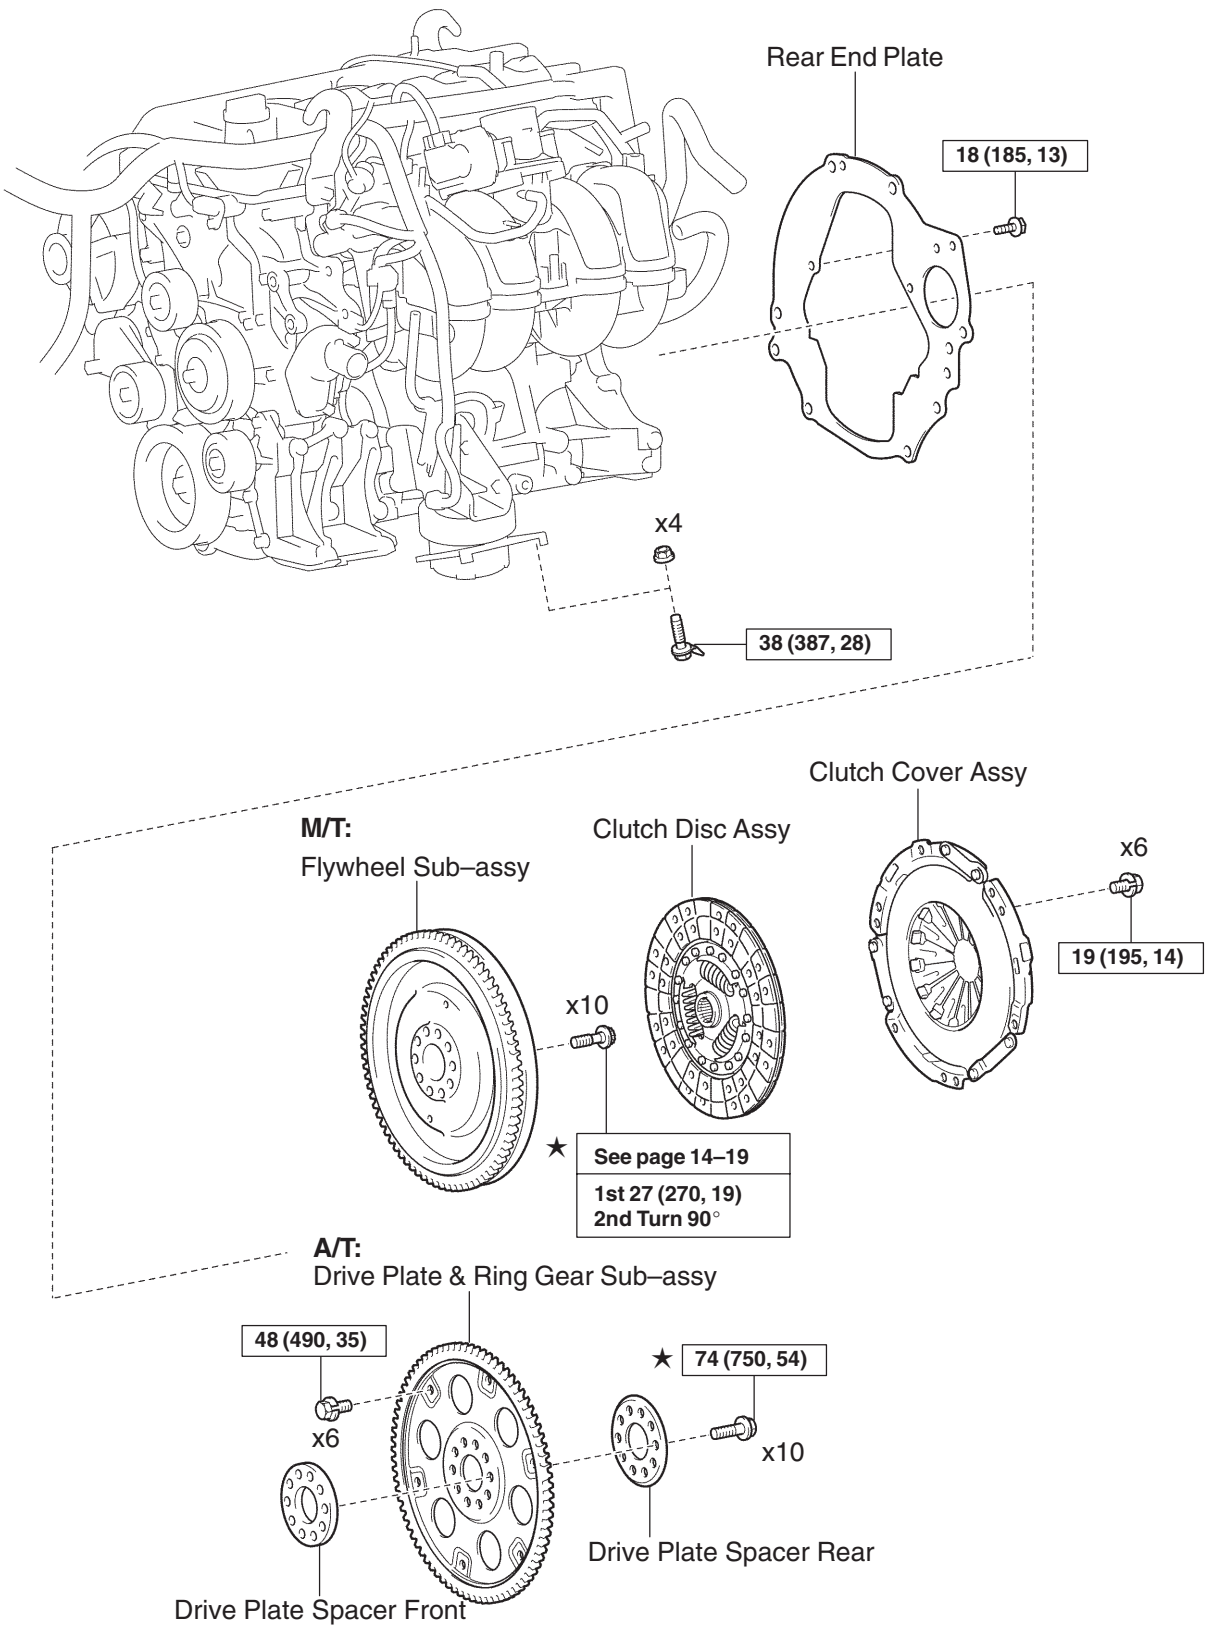

N·m (kgf·cm, ft·lbf) : Specified torque
★ Precoated part

P


G35167

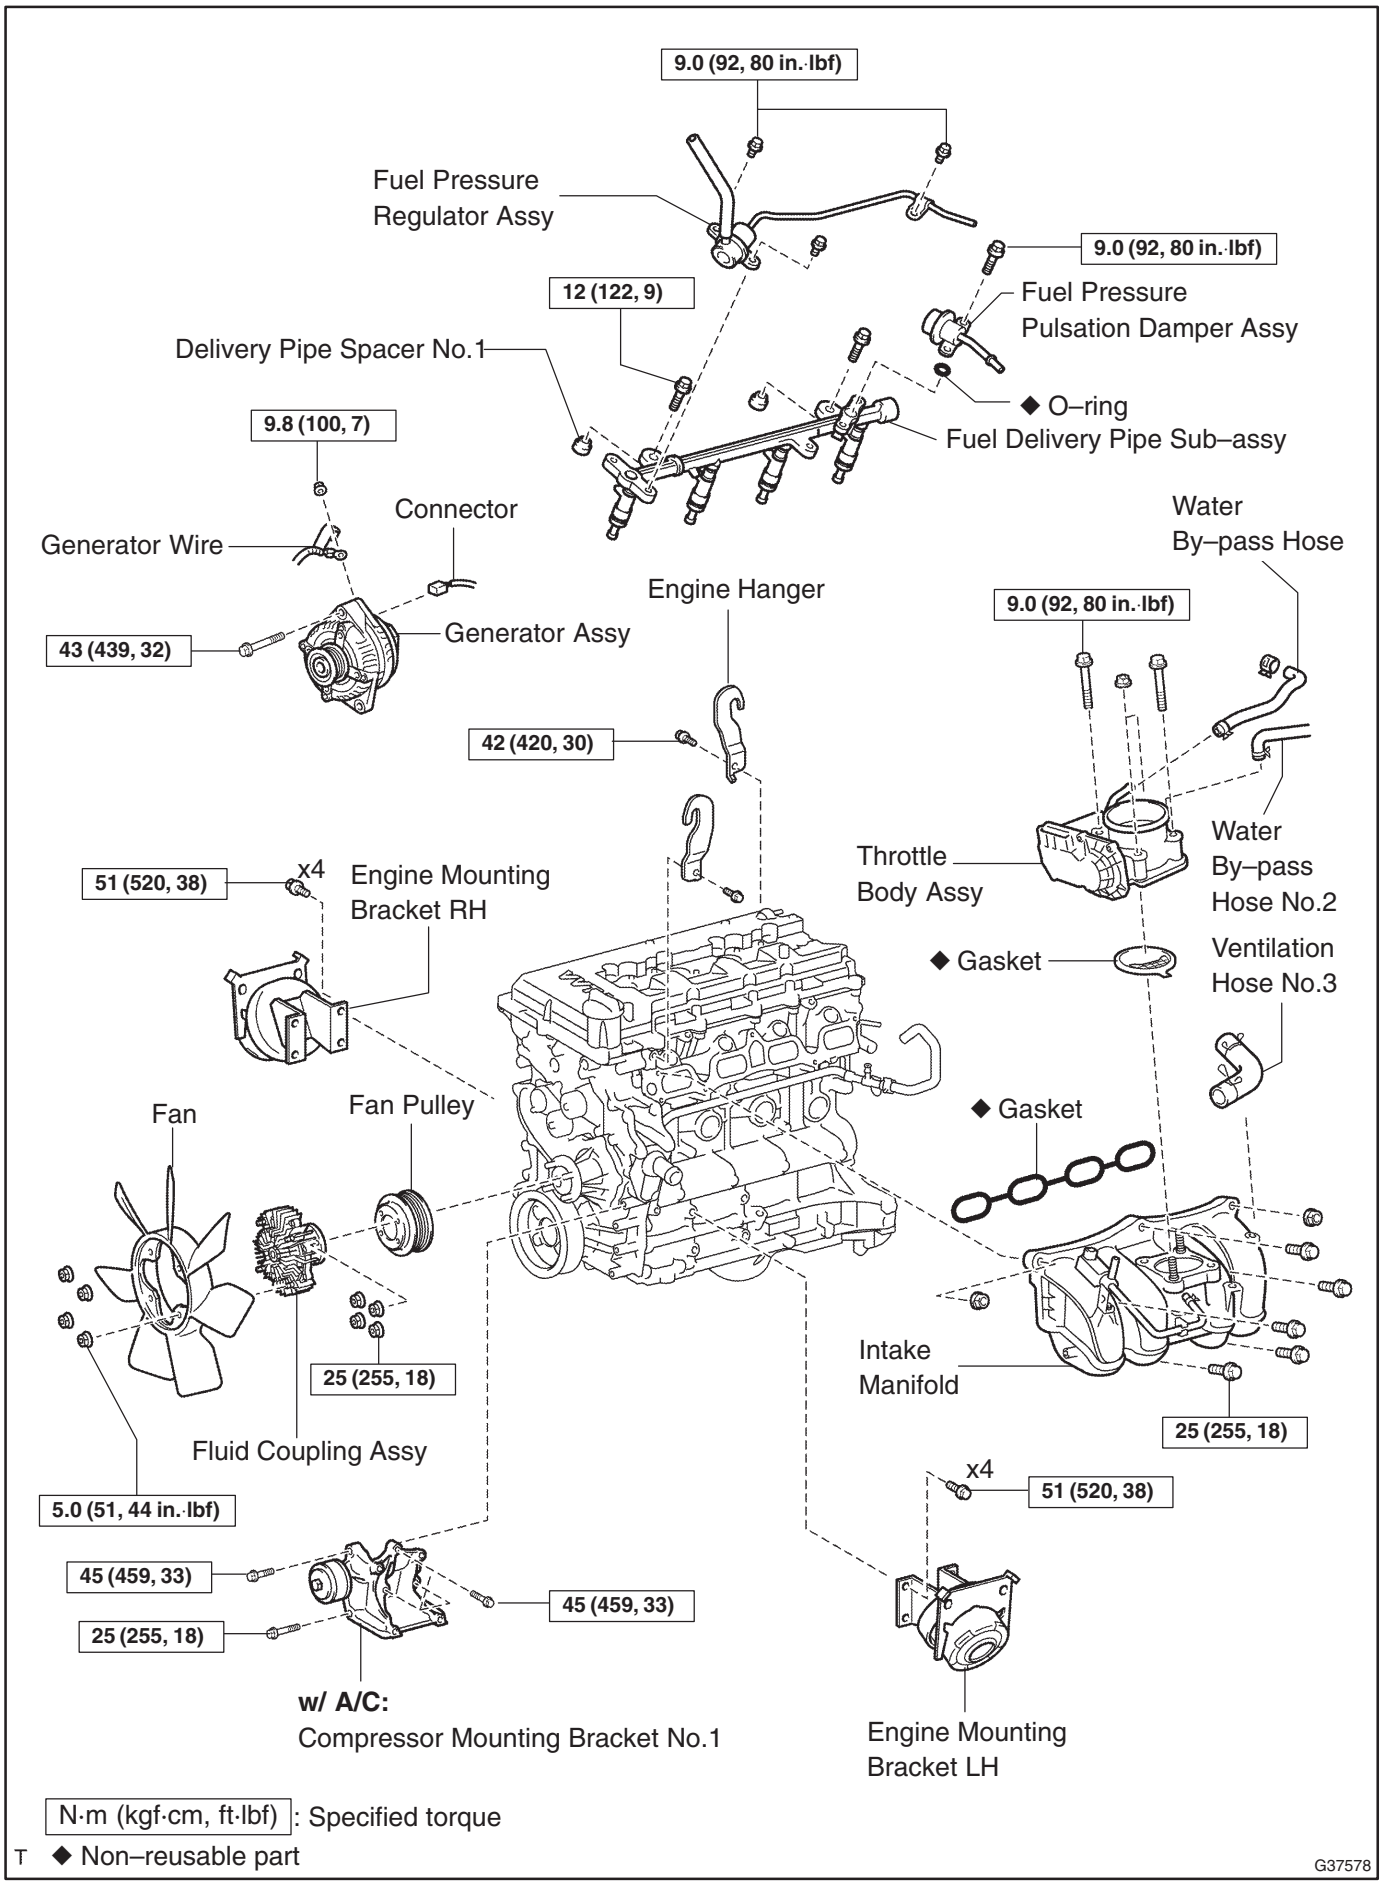

N·m (kgf·cm, ft·lbf): Specified torque

T ◆ Non–reusable part

G37578

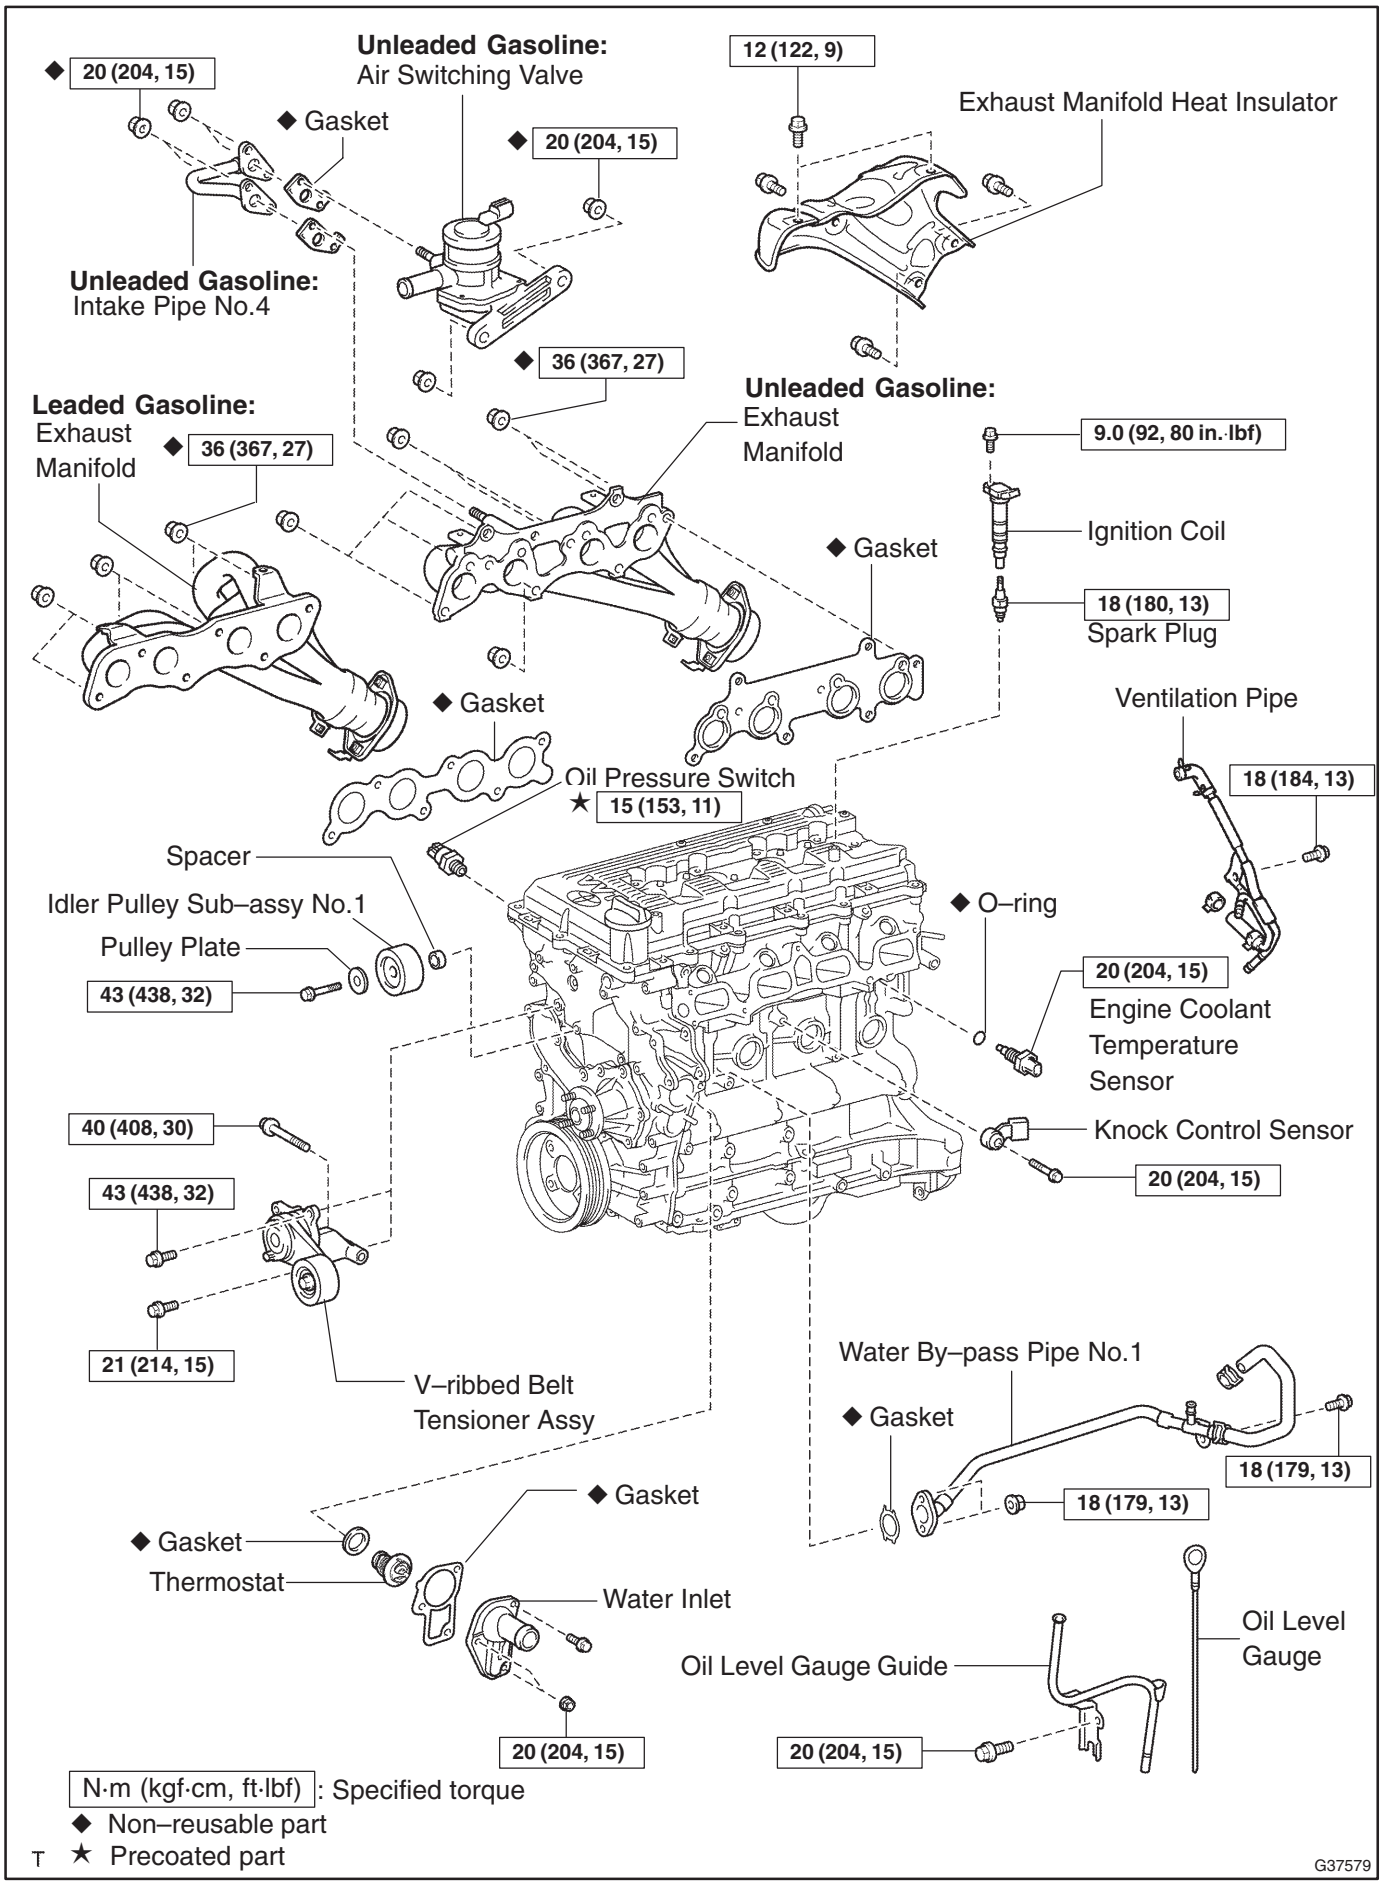
◆ 20 (204, 15)
Unleaded Gasoline:
Air Switching Valve
◆ Gasket
◆ 20 (204, 15)
12 (122, 9)
Exhaust Manifold Heat Insulator
Unleaded Gasoline:
Intake Pipe No.4
◆ 36 (367, 27)
Unleaded Gasoline:
Exhaust Manifold
Leaded Gasoline:
Exhaust Manifold
◆ 36 (367, 27)
9.0 (92, 80 in.·lbf)
Ignition Coil
◆ Gasket
18 (180, 13)
Spark Plug
◆ Gasket
Ventilation Pipe
Oil Pressure Switch
★ 15 (153, 11)
18 (184, 13)
Spacer
Idler Pulley Sub–assy No.1
◆ O–ring
Pulley Plate
43 (438, 32)
20 (204, 15)
Engine Coolant Temperature Sensor
40 (408, 30)
Knock Control Sensor
43 (438, 32)
20 (204, 15)
21 (214, 15)
V–ribbed Belt Tensioner Assy
Water By–pass Pipe No.1
◆ Gasket
18 (179, 13)
18 (179, 13)
◆ Gasket
◆ Gasket
Thermostat
Water Inlet
Oil Level Gauge
Oil Level Gauge Guide
20 (204, 15)
20 (204, 15)
N·m (kgf·cm, ft·lbf): Specified torque
◆ Non–reusable part
★ Precoated part
G37579