


CYLINDER HEAD GASKET (1KD–FTV)(From August, 2004)

1420S–01

COMPONENTS

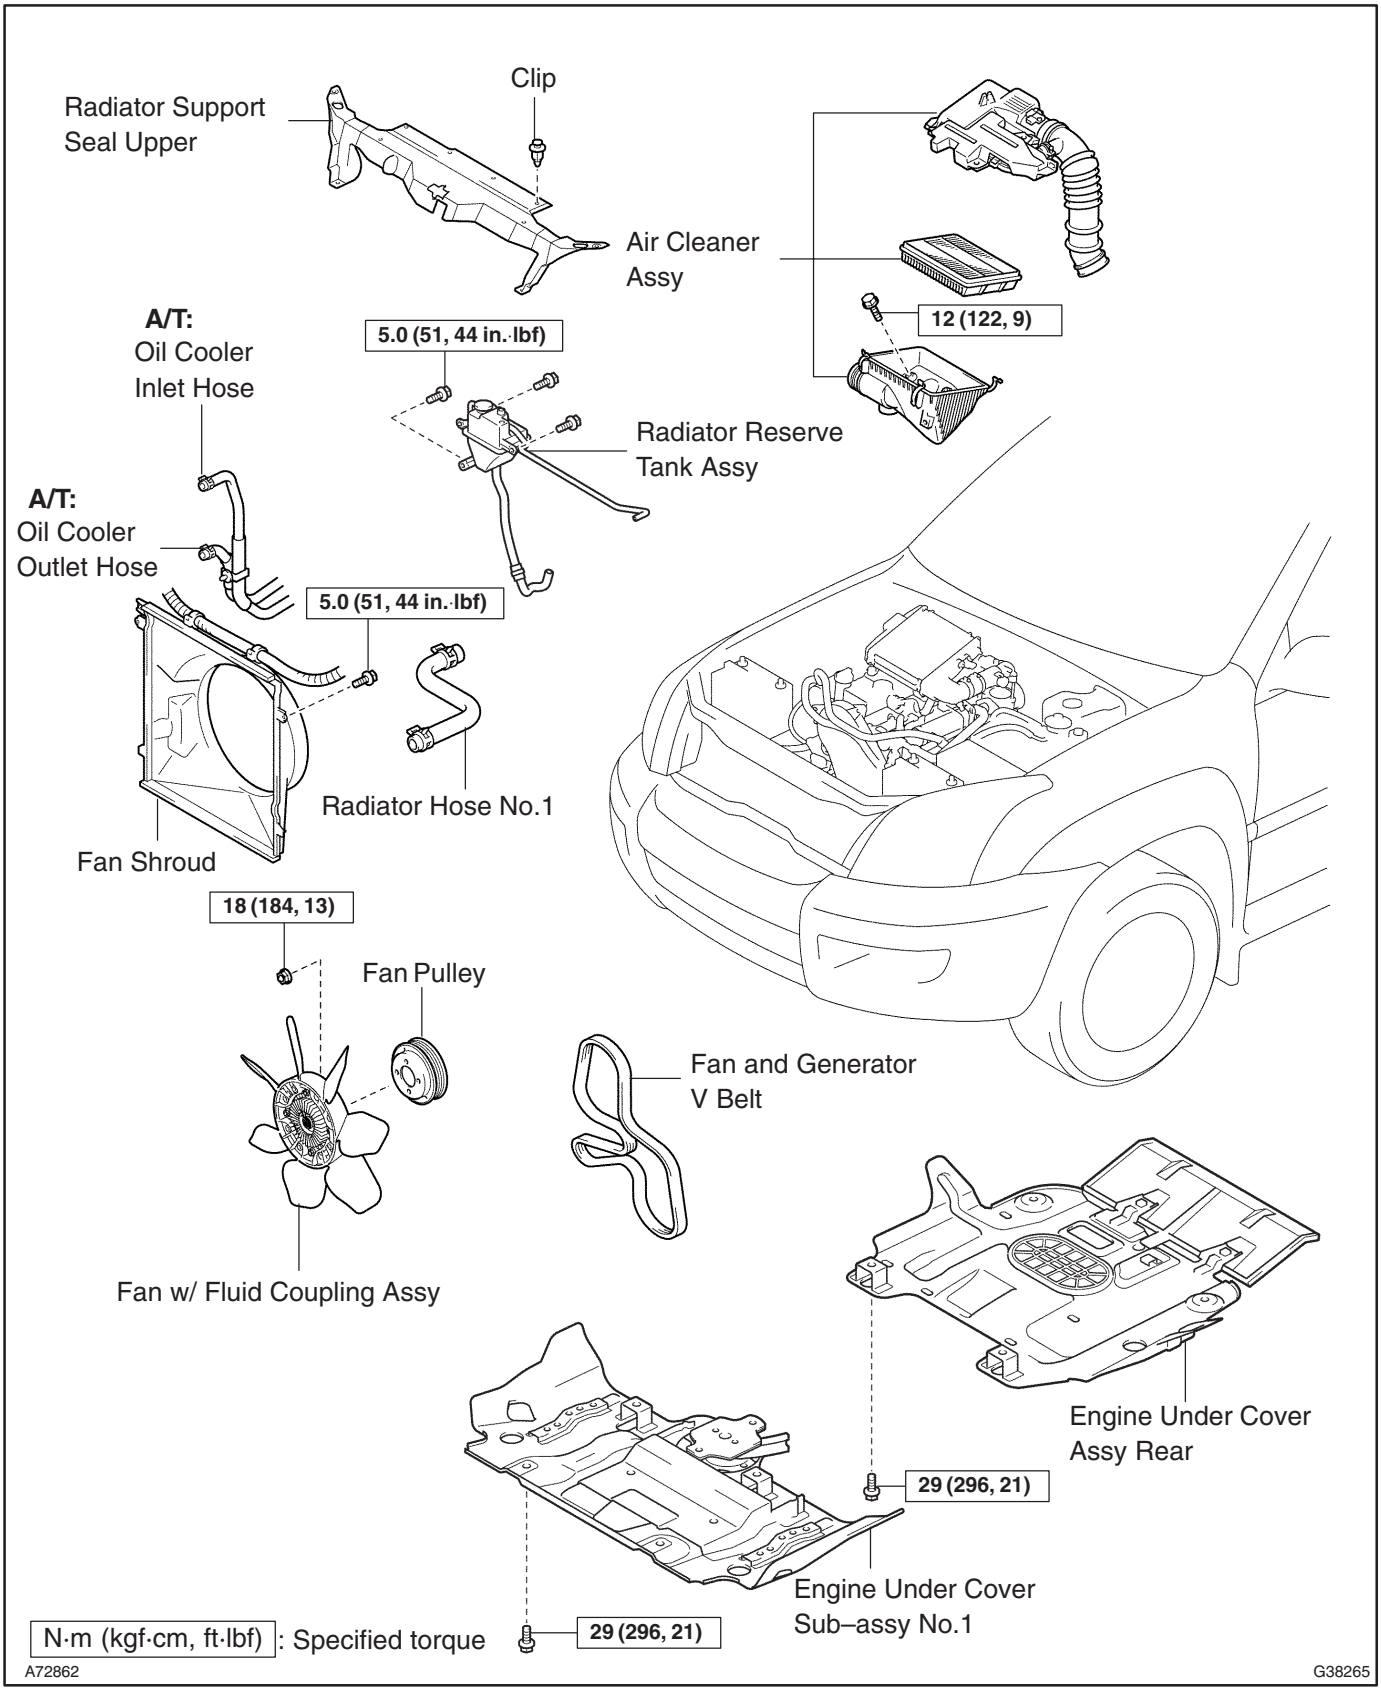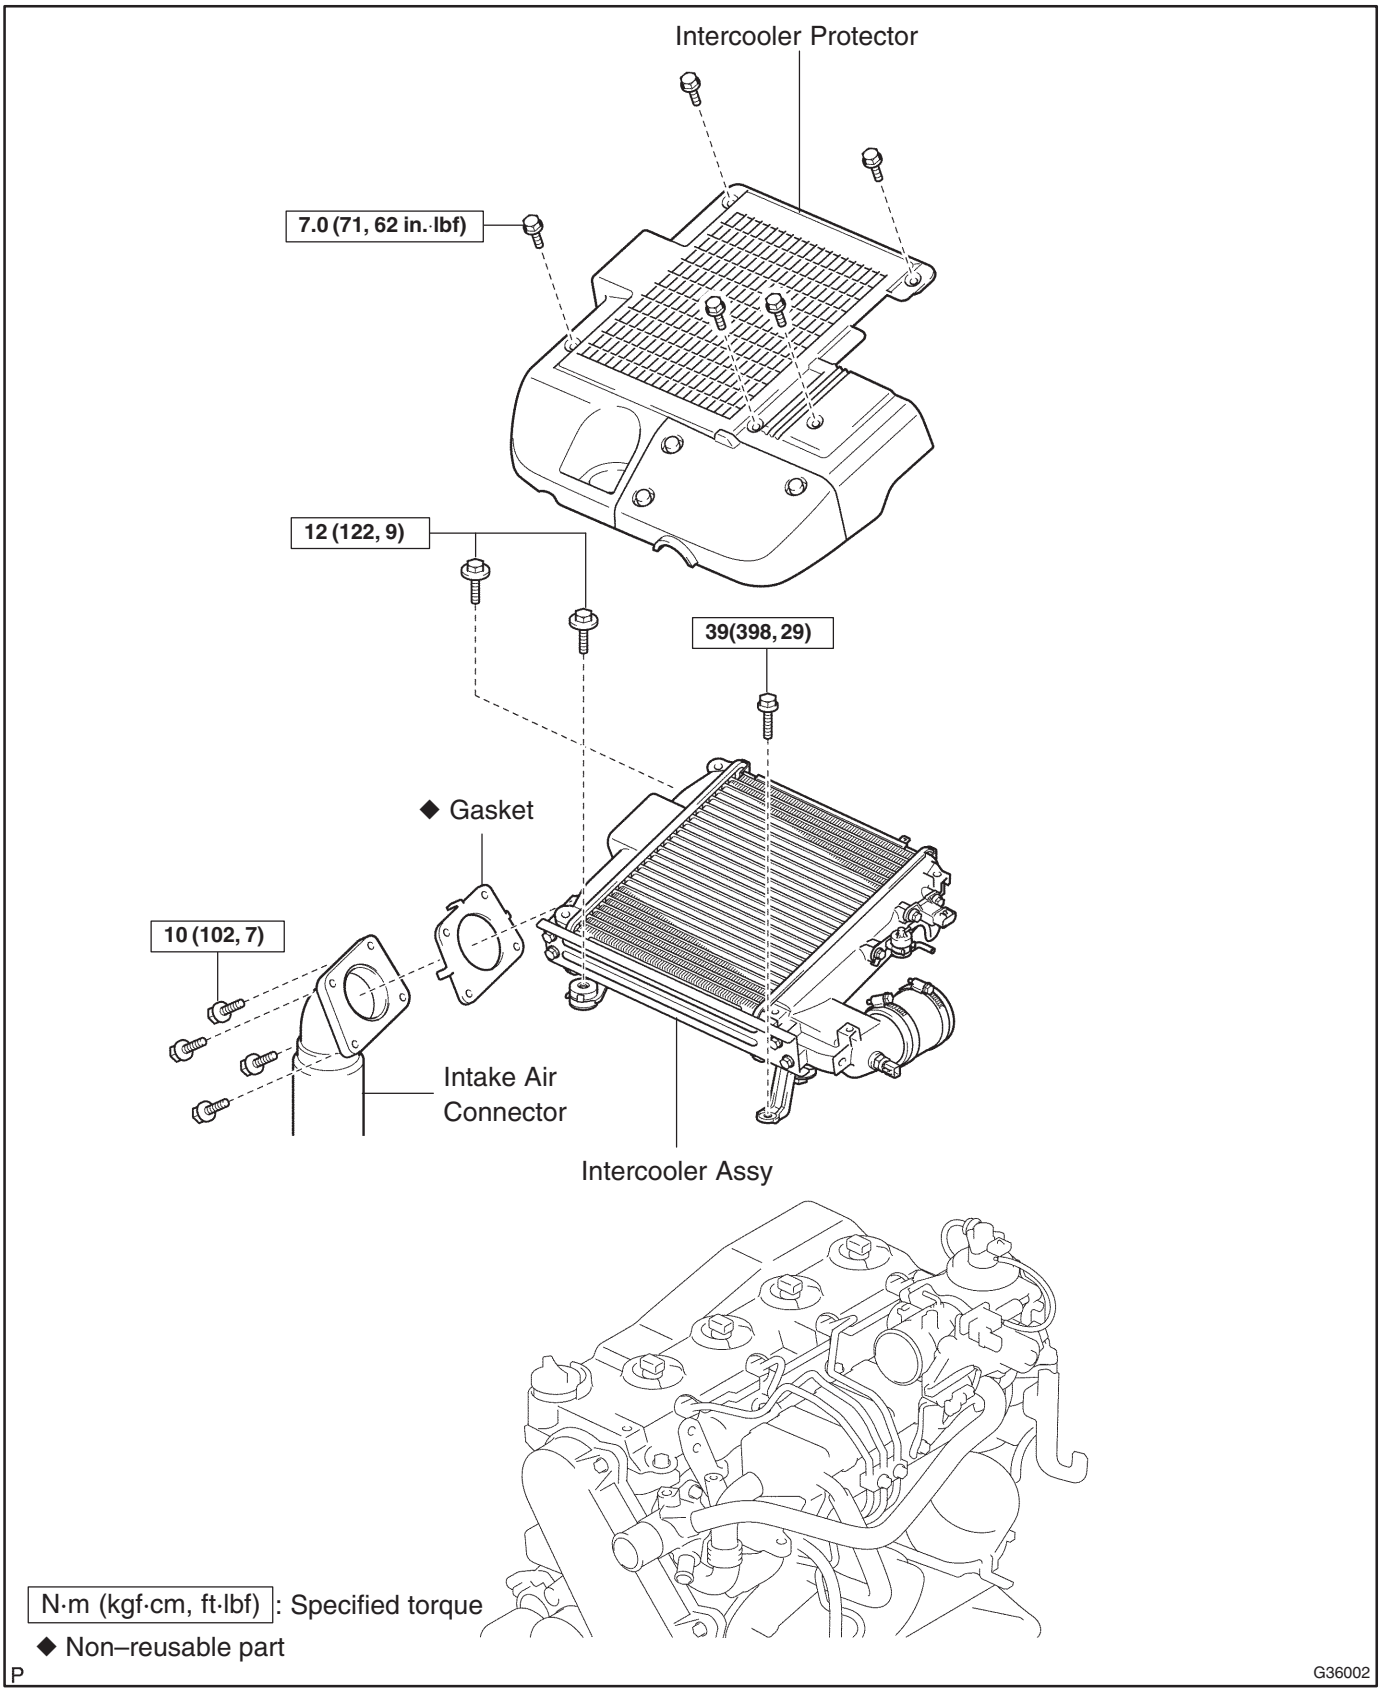


Intercooler Protector
7.0 (71, 62 in.·lbf)
12 (122, 9)
39(398, 29)
◆ Gasket
10 (102, 7)
Intake Air Connector
Intercooler Assy
N·m (kgf·cm, ft·lbf): Specified torque
◆ Non–reusable part
P
G36002

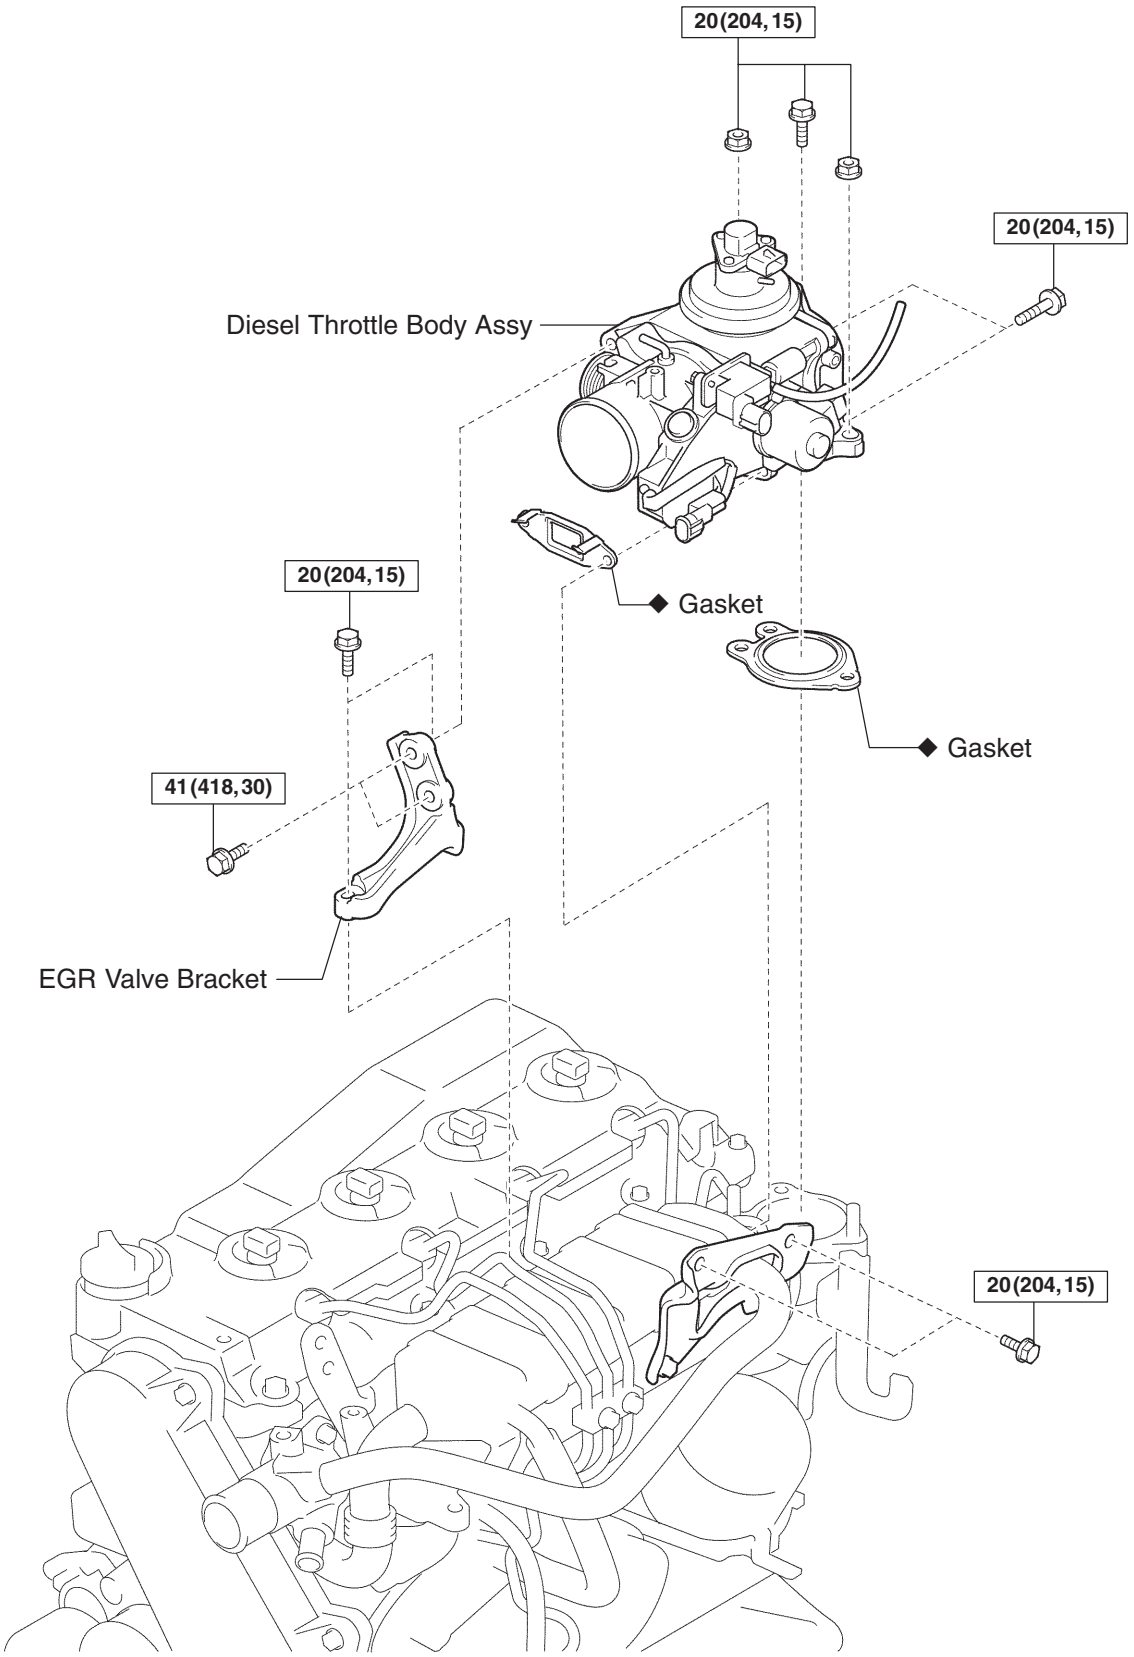


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

P A76774

G38264

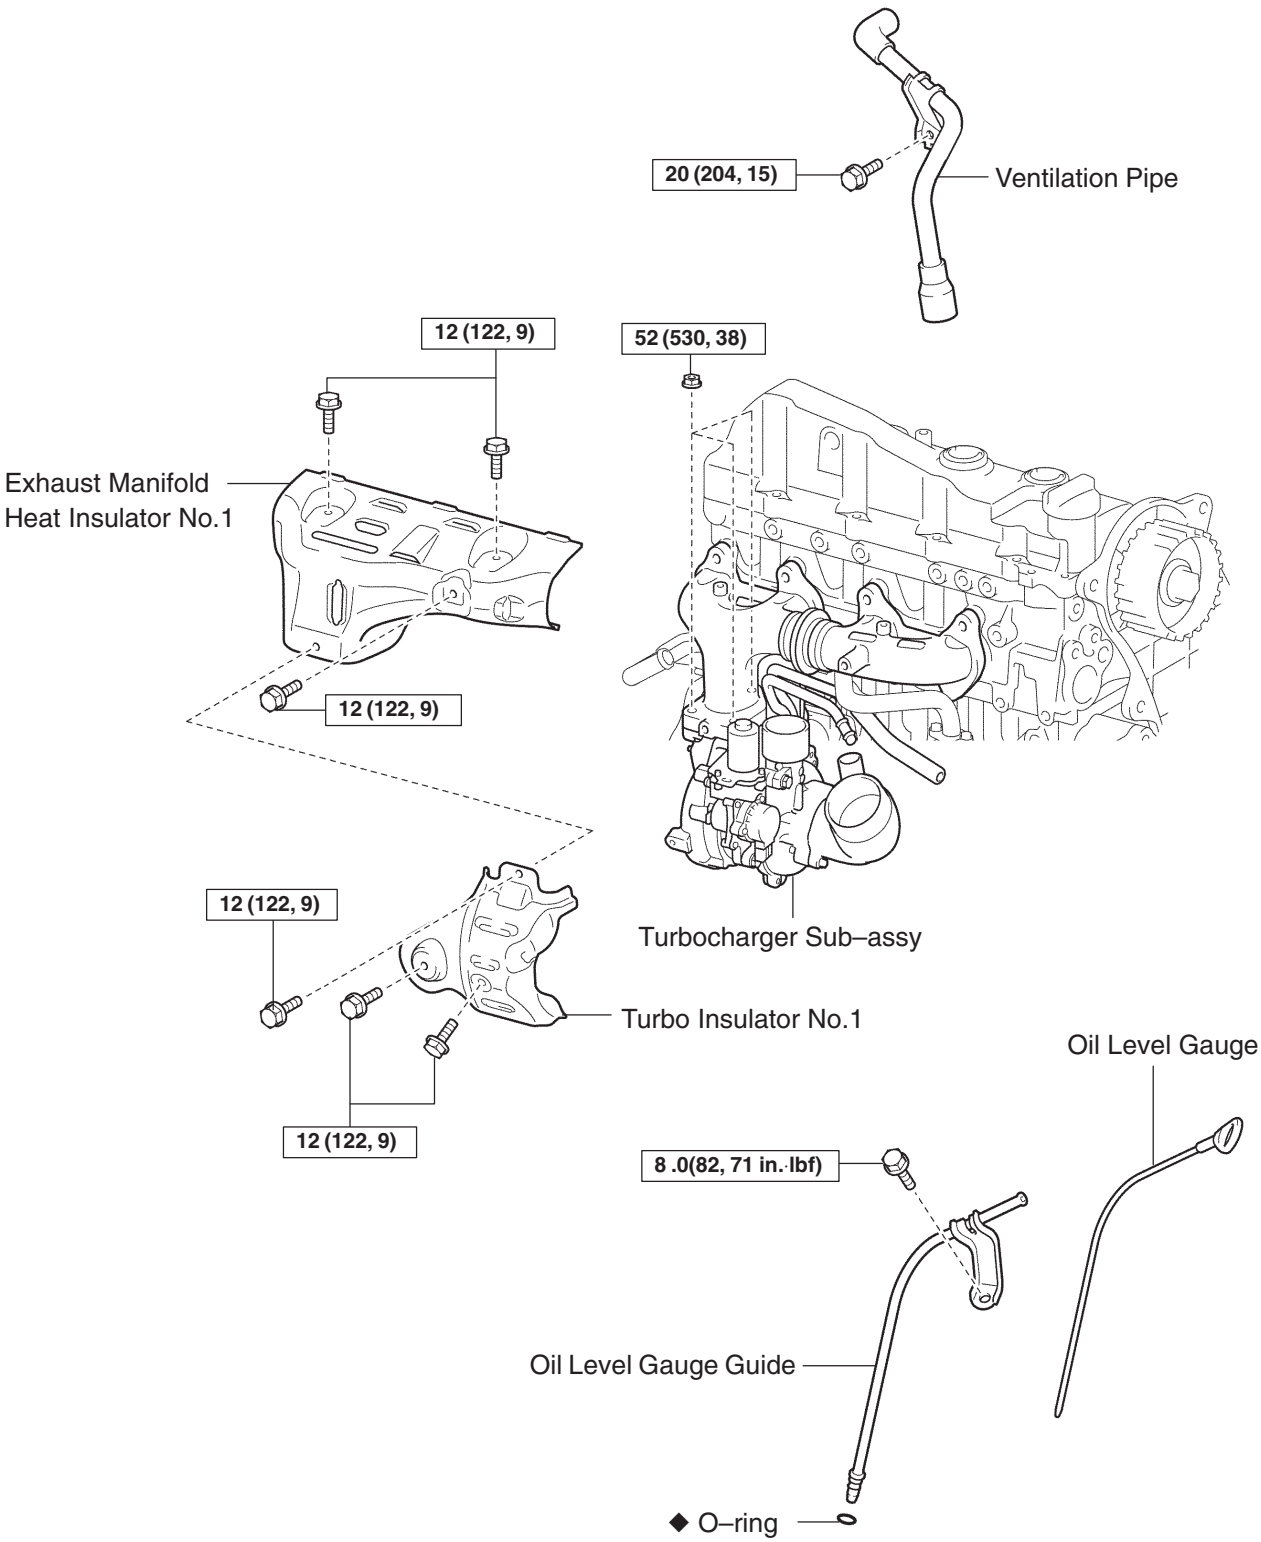


N·m (kgf·cm, ft·lbf): Specified torque

◆ Non–reusable part


P A77177


G38266

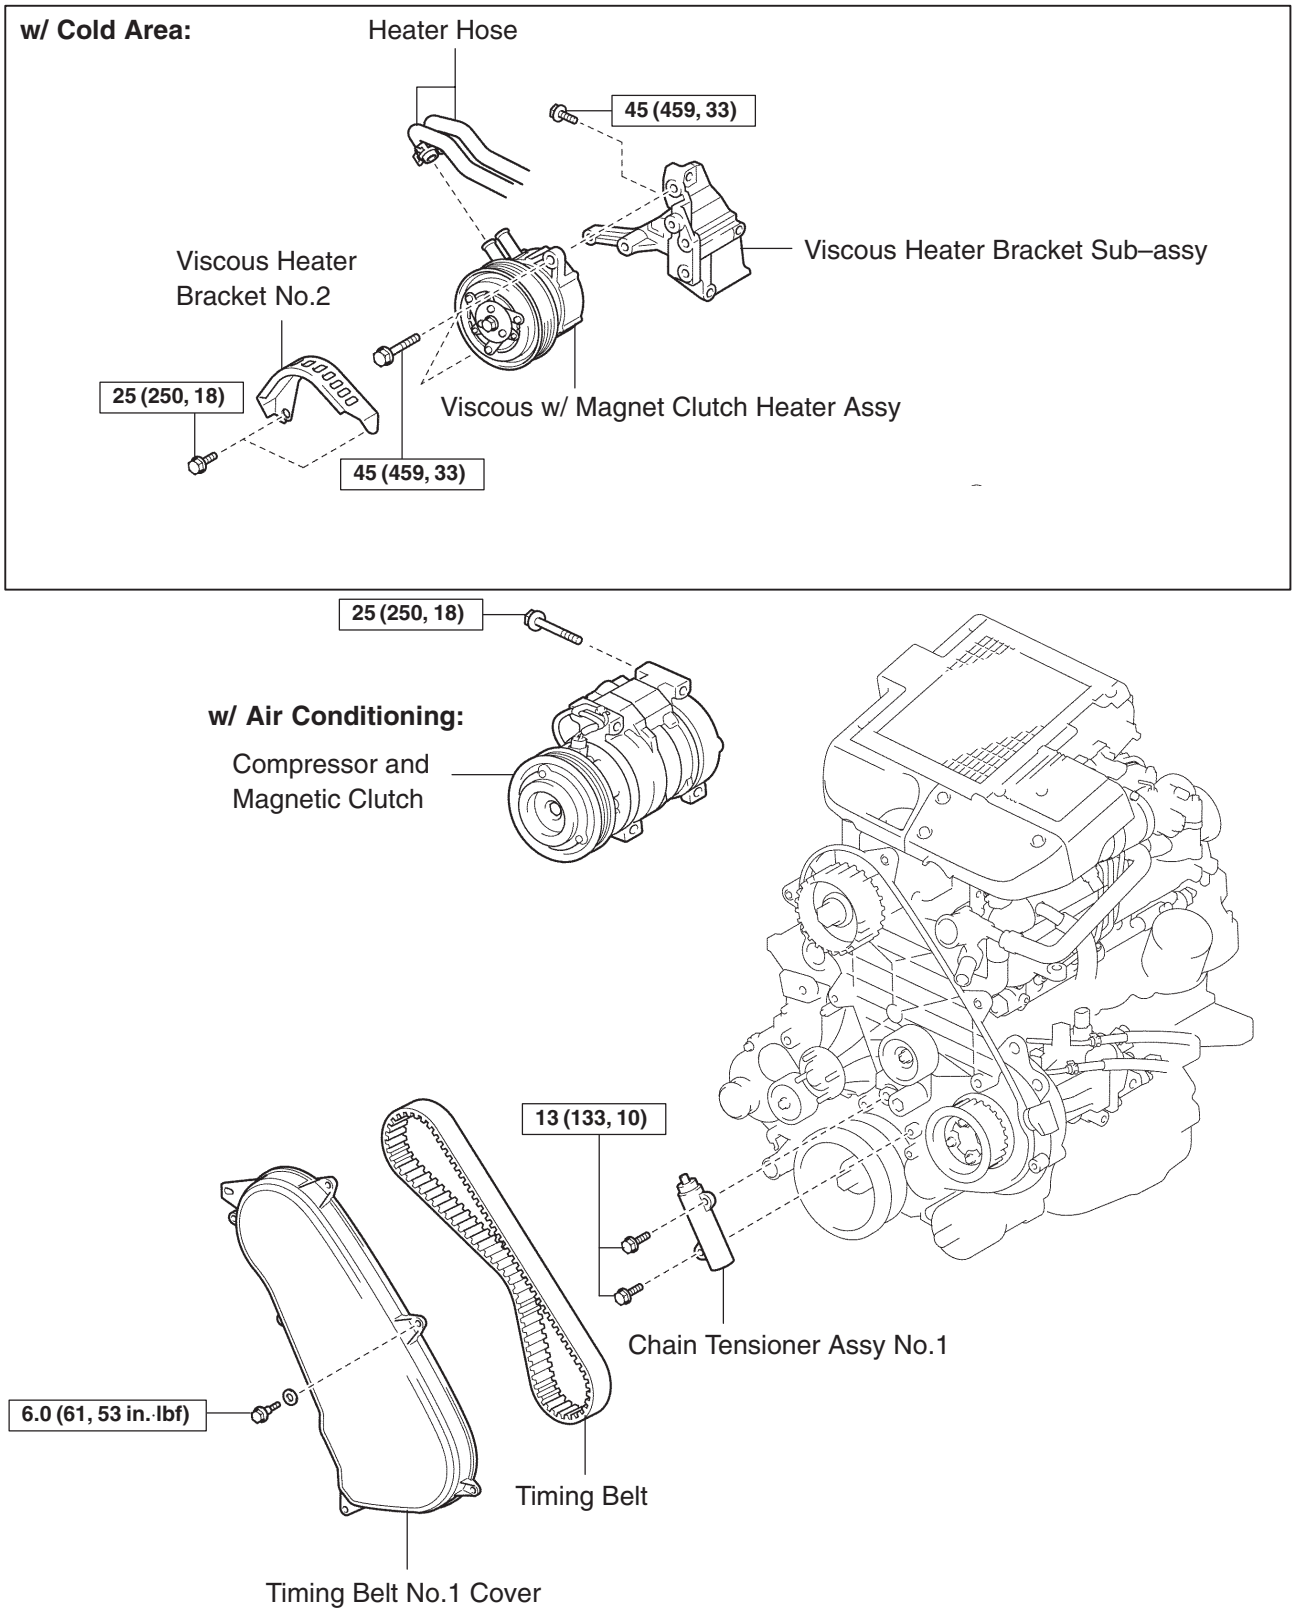

P N·m (kgf·cm, ft·lbf): Specified torque

A72865

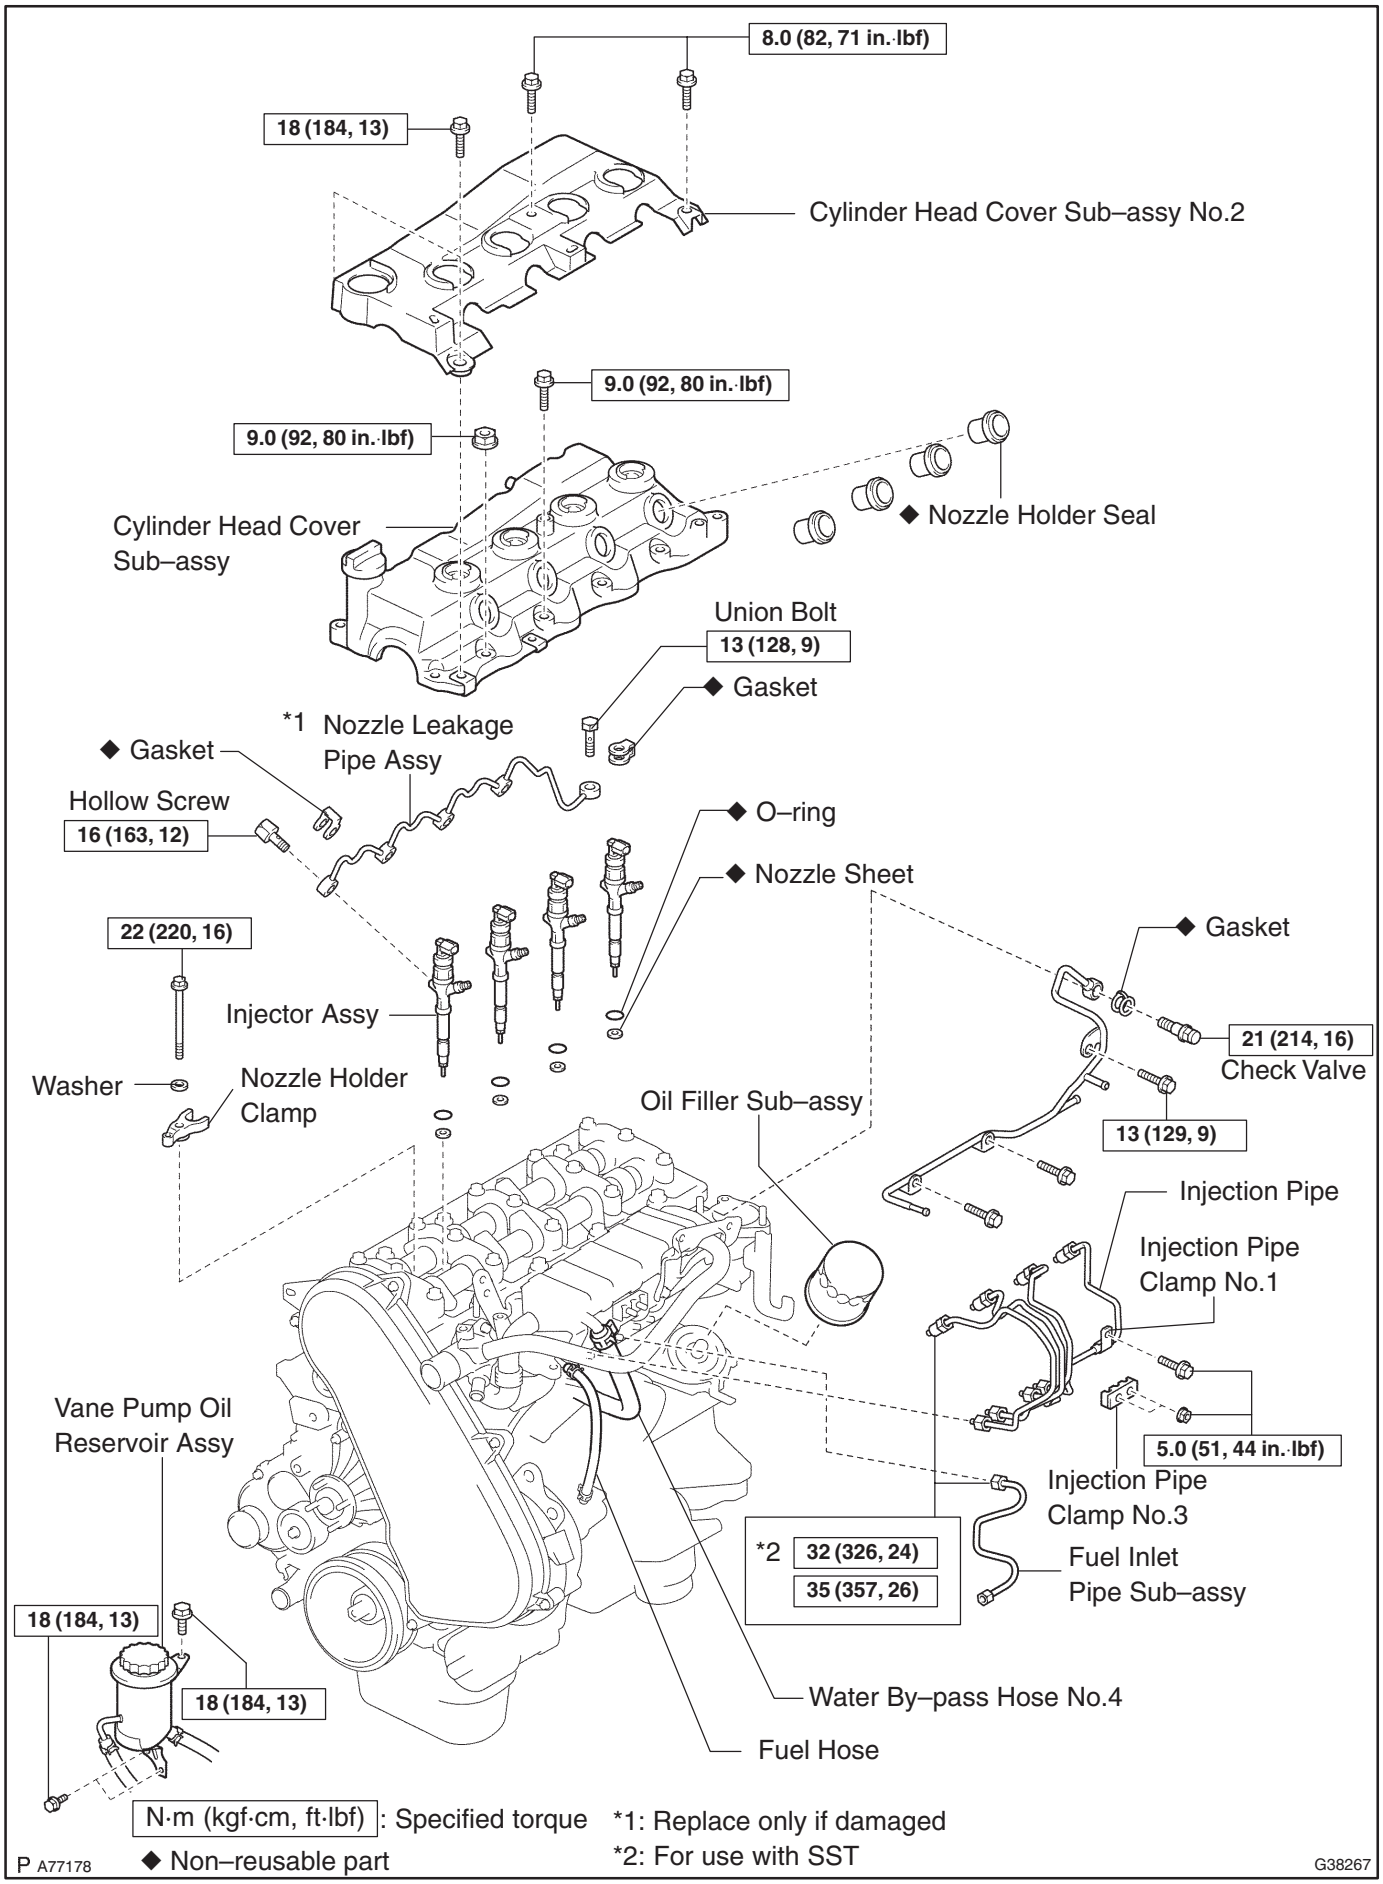
8.0 (82, 71 in.·lbf)
18 (184, 13)
Cylinder Head Cover Sub–assy No.2
9.0 (92, 80 in.·lbf)
9.0 (92, 80 in.·lbf)
Cylinder Head Cover Sub–assy
◆ Nozzle Holder Seal
Union Bolt
13 (128, 9)
◆ Gasket
*1 Nozzle Leakage Pipe Assy
◆ Gasket
Hollow Screw
16 (163, 12)
◆ O–ring
◆ Nozzle Sheet
22 (220, 16)
Injector Assy
◆ Gasket
21 (214, 16)
Check Valve
Washer
Nozzle Holder Clamp
Oil Filler Sub–assy
13 (129, 9)
Injection Pipe
Injection Pipe Clamp No.1
Vane Pump Oil Reservoir Assy
5.0 (51, 44 in.·lbf)
Injection Pipe Clamp No.3
*2 32 (326, 24) 35 (357, 26)
Fuel Inlet Pipe Sub–assy
18 (184, 13)
18 (184, 13)
Water By–pass Hose No.4
Fuel Hose
N·m (kgf·cm, ft·lbf): Specified torque
◆ Non–reusable part
*1: Replace only if damaged
*2: For use with SST
P A77178
G38267

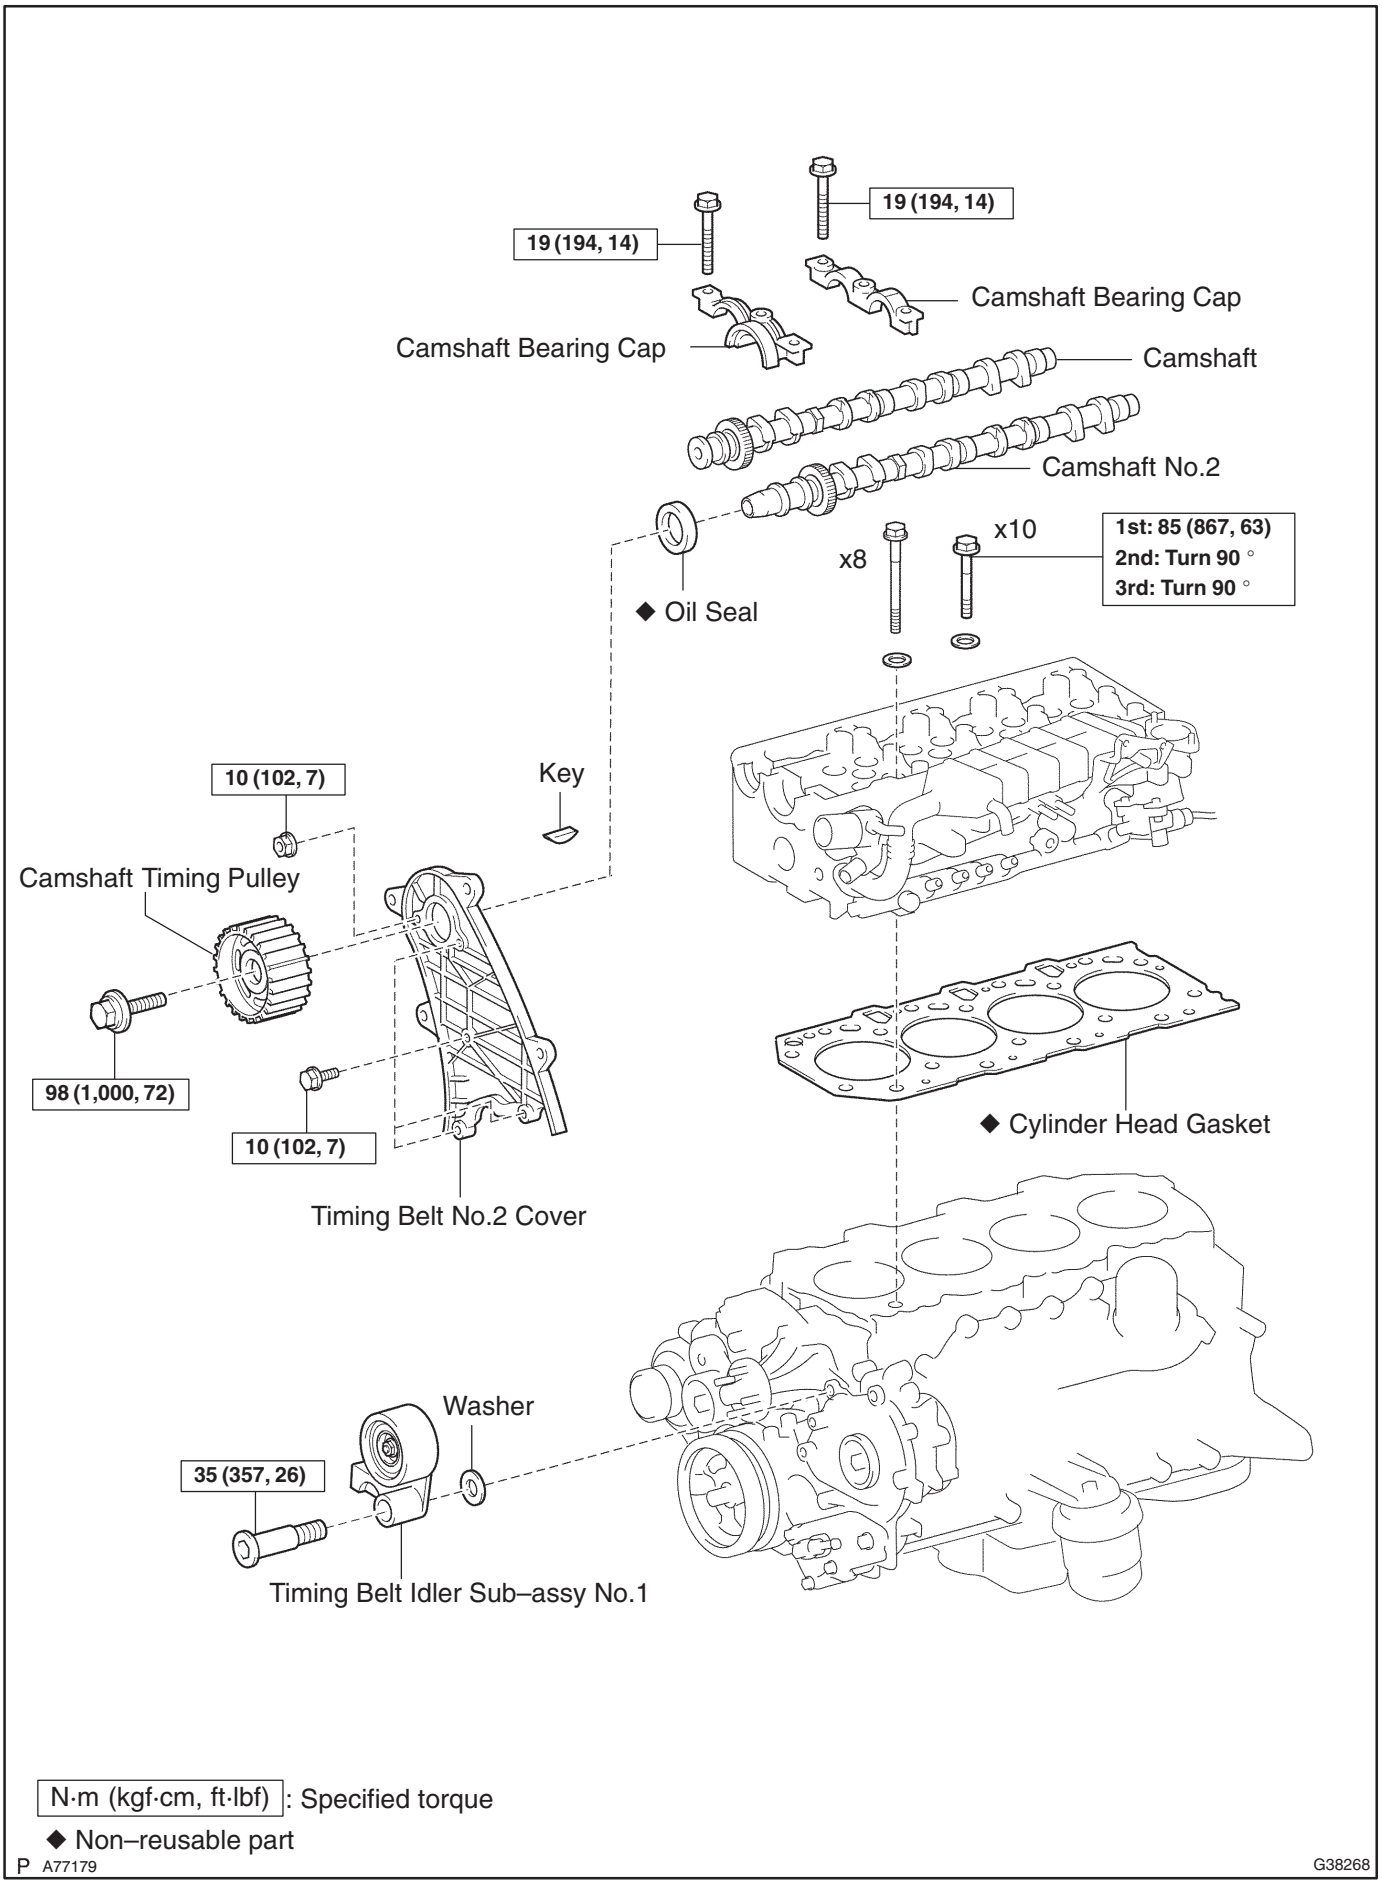

N·m (kgf·cm, ft·lbf): Specified torque

◆ Non–reusable part

P A77179

G38268