15088–04

Removal & Installation and Disassembly & Reassembly

1. REMOVE AIR FUEL RATIO SENSOR (UNLEADED GASOLINE) (SEE PAGE 12–10)
SST 09224–00010


2. REMOVE OXYGEN SENSOR (UNLEADED GASOLINE) (SEE PAGE 12–11)
SST 09224–00010

3. REMOVE EXHAUST PIPE DAMPER NO.2 (M/T TRANSMISSION, 3 DOOR BODY TYPE)
(a) Remove the 2 bolts and exhaust pipe damper No.2.

4. REMOVE EXHAUST PIPE ASSY TAIL
(a) Remove the 2 bolts, exhaust pipe support and exhaust pipe assy tail.

5. REMOVE EXHAUST PIPE ASSY CENTER
(a) Remove the 2 bolts, exhaust pipe support and exhaust pipe assy center.

6. REMOVE EXHAUST PIPE ASSY FRONT
(a) Remove the 2 bolts, exhaust pipe support and exhaust pipe assy front.

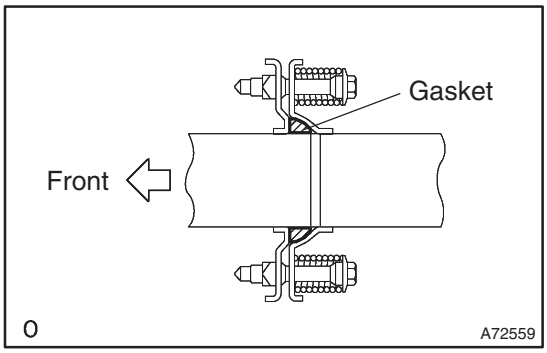

7. INSTALL EXHAUST PIPE ASSY FRONT
(a) Using vernier calipers, measure the free length of the compression spring.
Minimum length: 40.5 mm (1.5945 in.)

HINT:
If the free length is not as specified, replace the compression spring.

(b) Install a new gasket on the exhaust pipe assy front.
(c) Install the exhaust pipe assy front with the 2 bolts and 2 springs.
Torque: 43 N·m (438 kgf·cm, 32 ft·lbf)

8. INSTALL EXHAUST PIPE ASSY CENTER
(a) Install a new gasket on the exhaust pipe assy front.
(b) Install the exhaust pipe assy center with the 2 bolts.
Torque: 48 N·m (489 kgf·cm, 35 ft·lbf)

9. INSTALL EXHAUST PIPE ASSY TAIL
(a) Install a new gasket on the exhaust pipe assy center.
(b) Install the exhaust pipe assy tail with the 2 bolts.
Torque: 48 N·m (489 kgf·cm, 35 ft·lbf)

10. INSTALL EXHAUST PIPE DAMPER NO.2 (M/T TRANSMISSION, 3 DOOR BODY TYPE)
(a) Install the exhaust pipe damper No.2 with the 2 bolts.
Torque: 19 N·m (194 kgf·cm, 14 ft·lbf)

11. INSTALL OXYGEN SENSOR (UNLEADED GASOLINE) (SEE PAGE 12–11)
SST 09224–00010

12. INSTALL AIR FUEL RATIO SENSOR (UNLEADED GASOLINE) (SEE PAGE 12–10)
SST 09224–00010

13. CHECK FOR EXHAUST GAS LEAKS