

TIMING CHAIN COVER SUB–ASSY (2TR–FE)

COMPONENTS

170NE–01

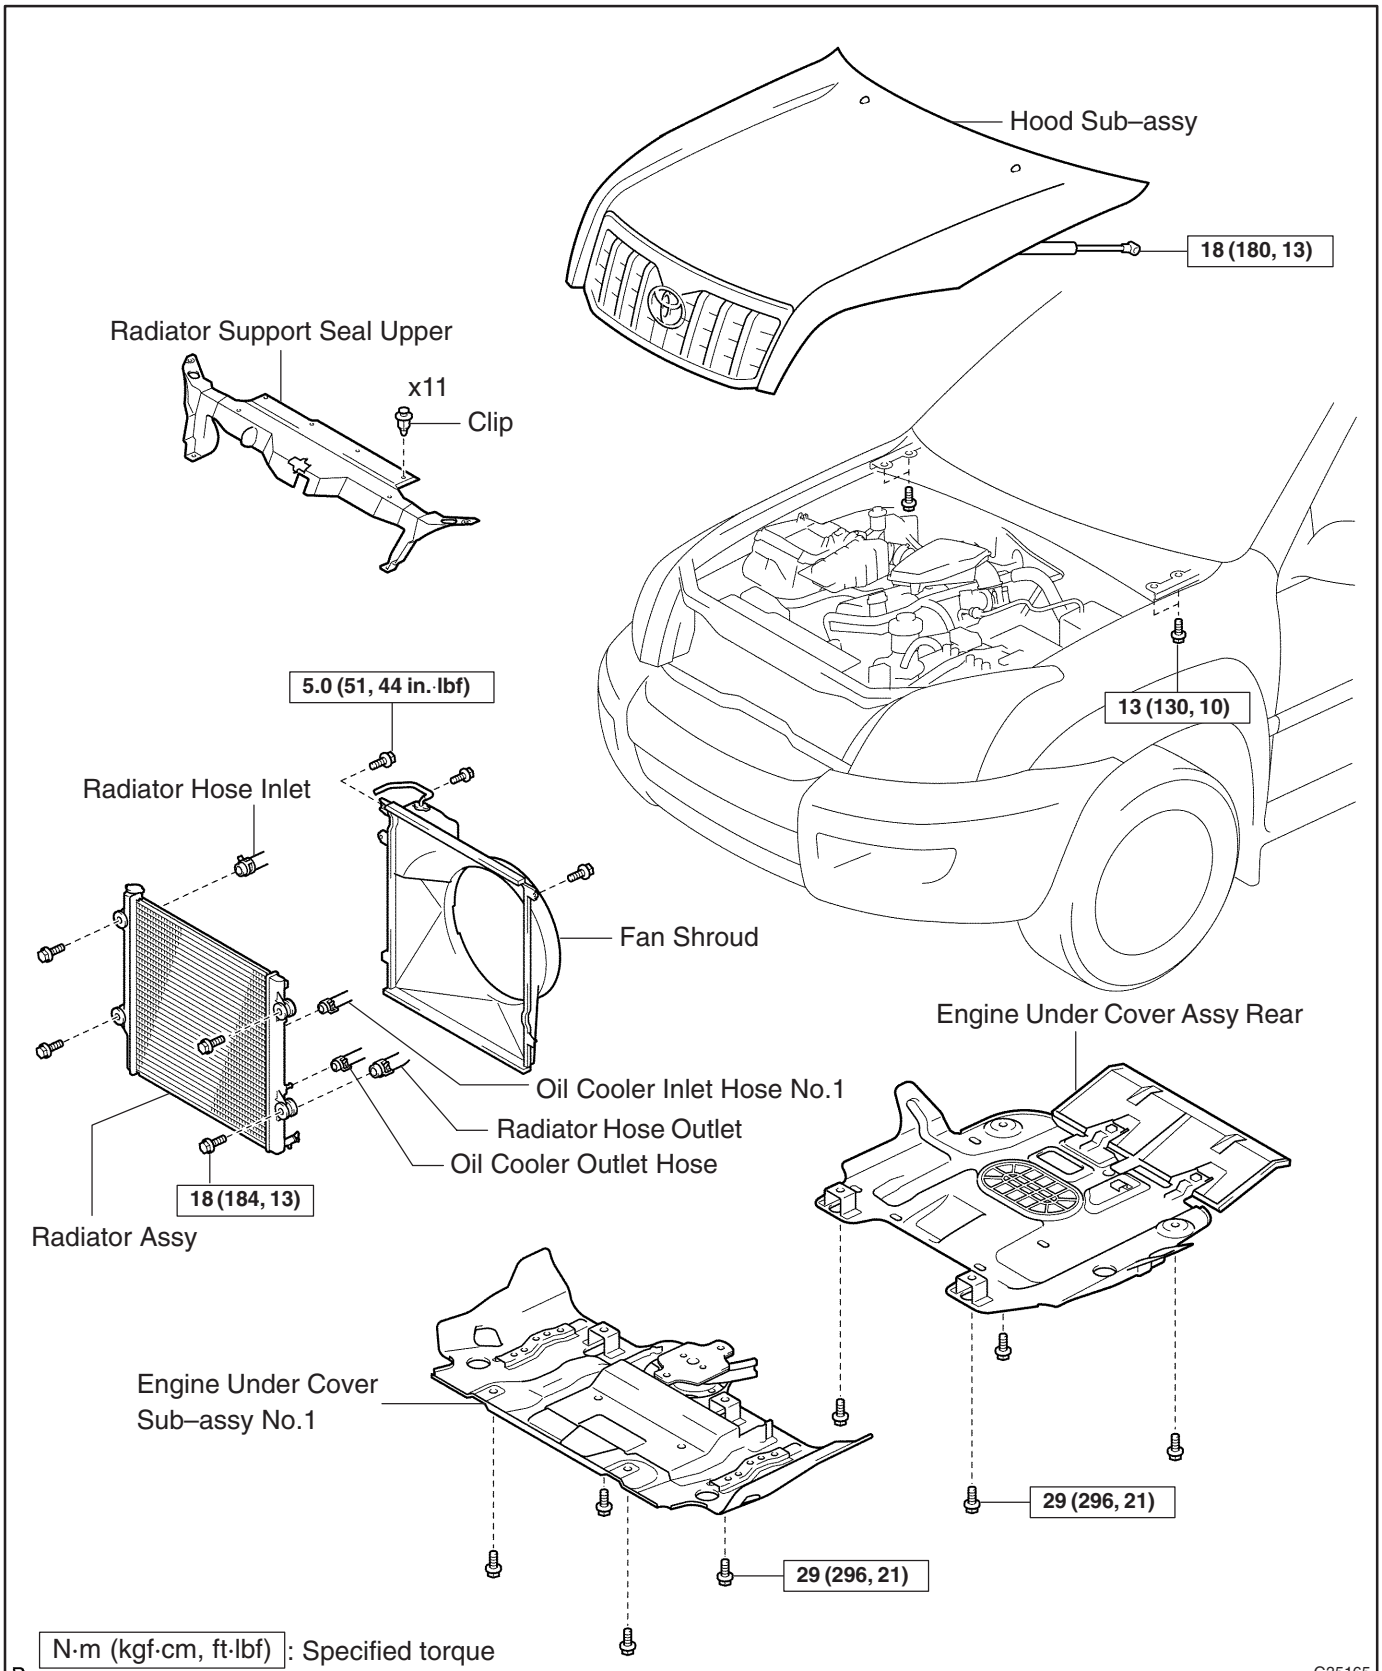

17

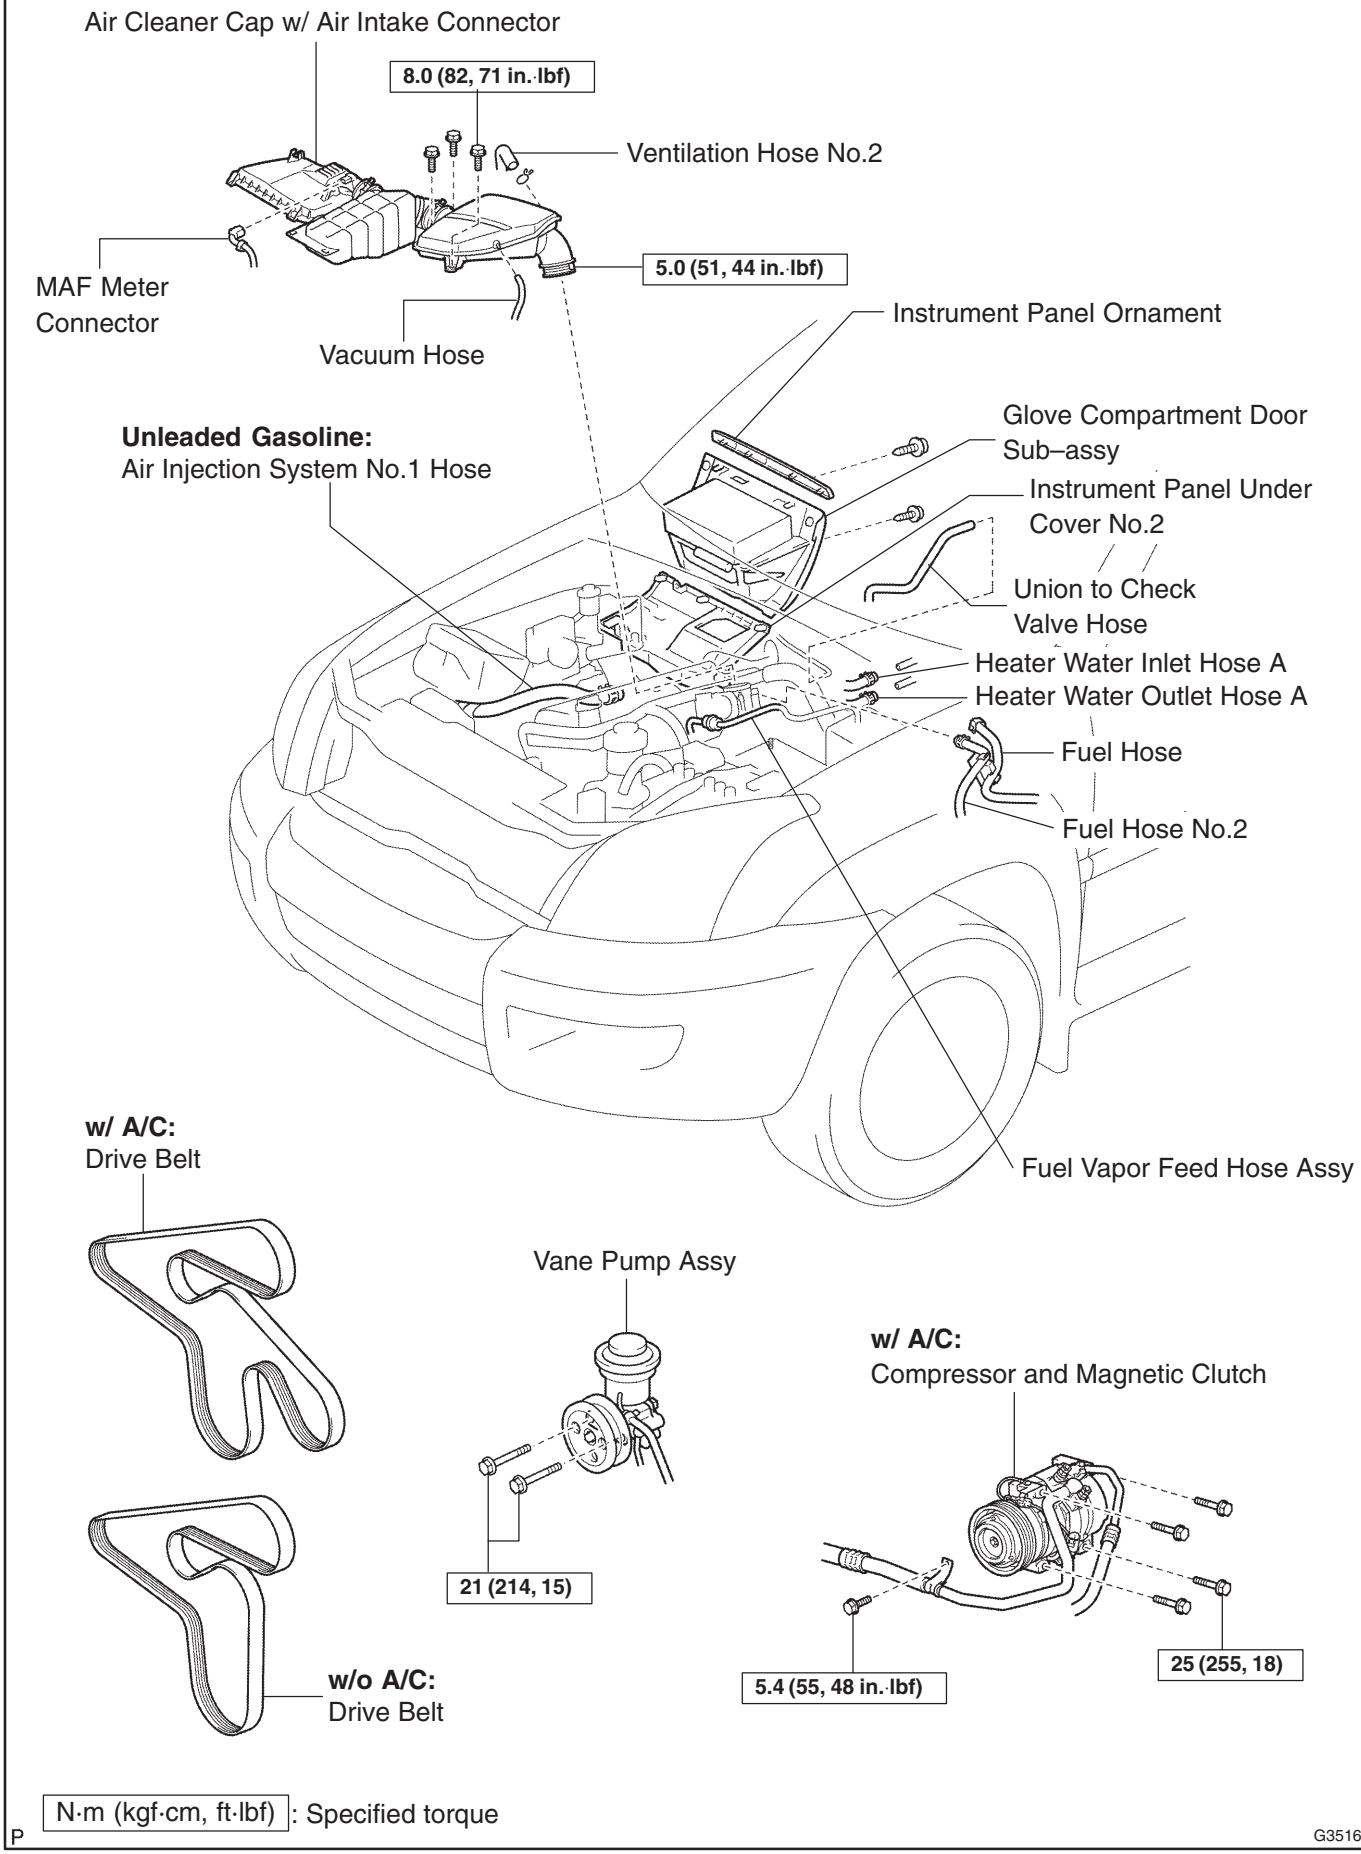


N·m (kgf·cm, ft·lbf): Specified torque

P

G35166

17

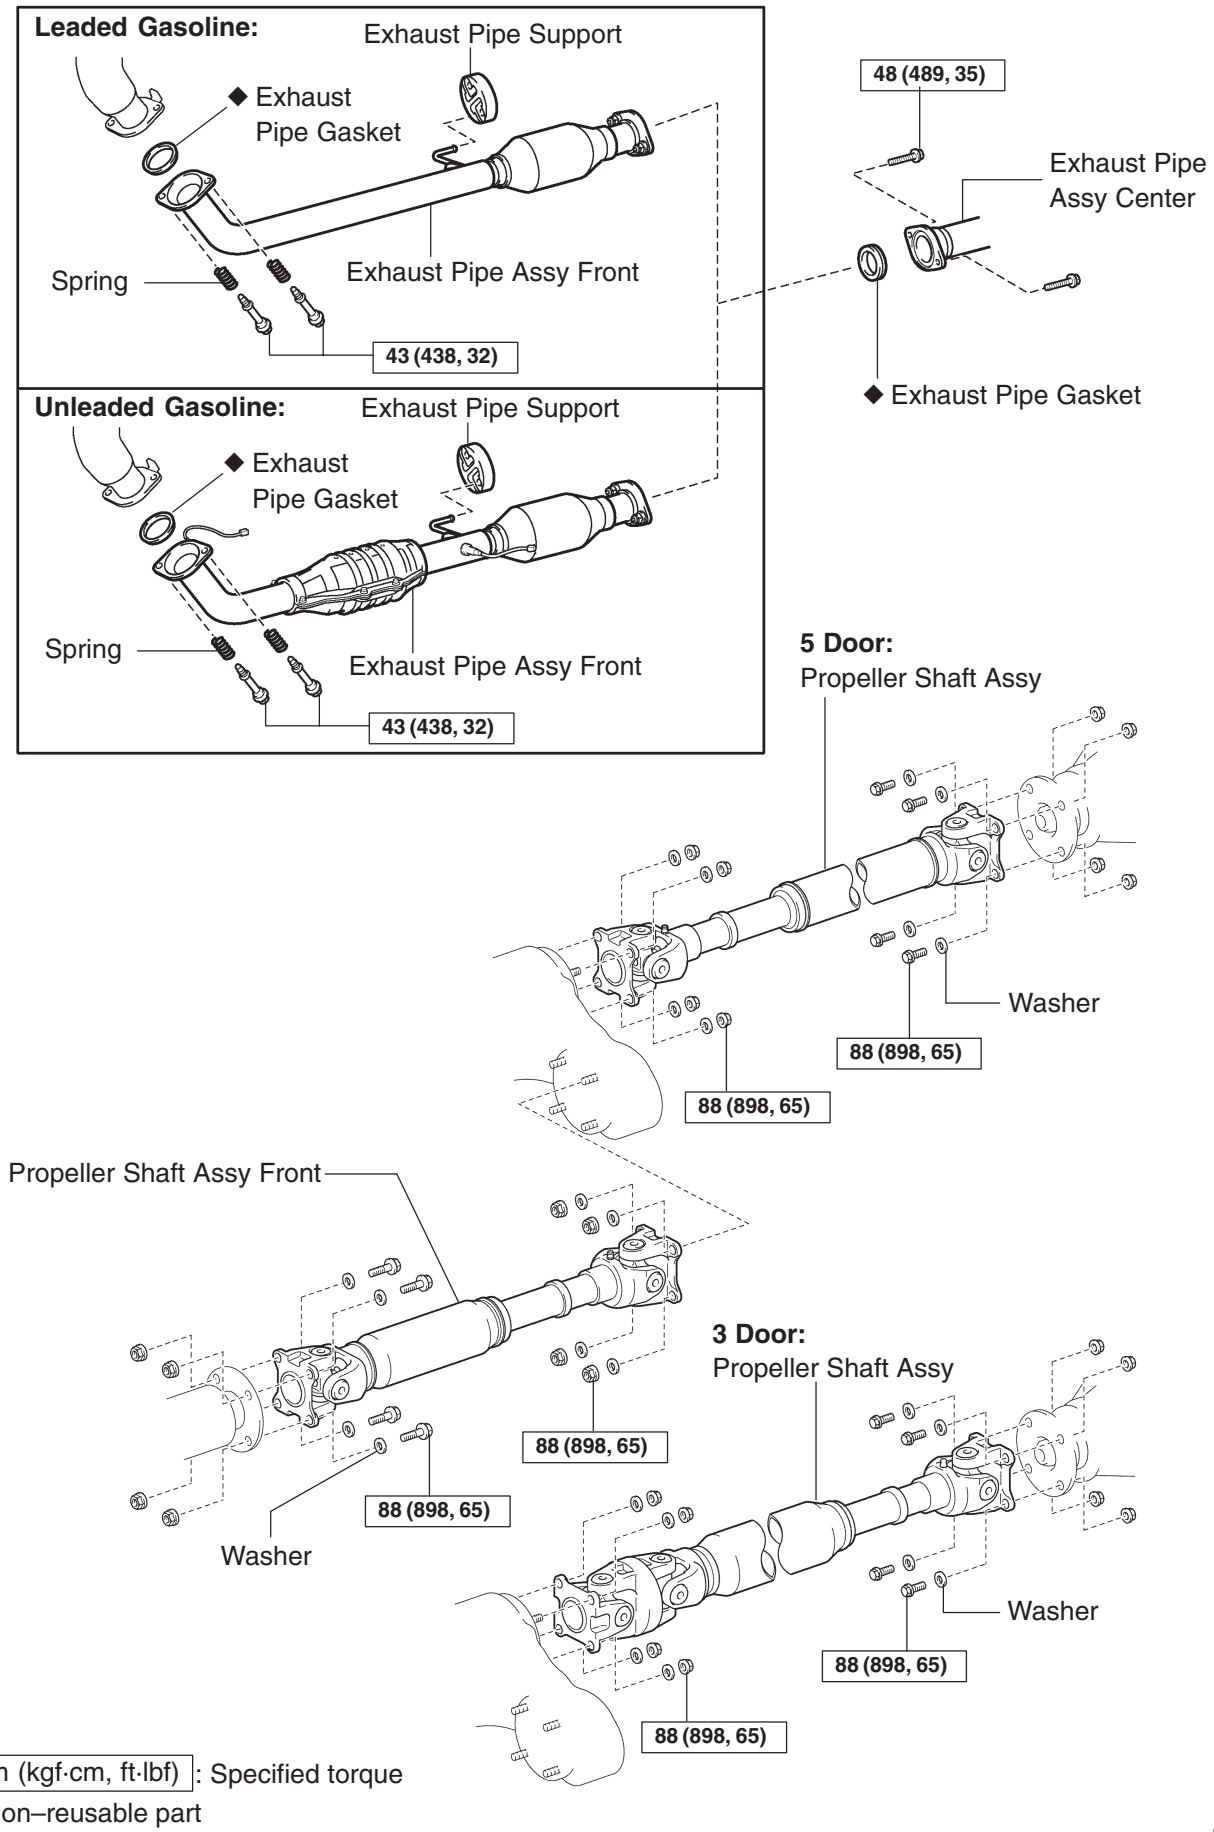



17


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

G37583

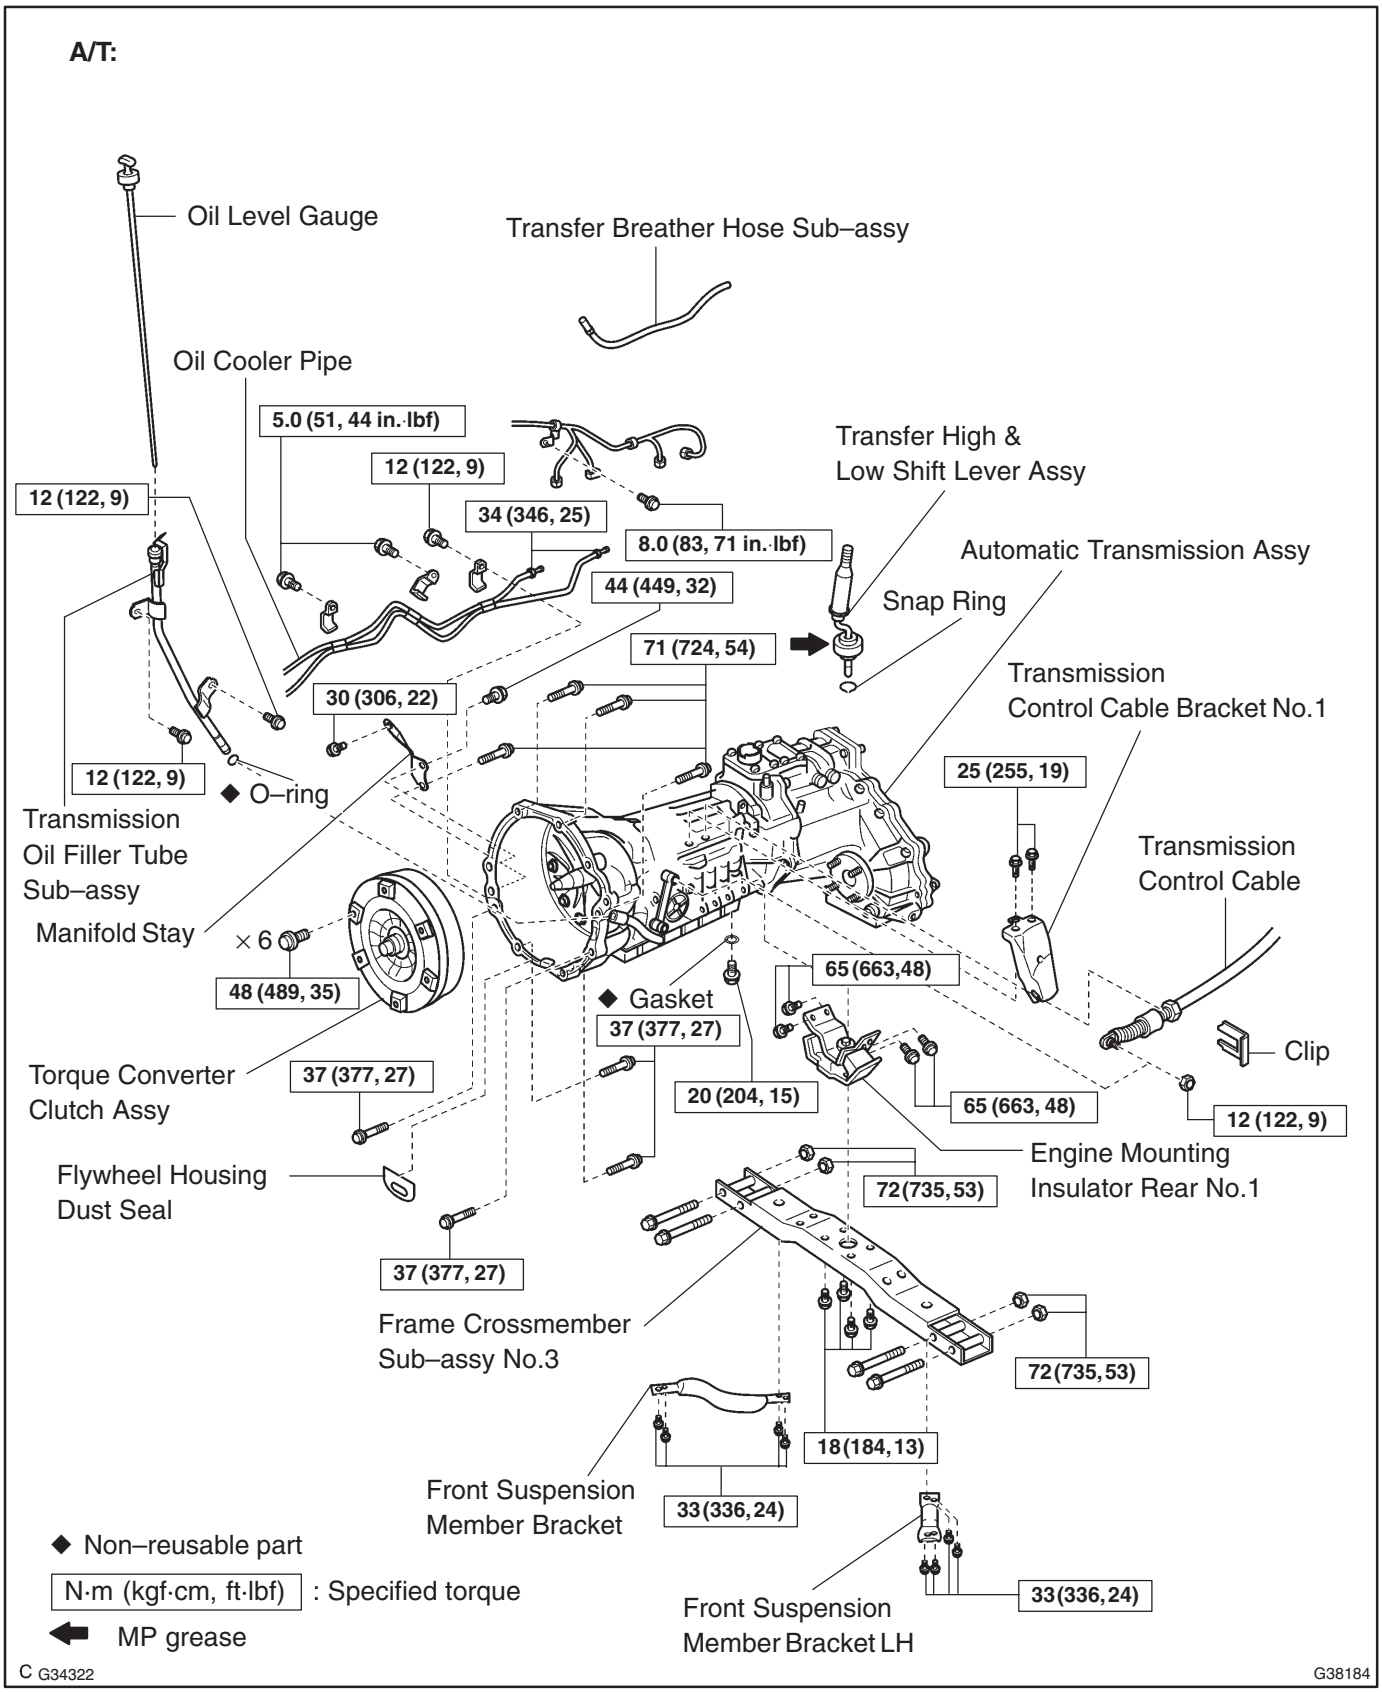

A/T:
Oil Level Gauge
Transfer Breather Hose Sub–assy
Oil Cooler Pipe
5.0 (51, 44 in.·lbf)
12 (122, 9)
34 (346, 25)
8.0 (83, 71 in.·lbf)
Transfer High & Low Shift Lever Assy
12 (122, 9)
Automatic Transmission Assy
44 (449, 32)
Snap Ring
71 (724, 54)
30 (306, 22)
Transmission Control Cable Bracket No.1
12 (122, 9)
◆ O–ring
25 (255, 19)
Transmission Oil Filler Tube Sub–assy
Transmission Control Cable
Manifold Stay
× 6
48 (489, 35)
◆ Gasket
65 (663,48)
37 (377, 27)
Clip
Torque Converter Clutch Assy
37 (377, 27)
20 (204, 15)
65 (663, 48)
12 (122, 9)
Engine Mounting Insulator Rear No.1
Flywheel Housing Dust Seal
72(735,53)
37 (377, 27)
Frame Crossmember Sub–assy No.3
72(735,53)
18(184,13)
Front Suspension Member Bracket
33(336,24)
◆ Non–reusable part
N·m (kgf·cm, ft·lbf) : Specified torque
MP grease
Front Suspension Member Bracket LH
33(336,24)
C G34322
G38184

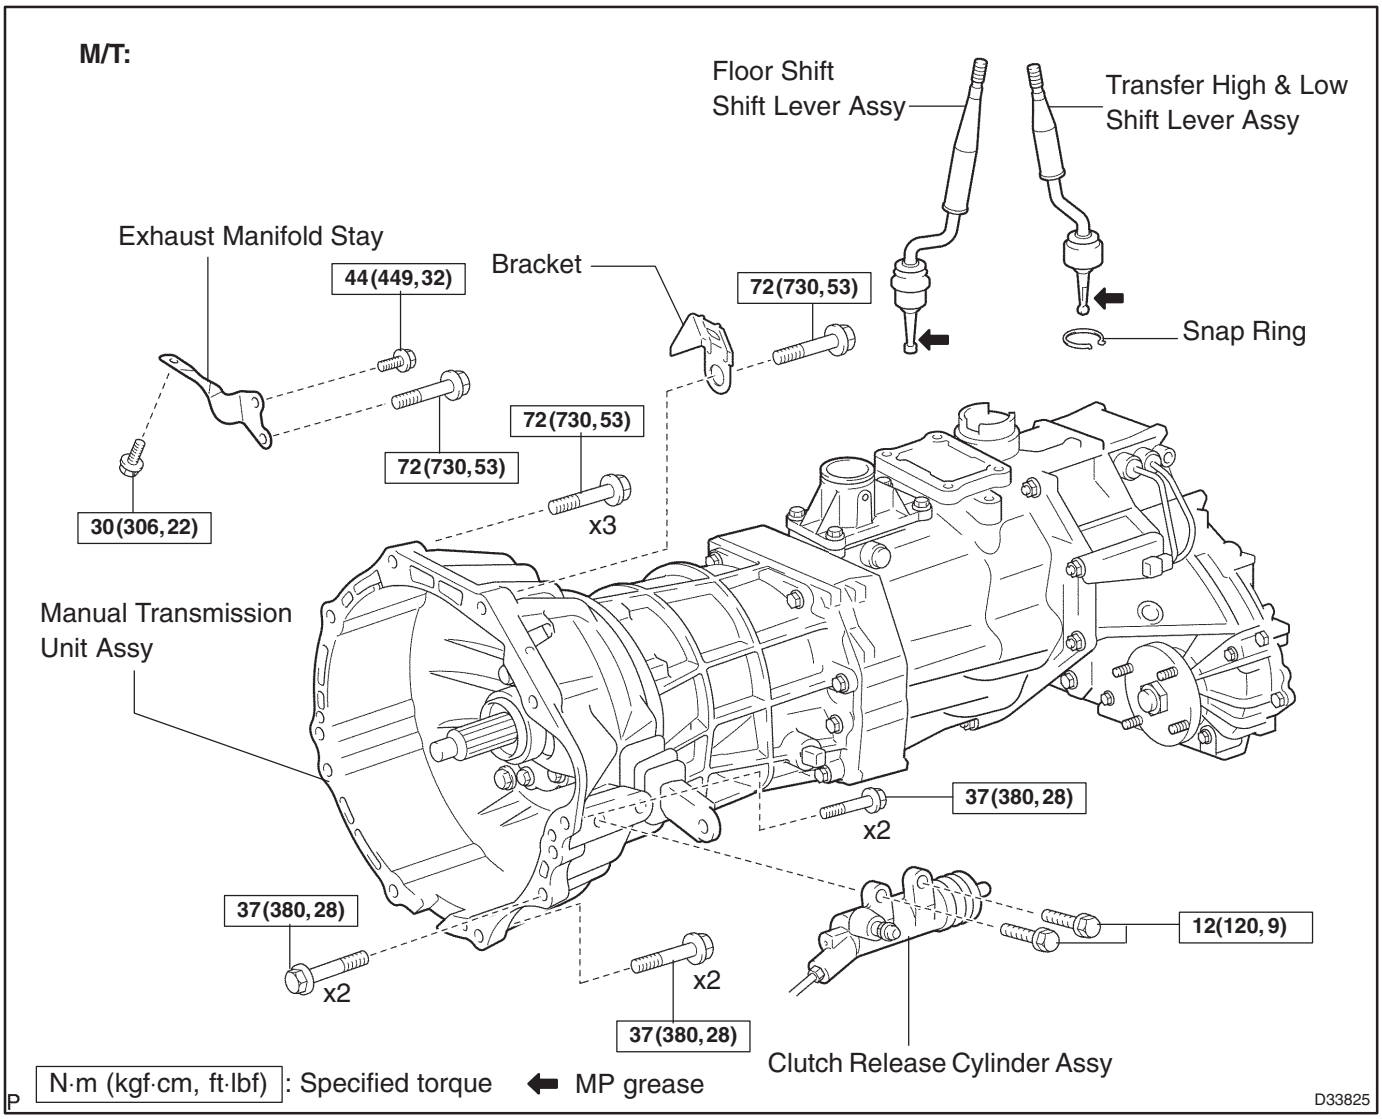
M/T:
Floor Shift
Shift Lever Assy
Transfer High & Low
Shift Lever Assy
Exhaust Manifold Stay
44(449,32)
Bracket
72(730,53)
Snap Ring
72(730,53)
72(730,53)
30(306,22)
x3
Manual Transmission
Unit Assy
37(380,28)
x2
37(380,28)
x2
12(120,9)
37(380,28)
Clutch Release Cylinder Assy
N·m (kgf·cm, ft·lbf): Specified torque
MP grease
P
D33825

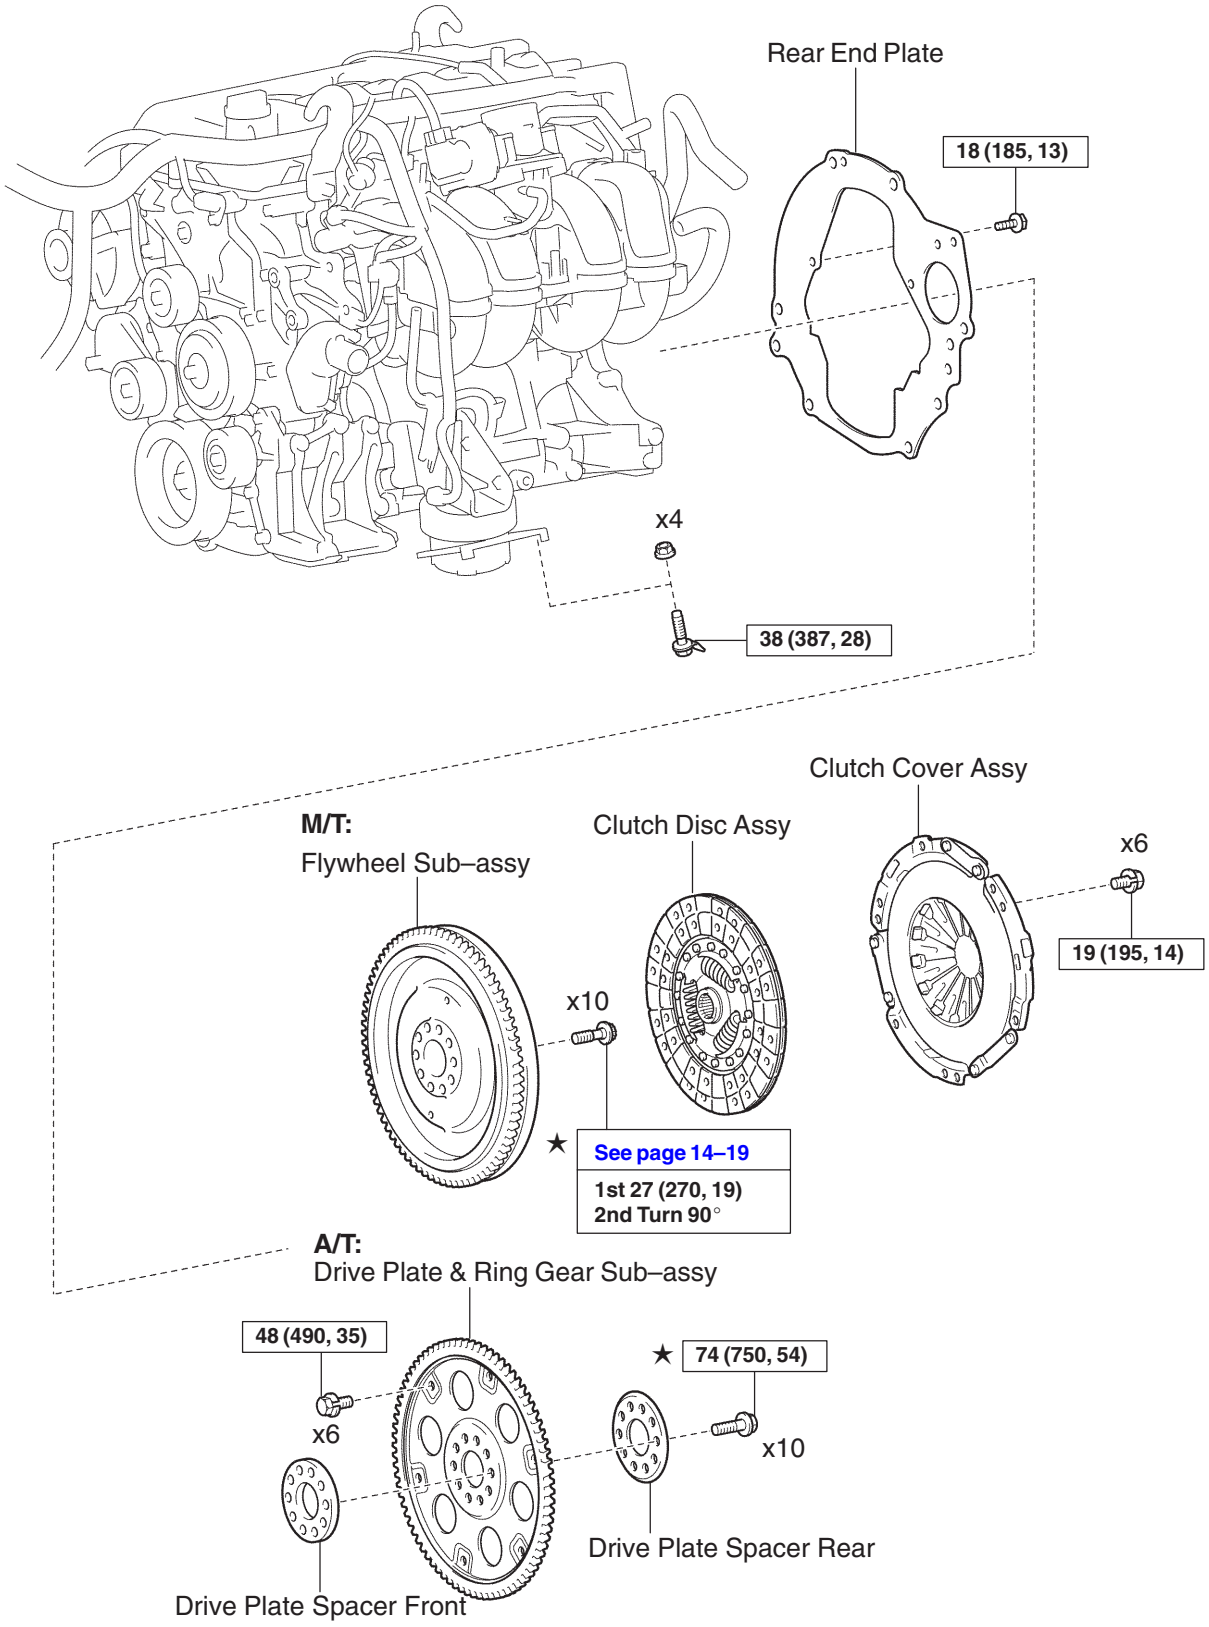

N·m (kgf·cm, ft·lbf): Specified torque
◆ Non–reusable part
★ Precoated part

G35167

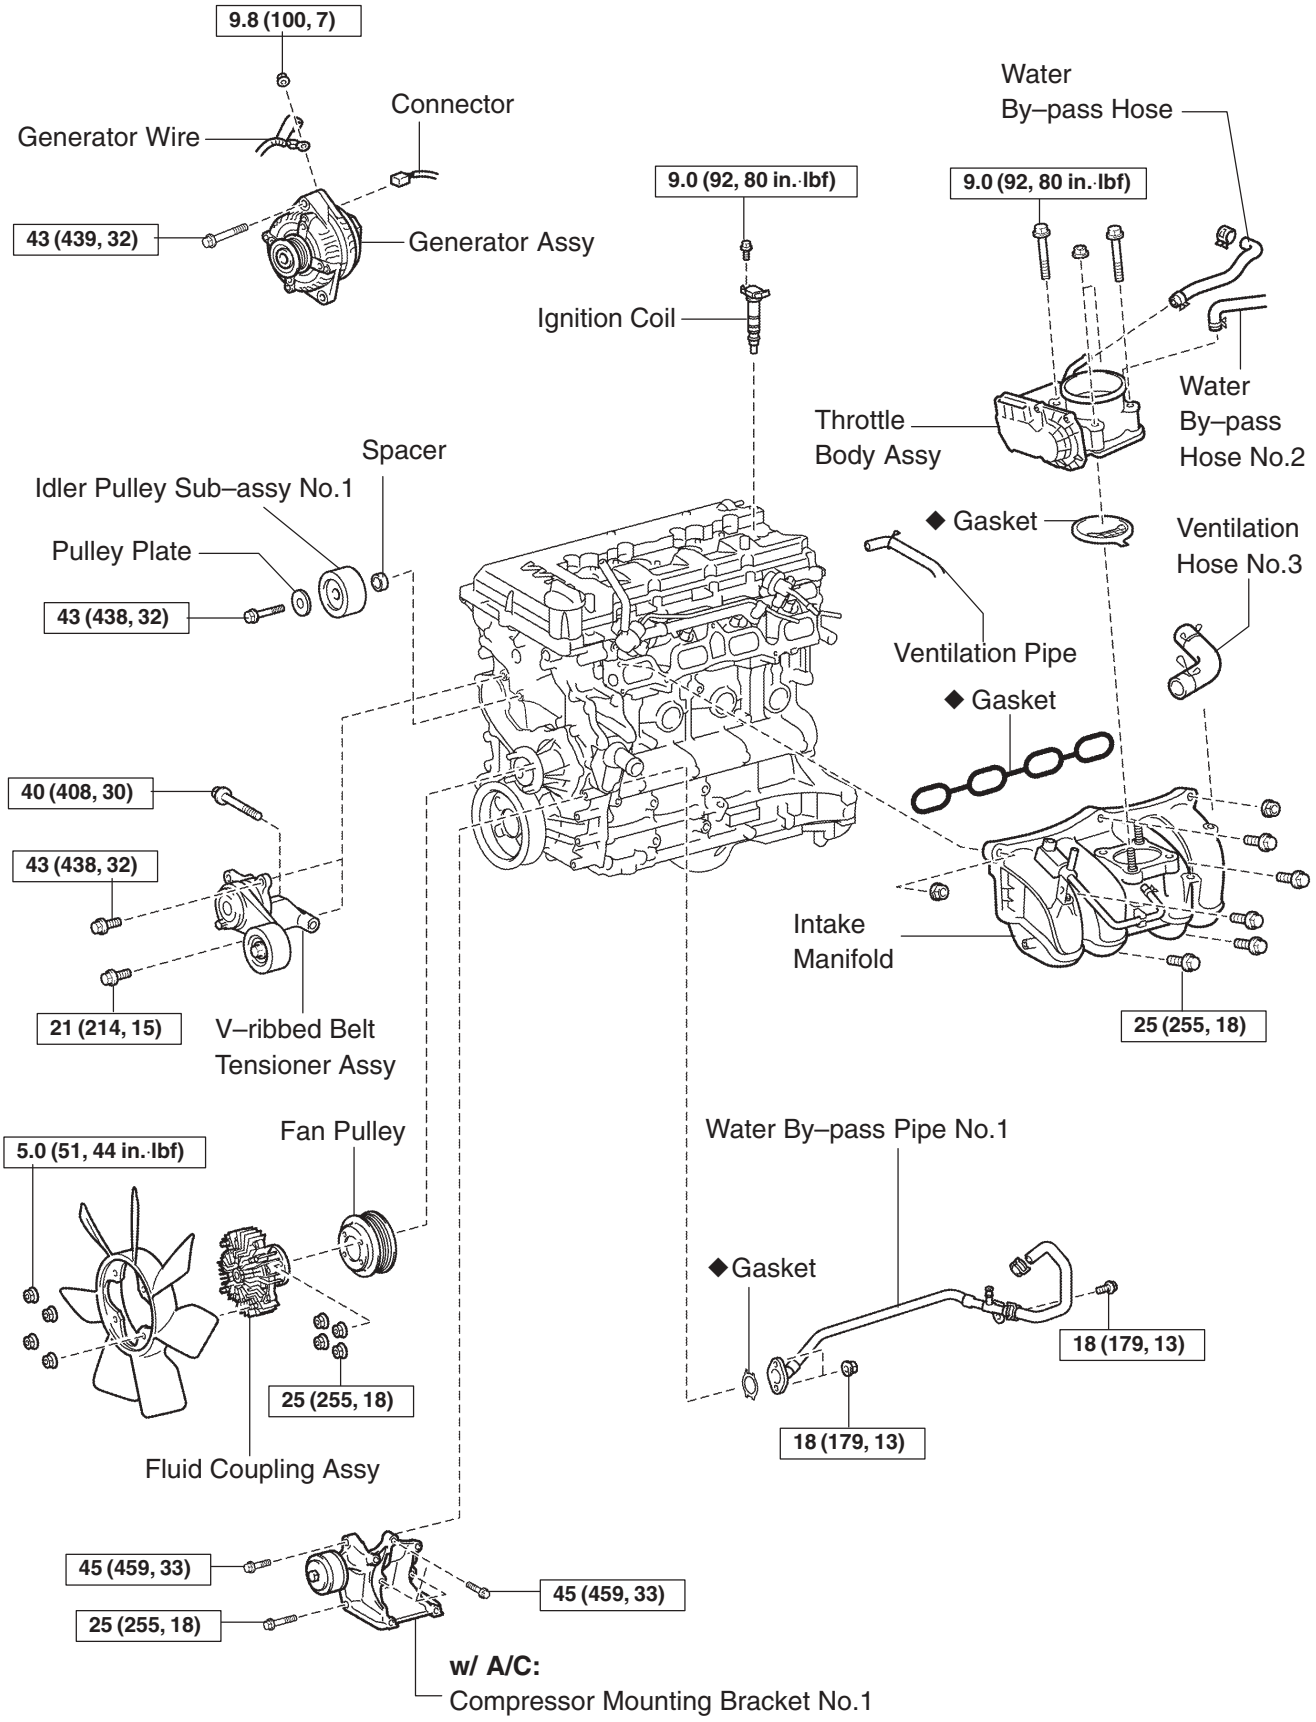


17

N·m (kgf·cm, ft·lbf) : Specified torque

T ◆ Non–reusable part

G37580

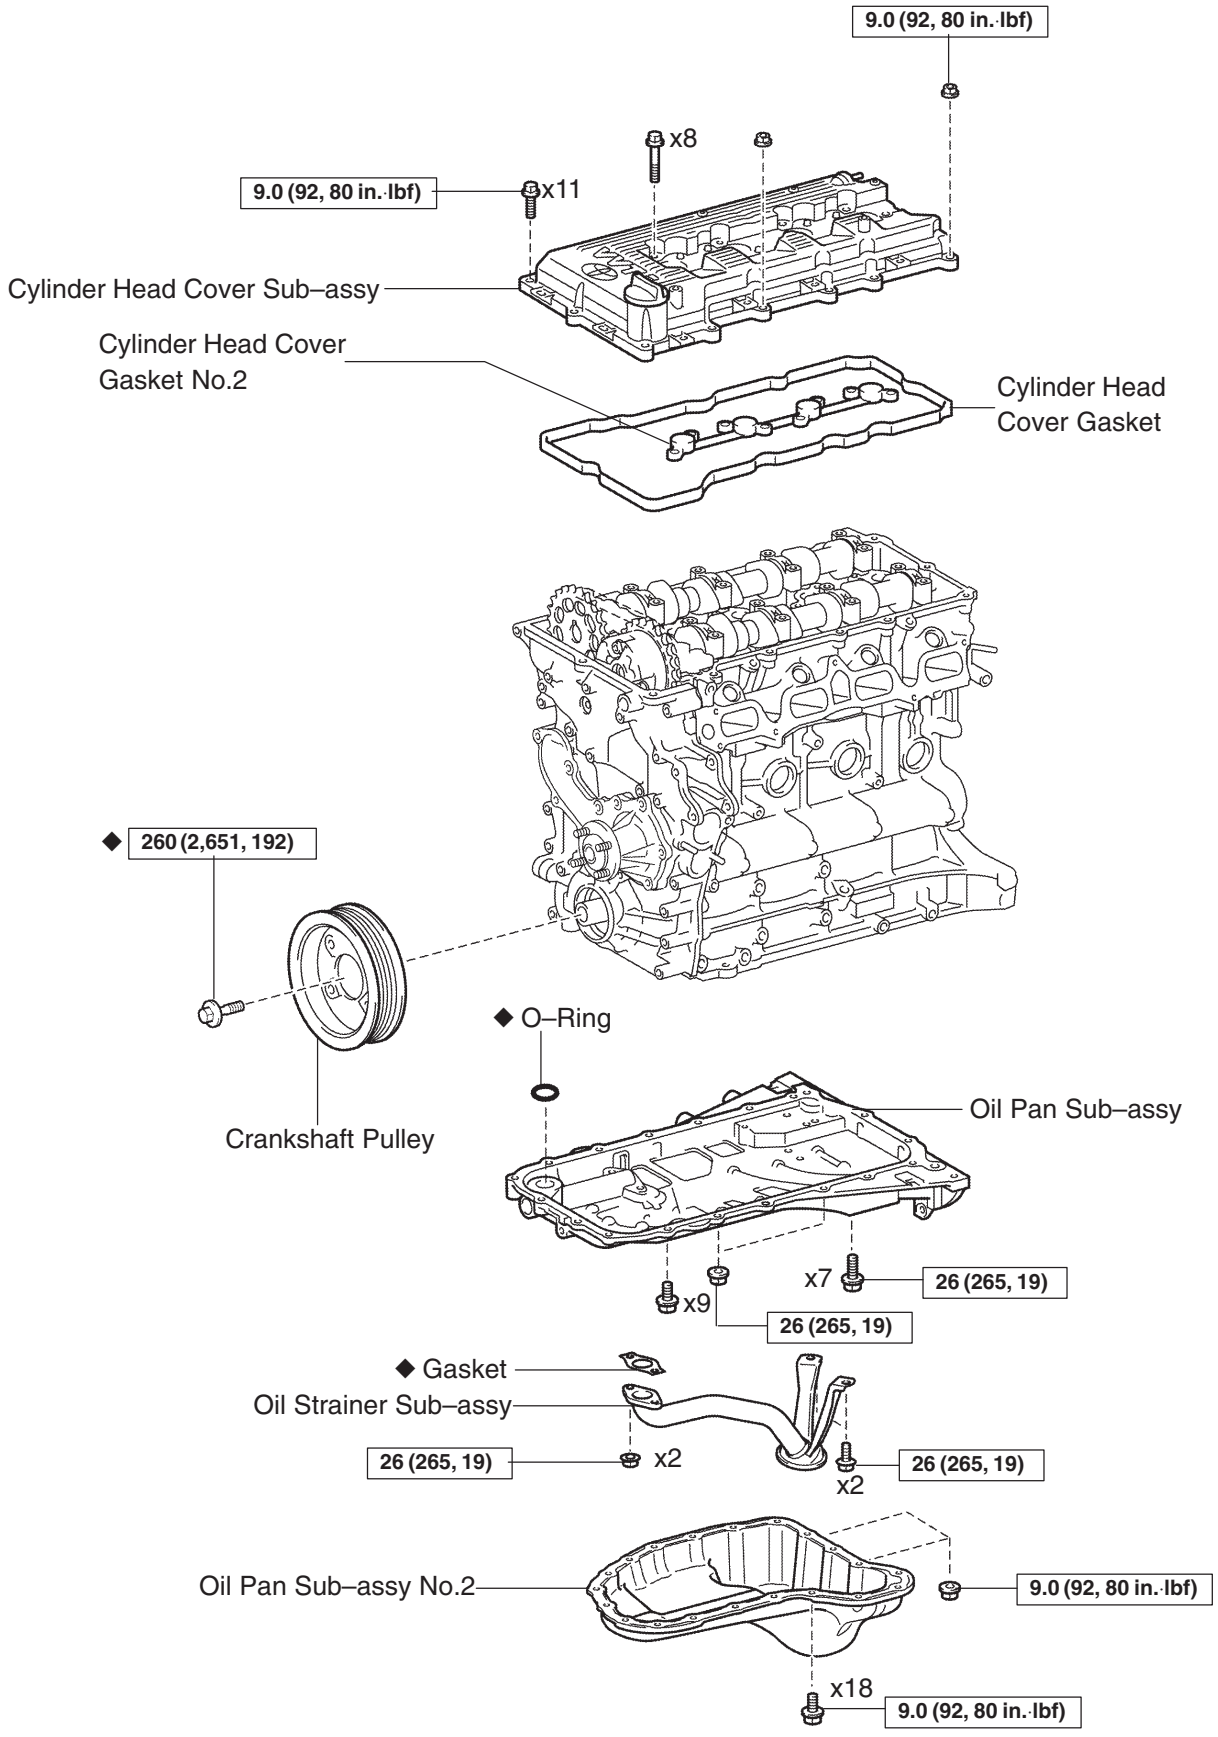


17

N·m (kgf·cm, ft·lbf): Specified torque

◆ Non–reusable part

T

G37581

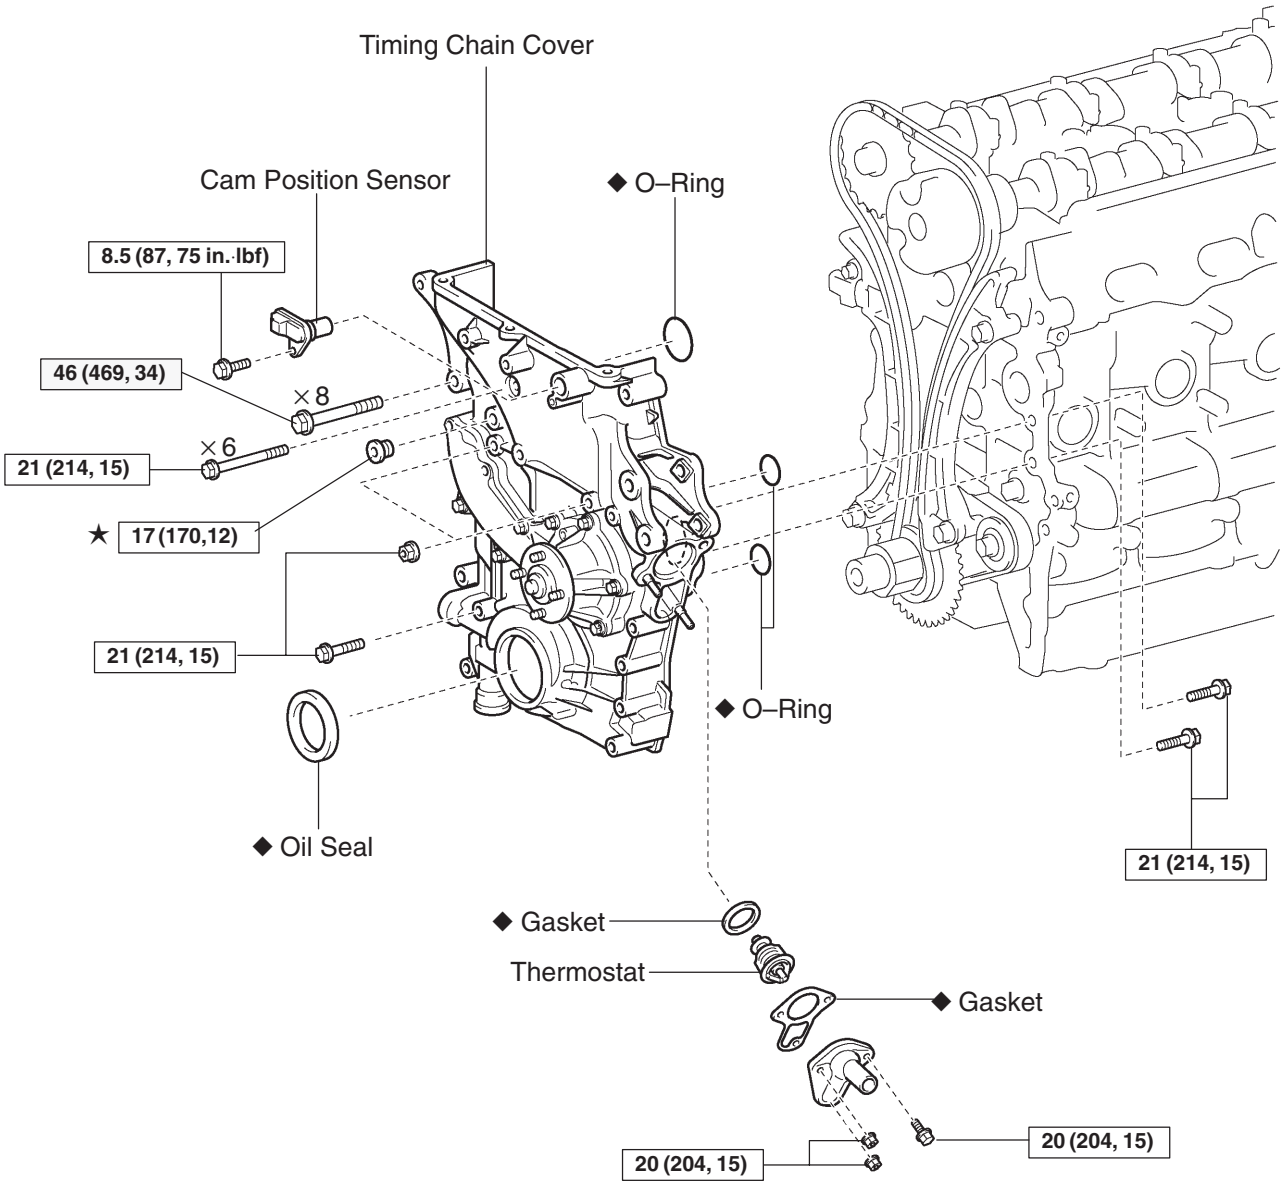

N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
★ Precoated part

T

G37104