


# TIMING GEAR CASE ASSY (1KD–FTV)(From August, 2004)

170NB–02

## COMPONENTS

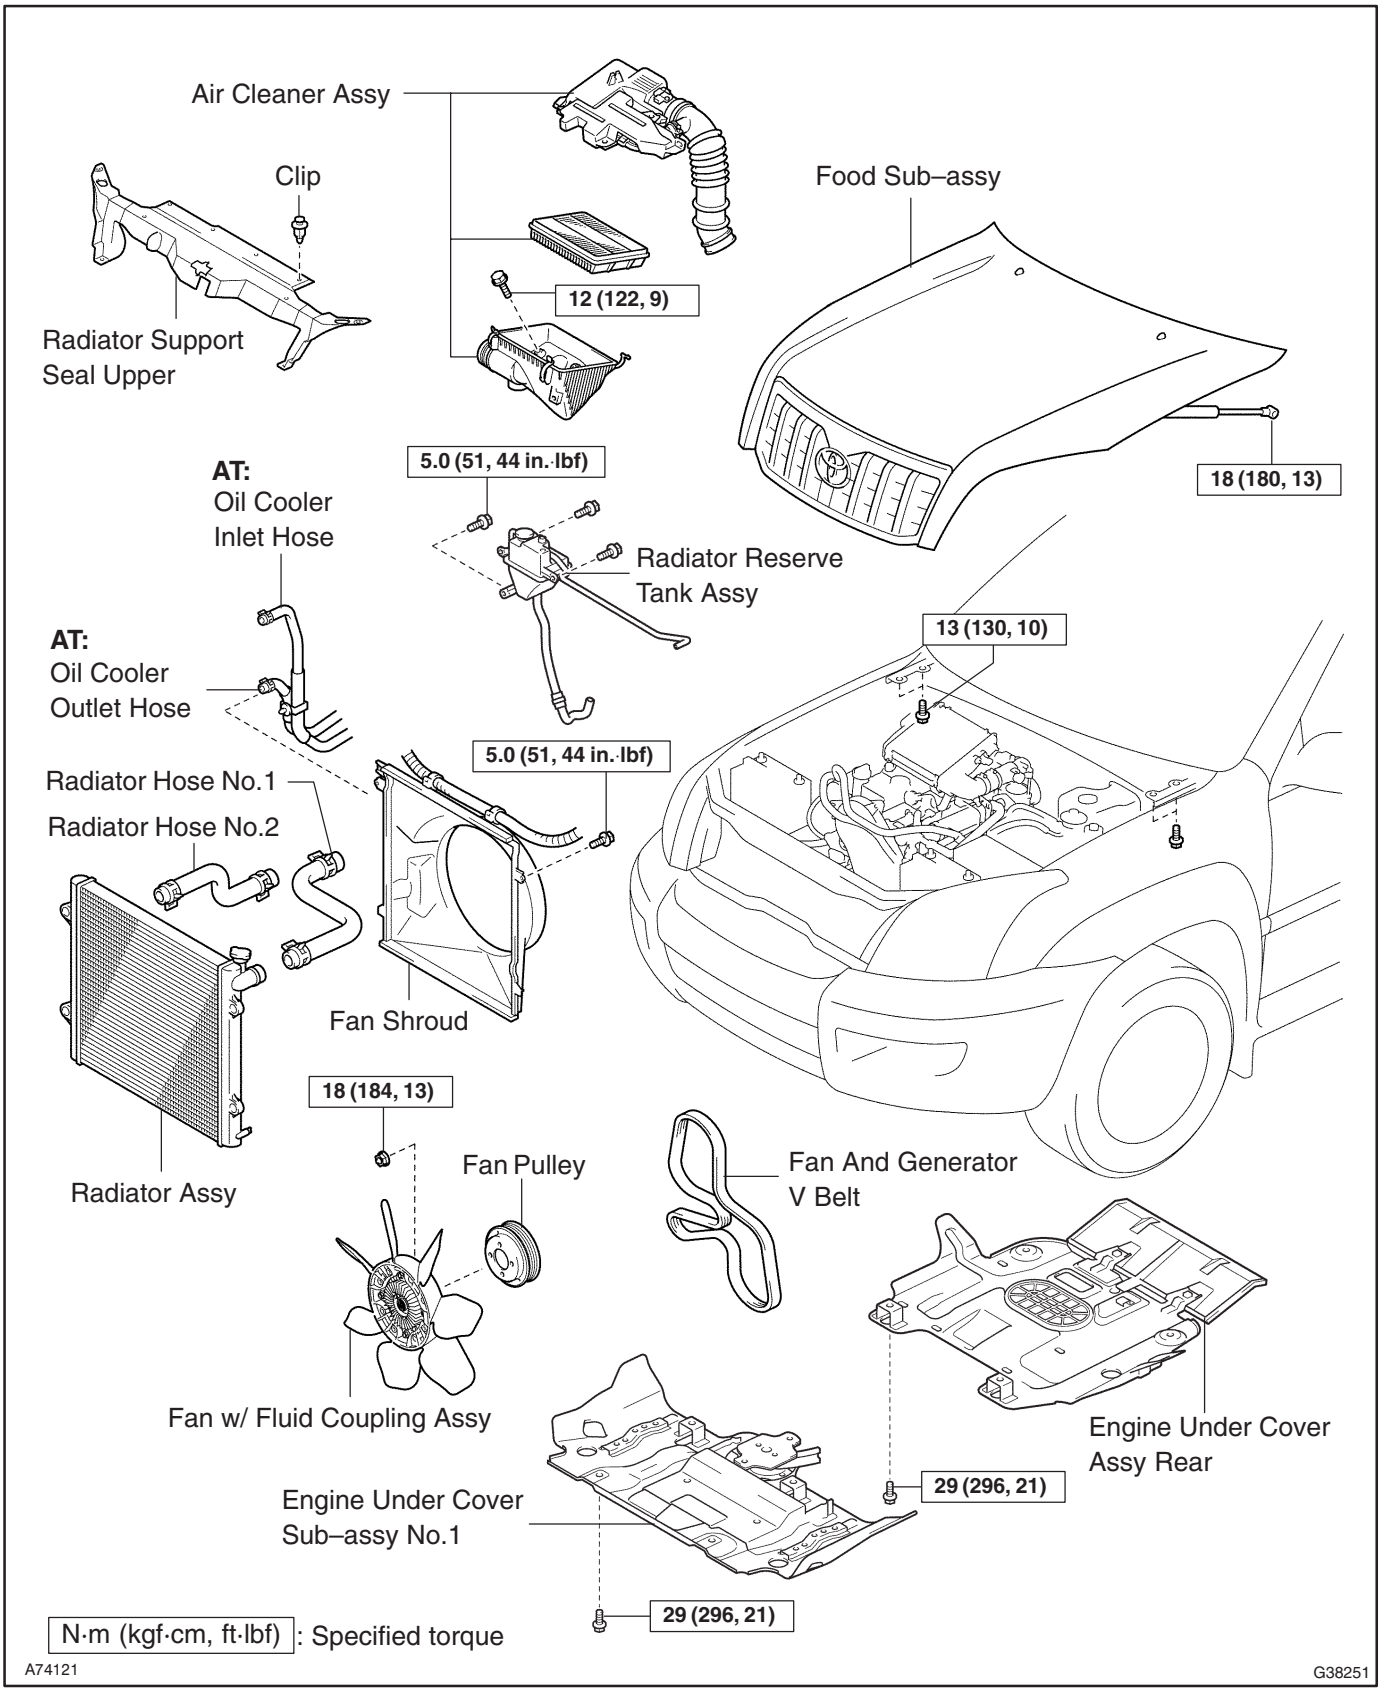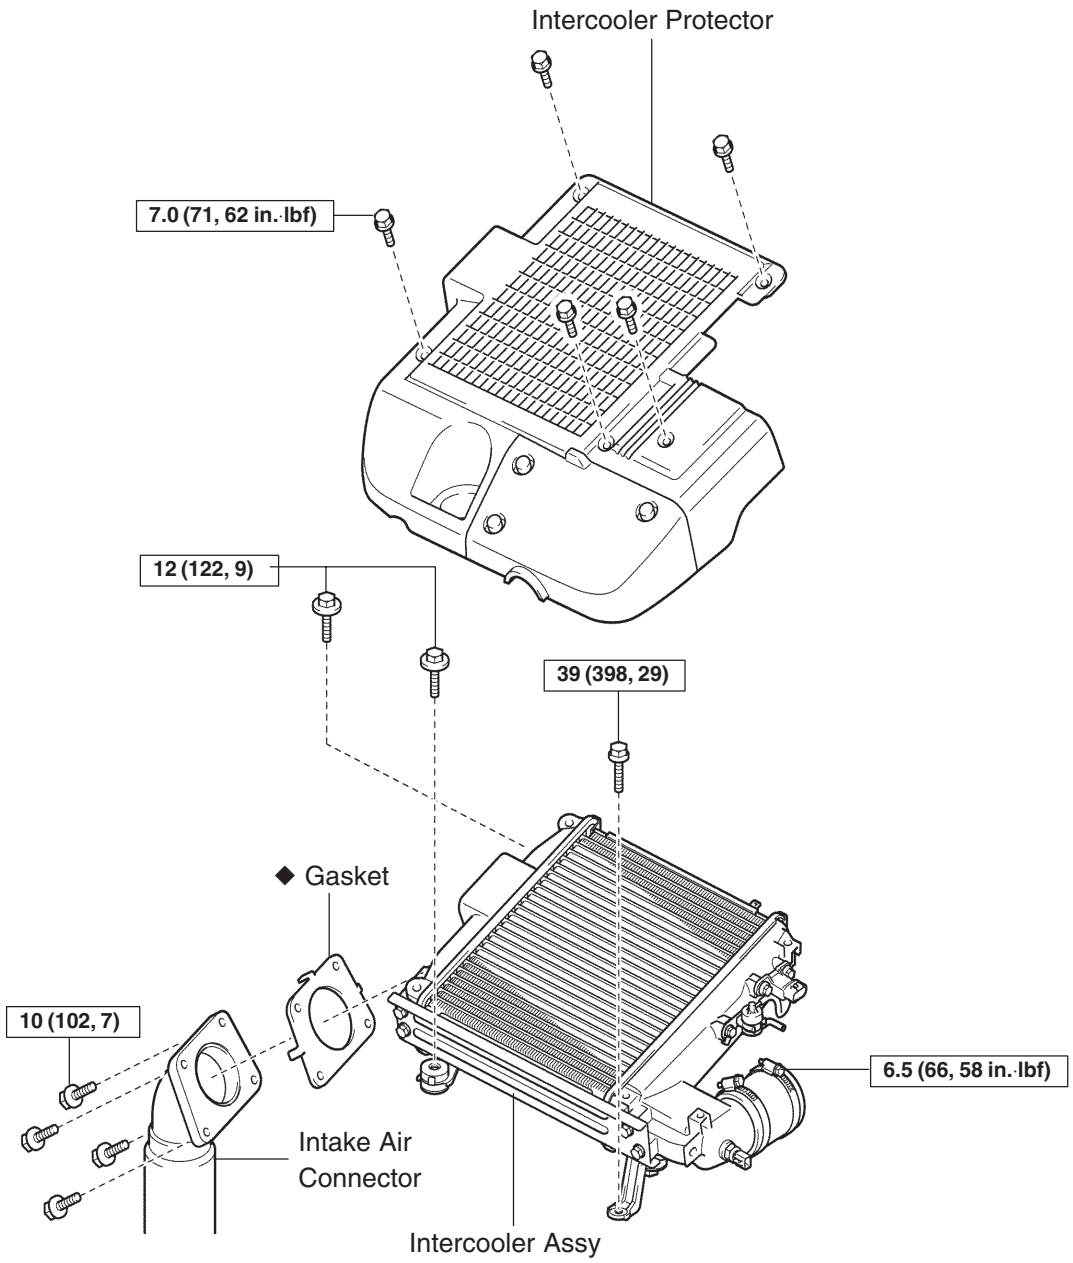

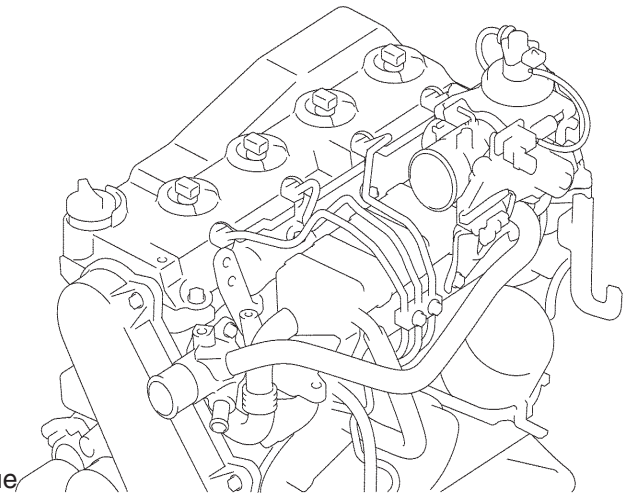


N·m (kgf·cm, ft·lbf): Specified torque

◆ Non–reusable part


G36002

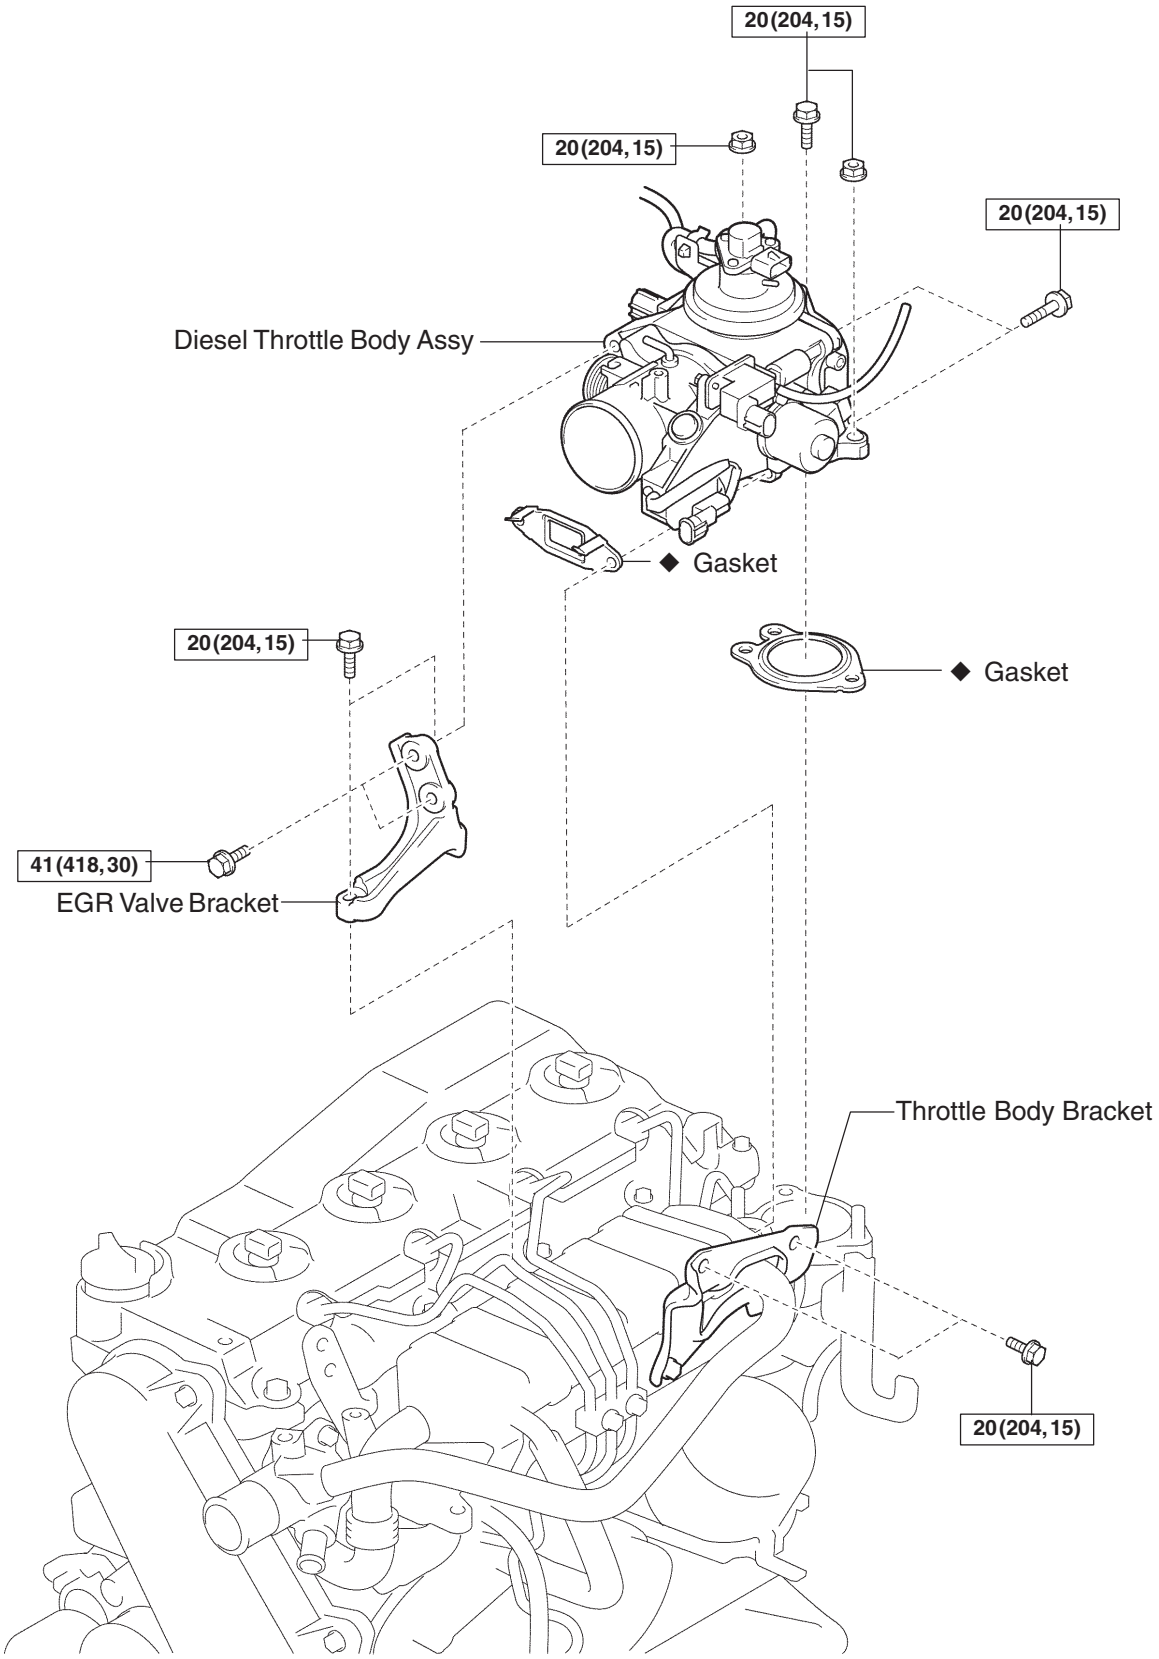


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

G39600

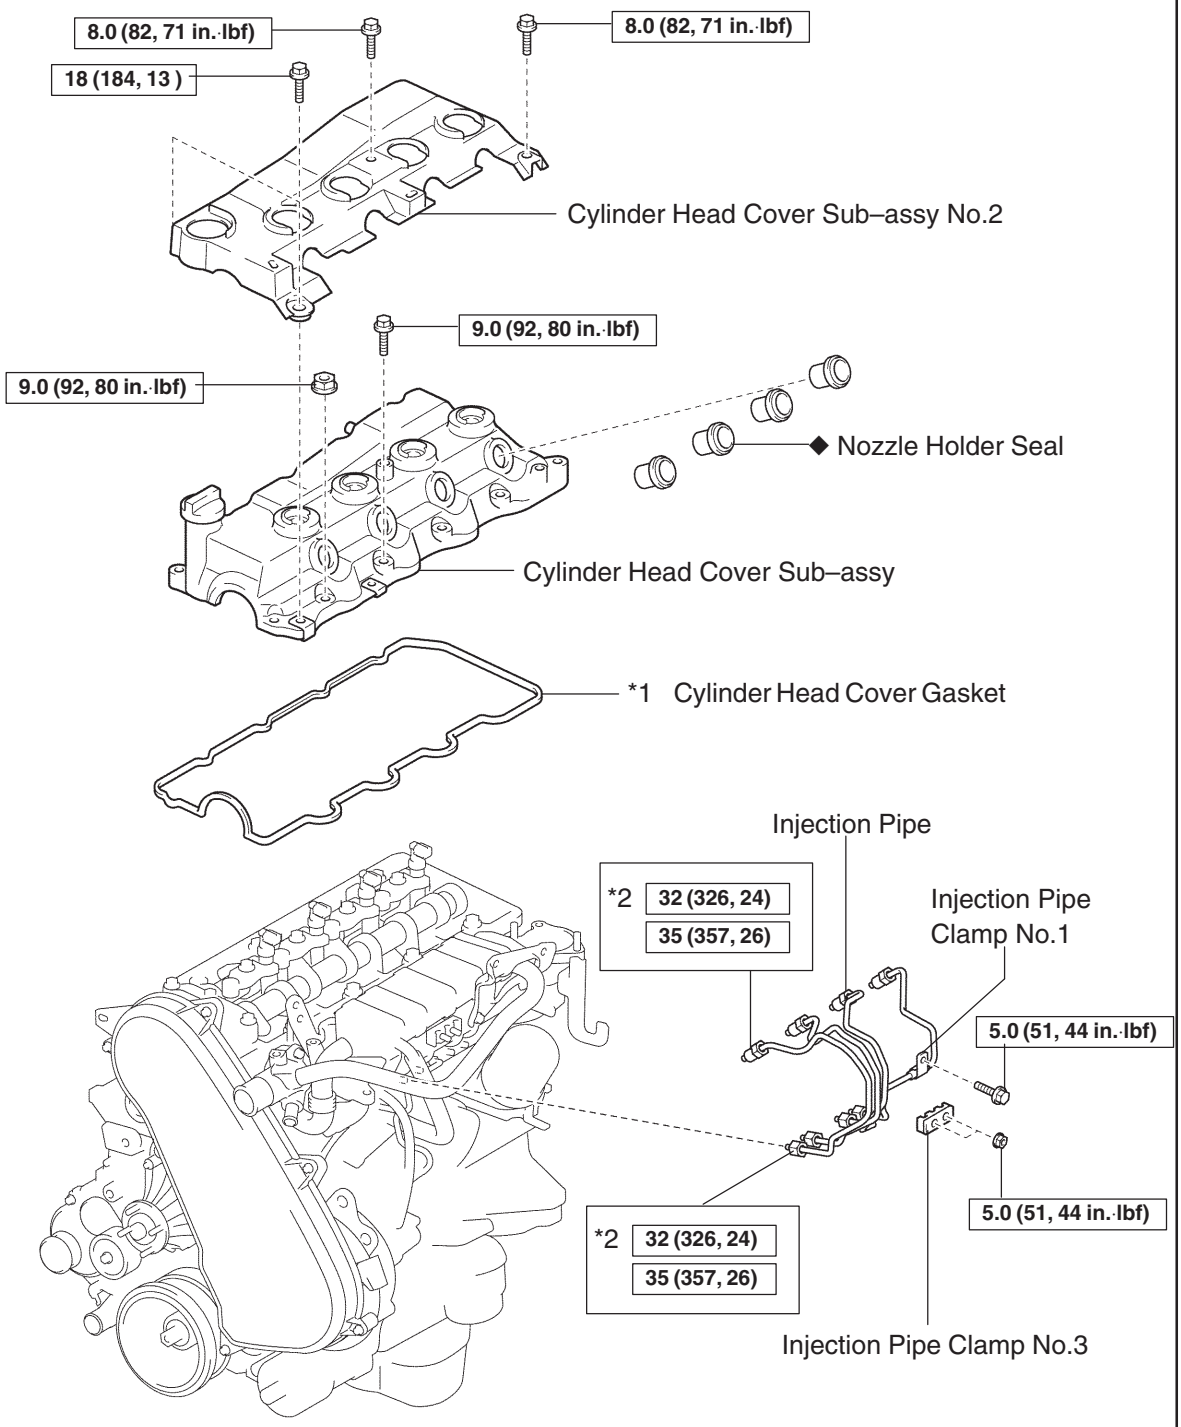


N·m (kgf·cm, ft·lbf): Specified torque


◆ Non–reusable part

*1 Replace only if damaged

*2 For use with SST

P


G38364

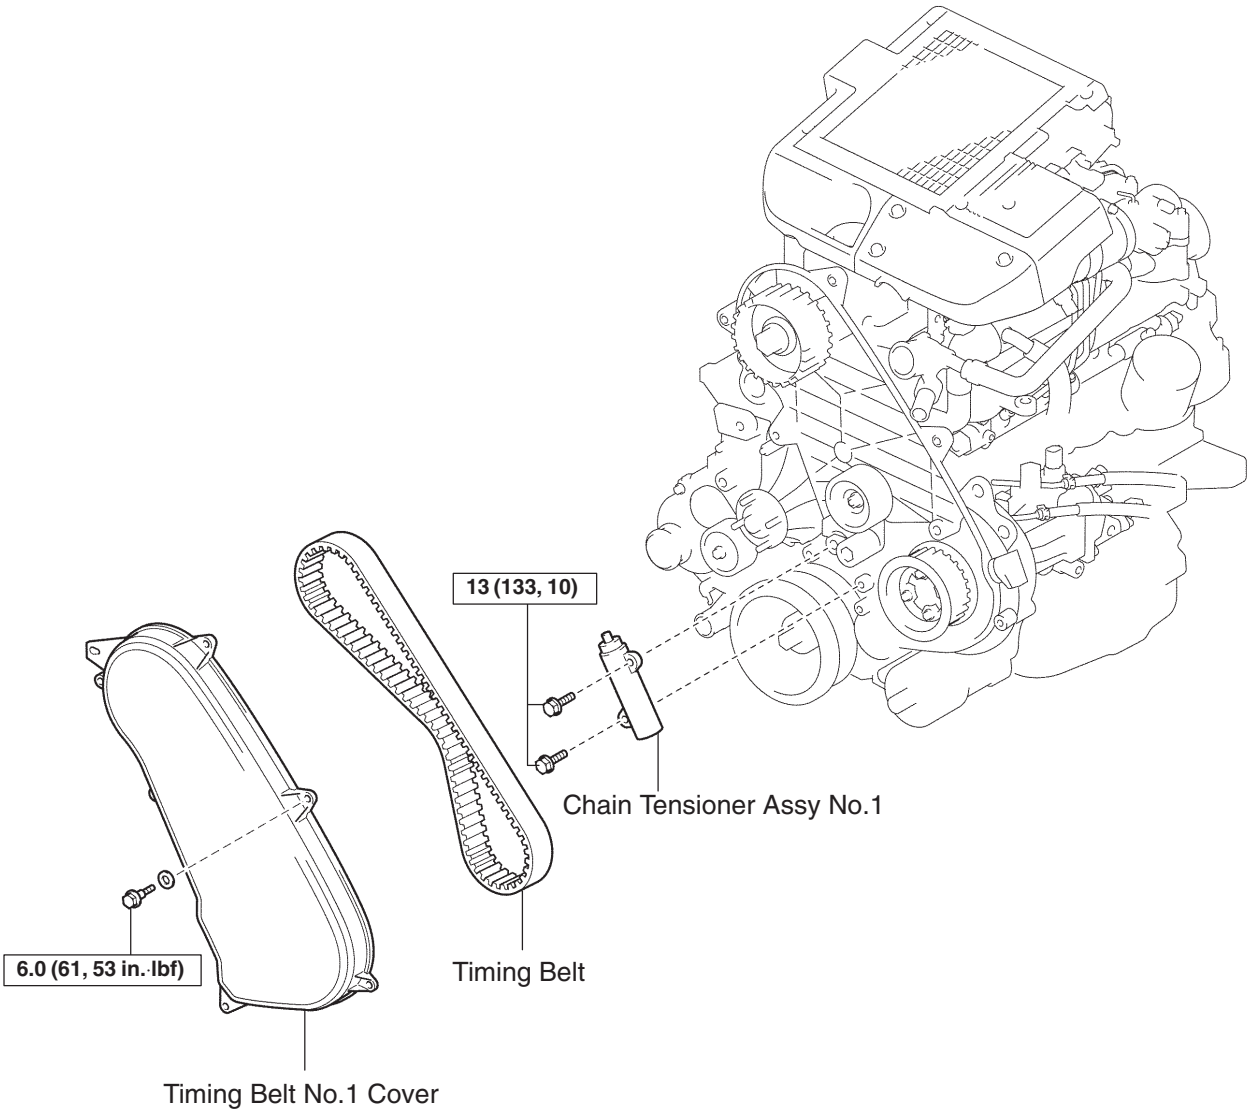


P

N·m (kgf·cm, ft·lbf) : Specified torque


A72859

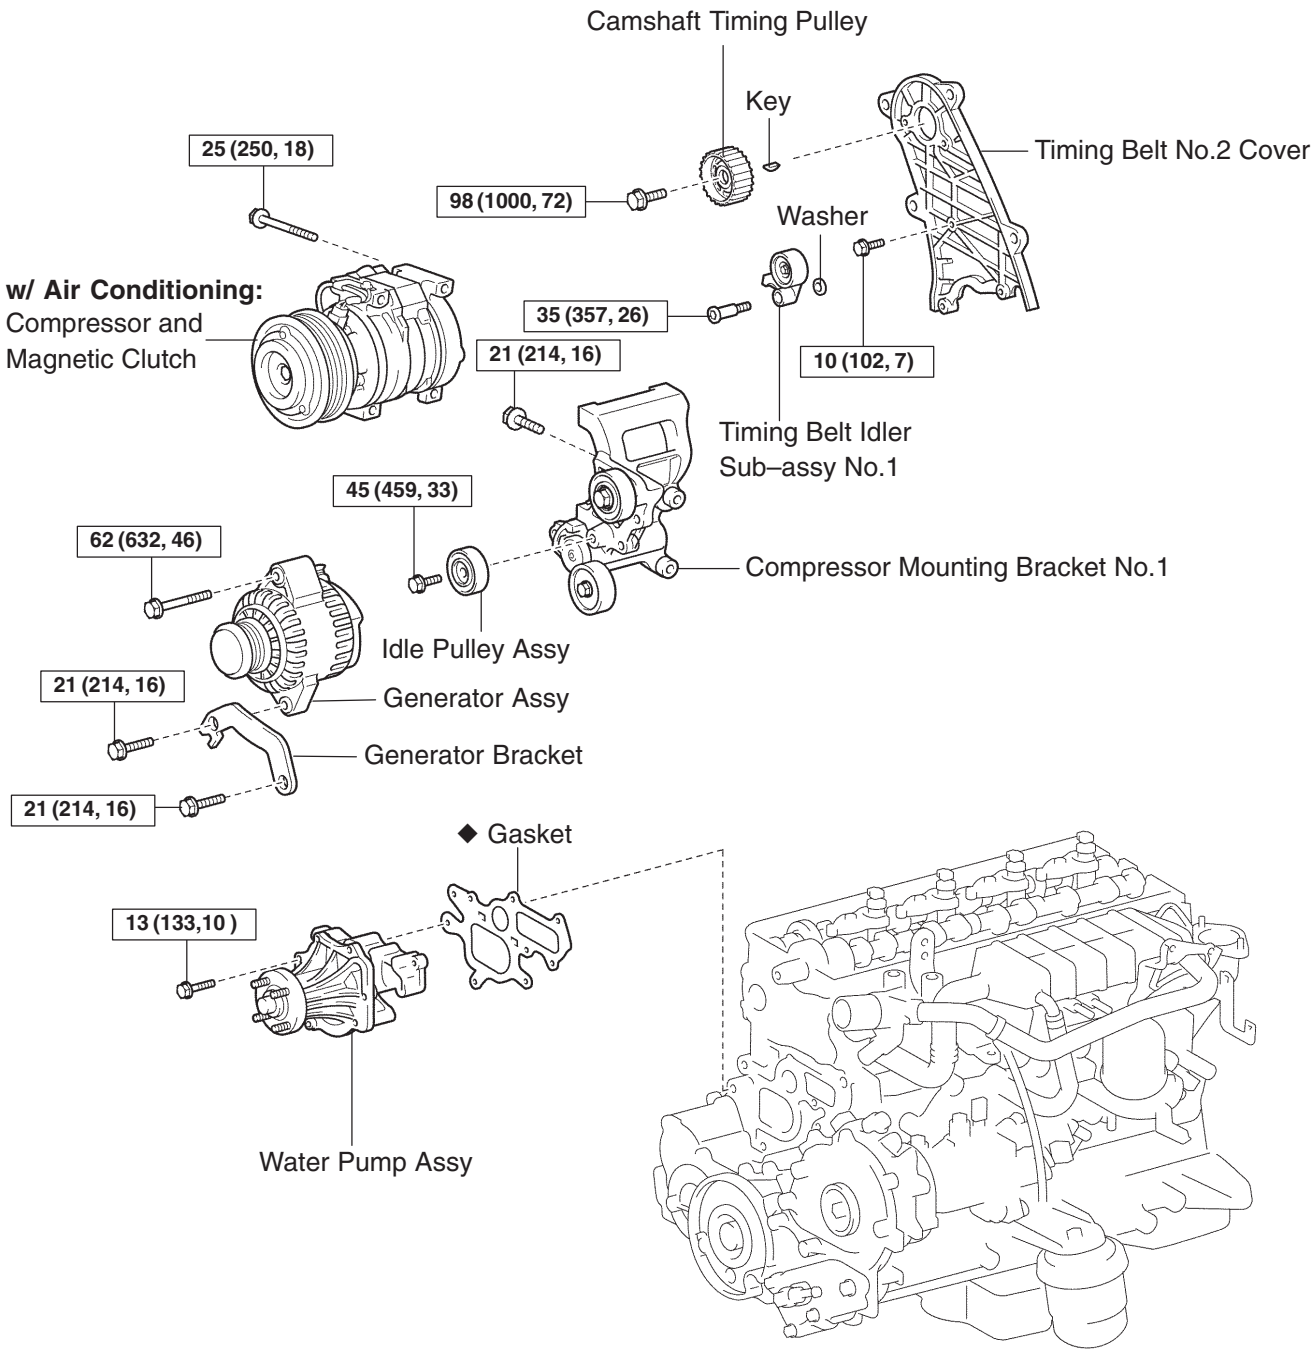


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

G39587

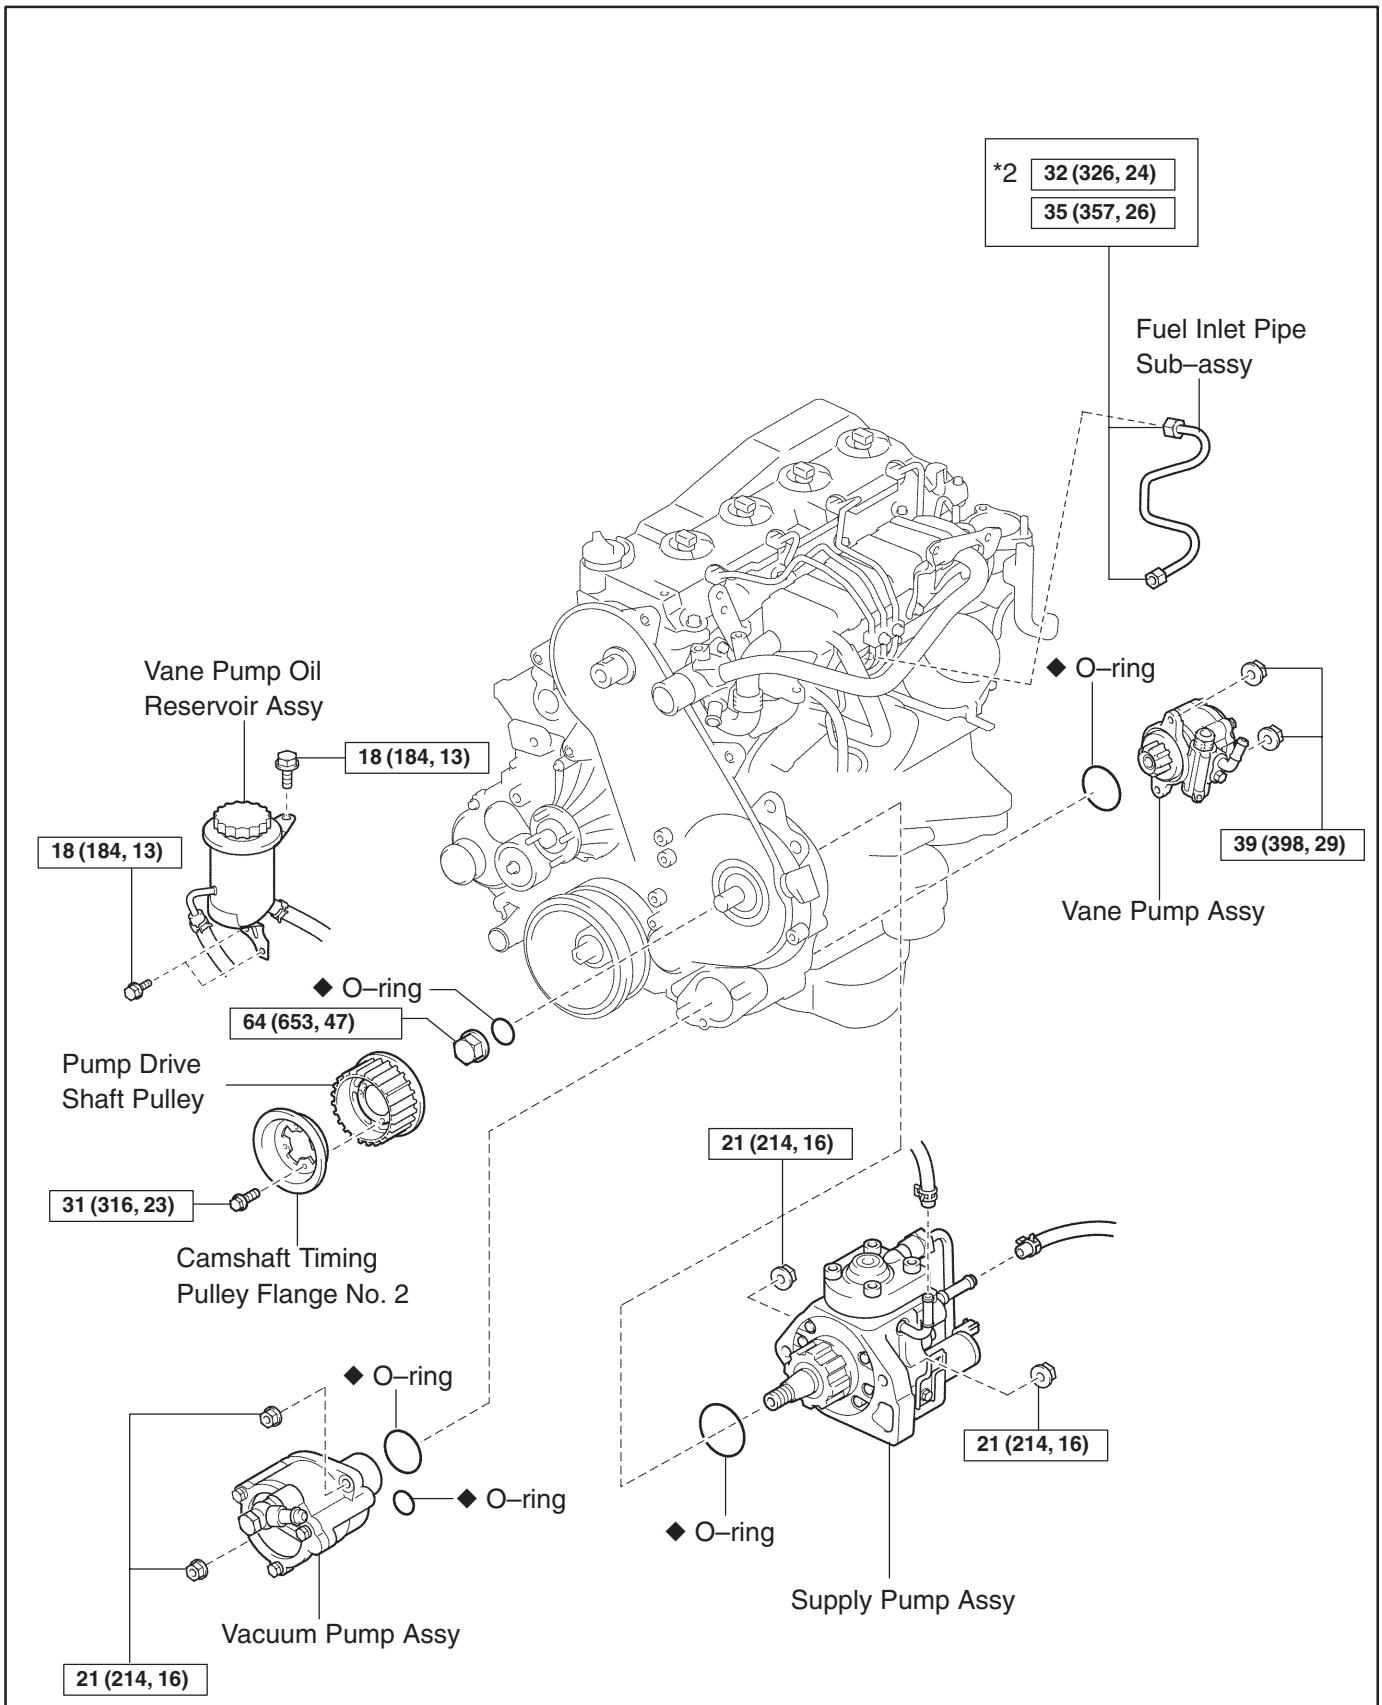



N·m (kgf·cm, ft·lbf): Specified torque


◆ Non–reusable part

*2 For use with SST

P

G38371

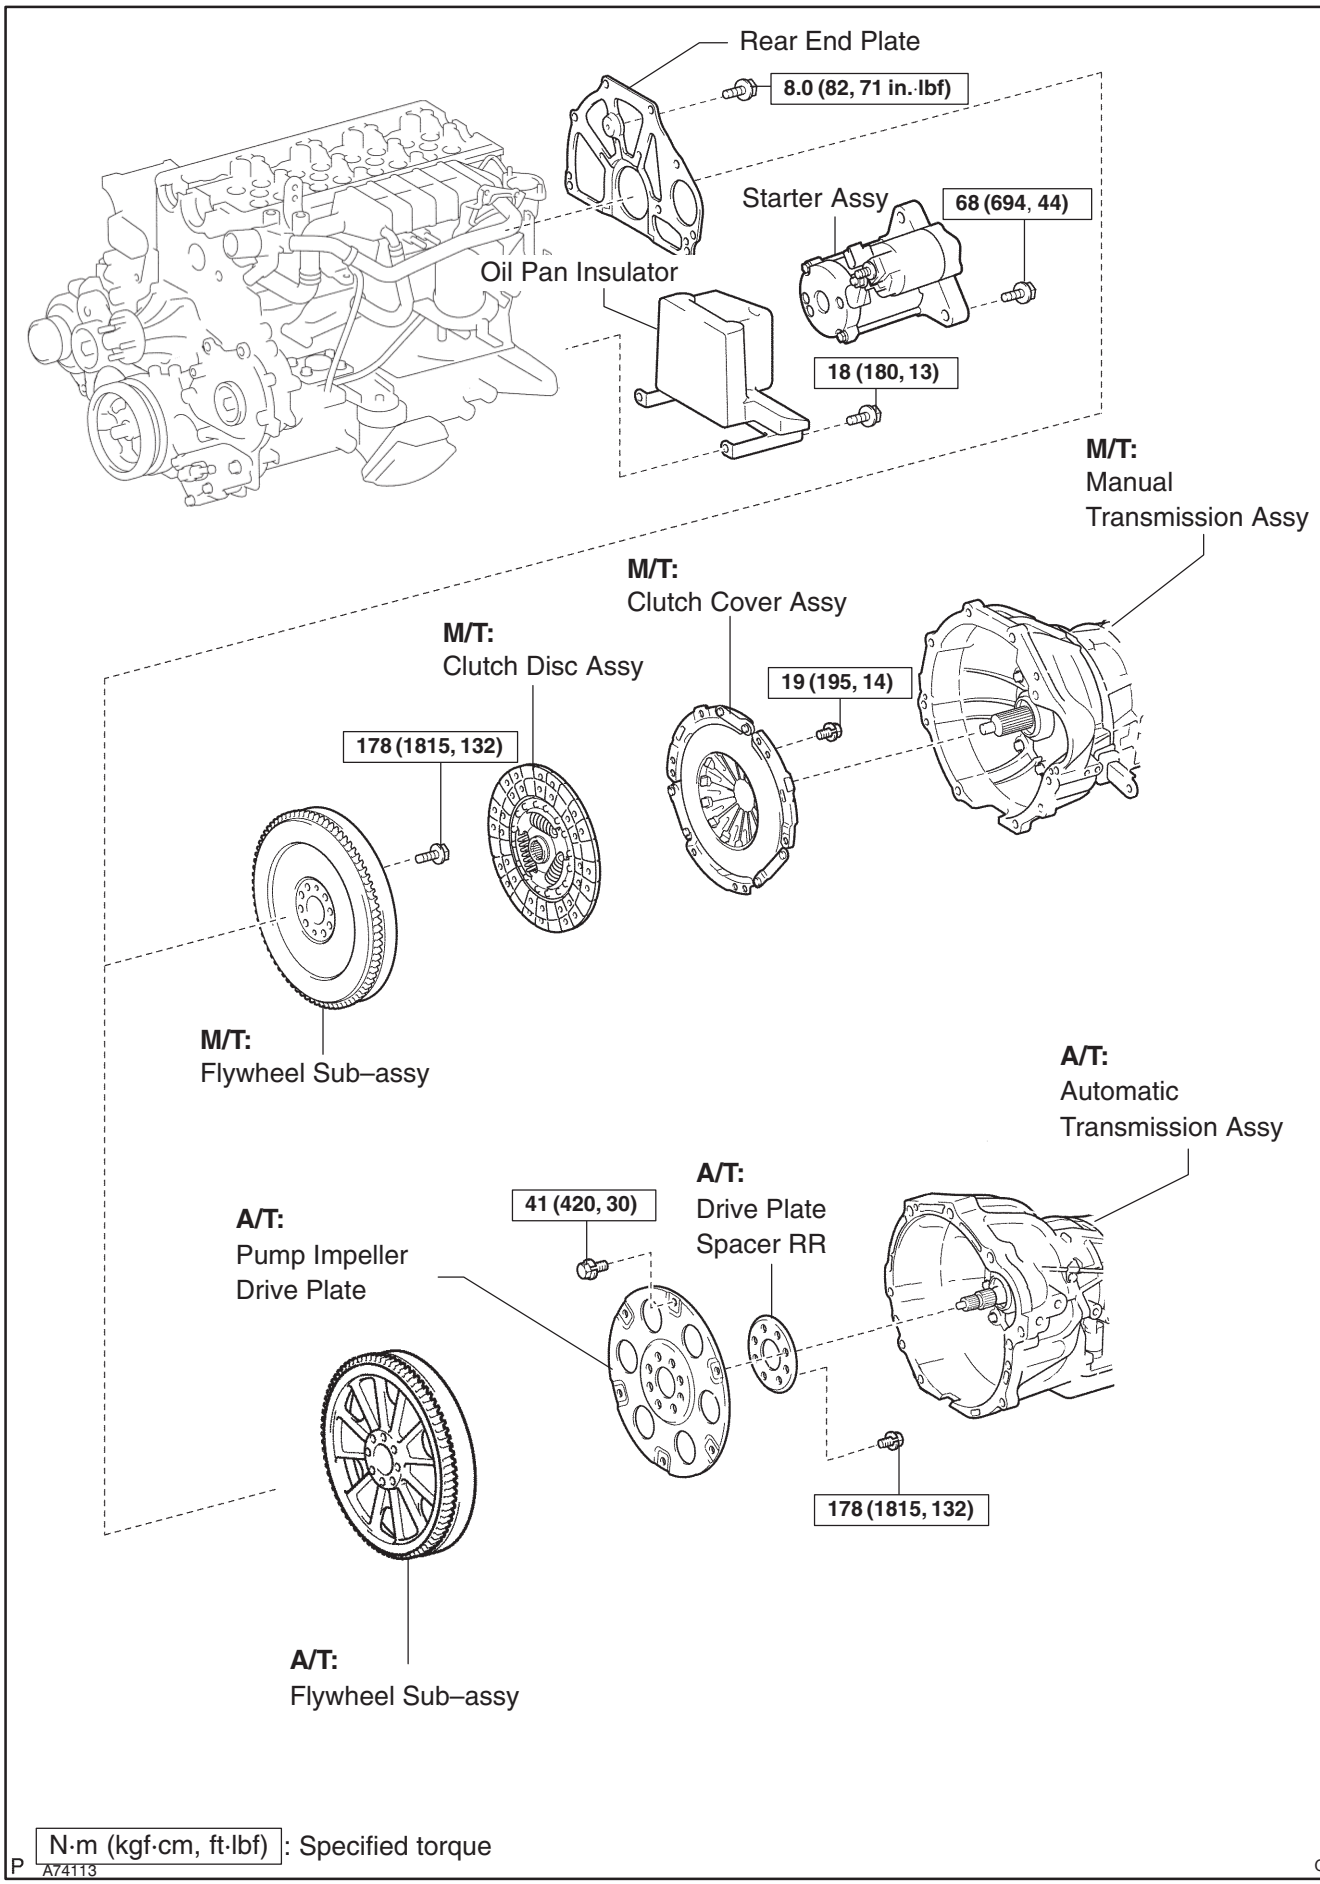
Rear End Plate
8.0 (82, 71 in.·lbf)
Starter Assy
68 (694, 44)
Oil Pan Insulator
18 (180, 13)
M/T:
Manual
Transmission Assy
M/T:
Clutch Cover Assy
M/T:
Clutch Disc Assy
19 (195, 14)
178 (1815, 132)
M/T:
Flywheel Sub–assy
A/T:
Automatic
Transmission Assy
A/T:
Drive Plate
Spacer RR
41 (420, 30)
A/T:
Pump Impeller
Drive Plate
178 (1815, 132)
A/T:
Flywheel Sub–assy
N·m (kgf·cm, ft·lbf): Specified torque
P A74113
G38254

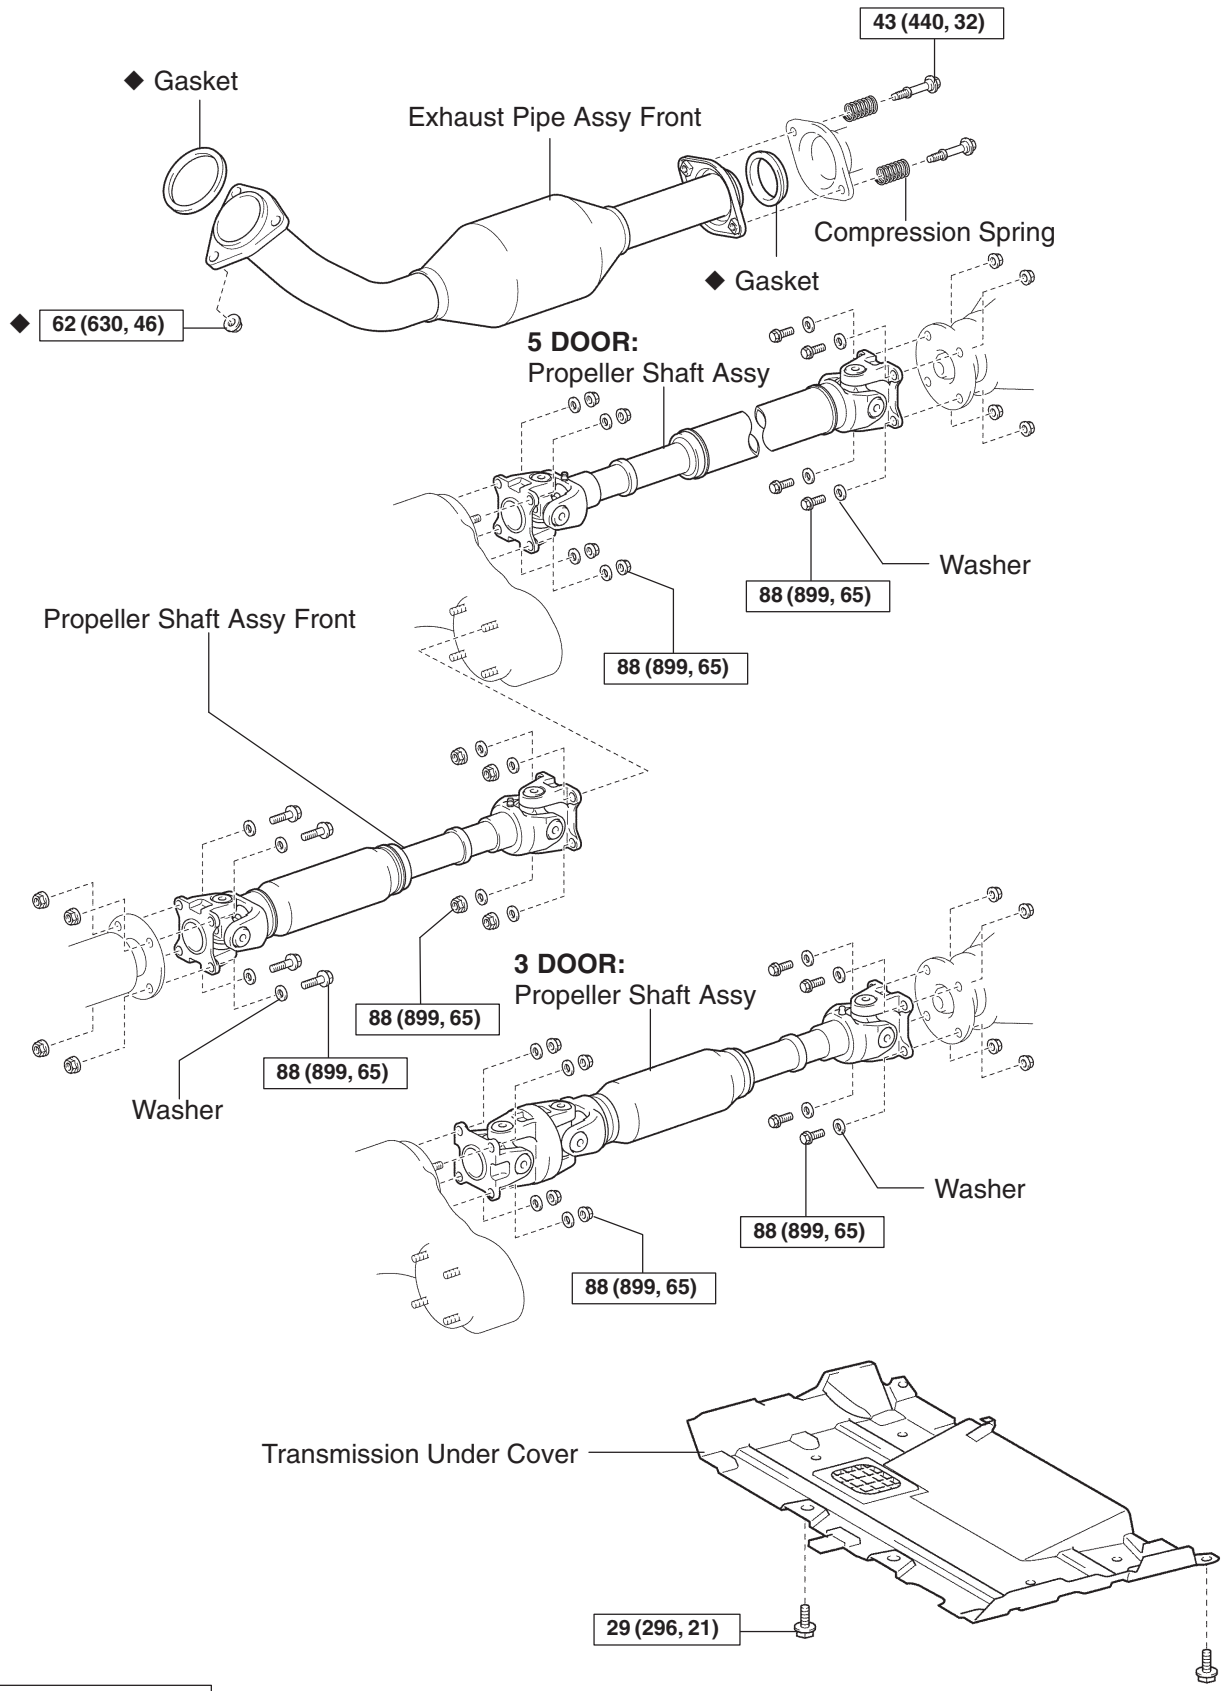



N·m (kgf·cm, ft·lbf): Specified torque

◆ Non–reusable part

A74114

G38256

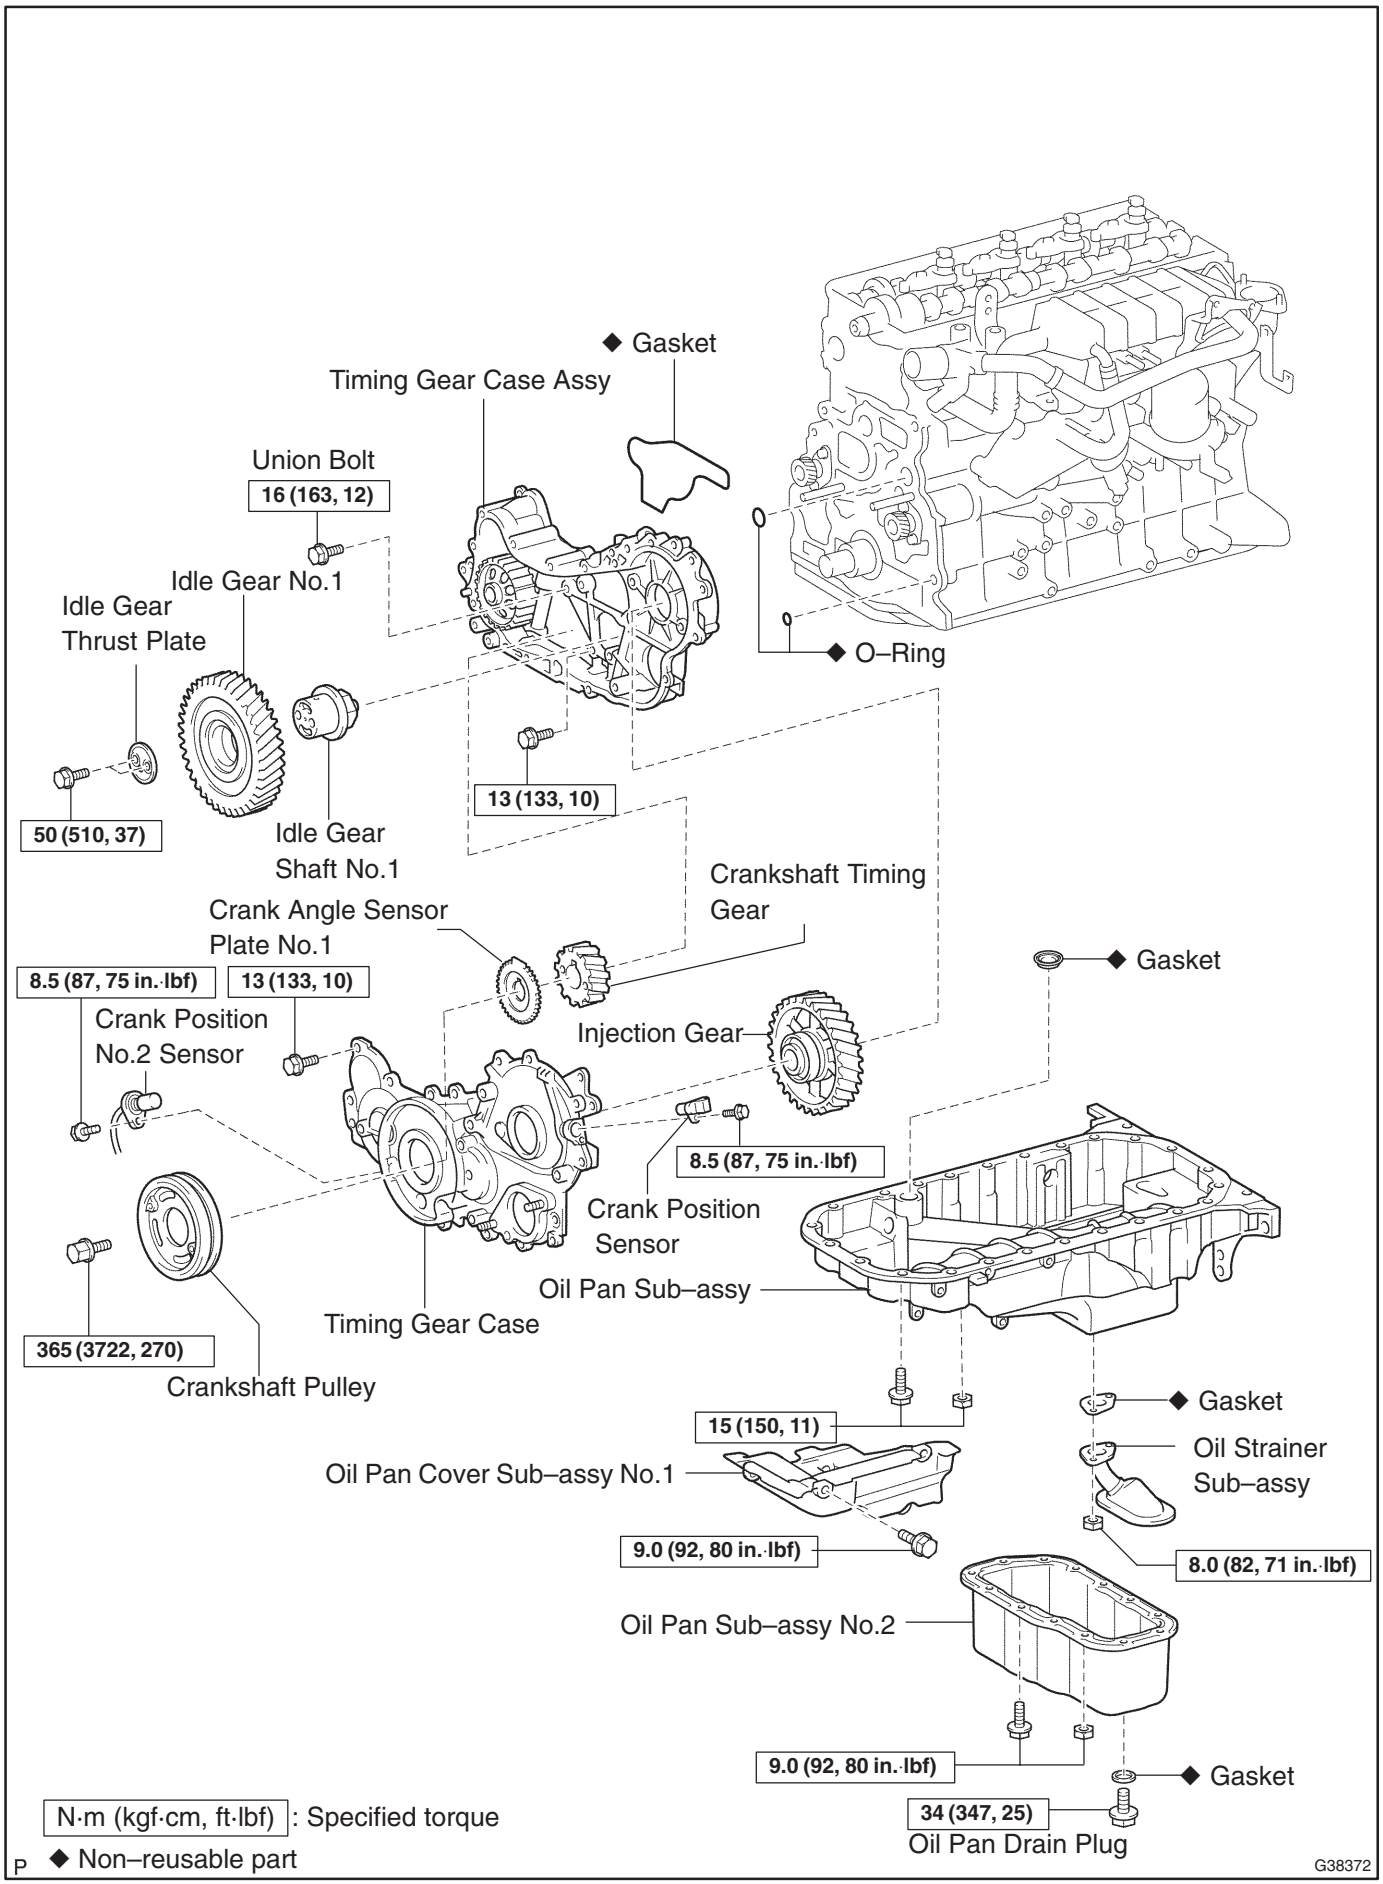
◆ Gasket
Timing Gear Case Assy
Union Bolt
16 (163, 12)
Idle Gear No.1
Idle Gear
Thrust Plate
◆ O–Ring
13 (133, 10)
50 (510, 37)
Idle Gear
Shaft No.1
Crankshaft Timing
Gear
Crank Angle Sensor
Plate No.1
◆ Gasket
8.5 (87, 75 in.·lbf)
13 (133, 10)
Crank Position
No.2 Sensor
Injection Gear
8.5 (87, 75 in.·lbf)
Crank Position
Sensor
Oil Pan Sub–assy
365 (3722, 270)
Timing Gear Case
Crankshaft Pulley
◆ Gasket
15 (150, 11)
Oil Strainer
Sub–assy
Oil Pan Cover Sub–assy No.1
9.0 (92, 80 in.·lbf)
8.0 (82, 71 in.·lbf)
Oil Pan Sub–assy No.2
9.0 (92, 80 in.·lbf)
◆ Gasket
34 (347, 25)
Oil Pan Drain Plug
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
G38372