
CAM POSITION SENSOR (2TR–FE)

REPLACEMENT

180E6–01

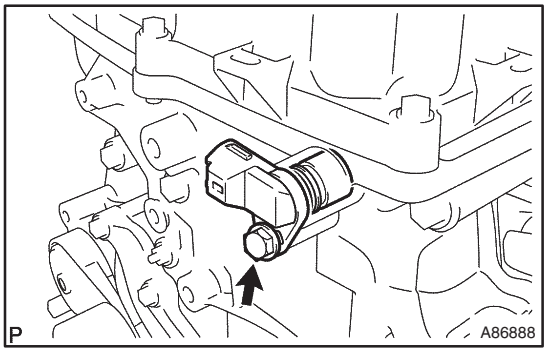

1. REMOVE CAM POSITION SENSOR

(a) Disconnect the cam position sensor connector.

(b) Remove the bolt and cam position sensor.

2. INSTALL CAM POSITION SENSOR

(a) Apply clean engine oil to the O–ring.

(b) Install the bolt and cam position sensor.

Torque: 8.5 N·m (87 kgf·cm, 75 in.·lbf)

(c) Connect the cam position sensor connector.

NOTICE:

Take care when installing the O–ring so that it should not break or get caught between parts.