
GENERATOR ASSY (2TR–FE)

19130–01


REPLACEMENT

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE FAN AND GENERATOR V BELT (SEE PAGE 14–9)**

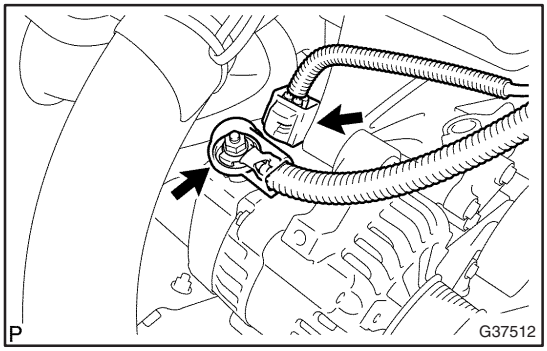

3. **REMOVE GENERATOR ASSY**

(a) Disconnect the wire harness.
   (1) Disconnect the connector from the generator assy.
   (2) Remove the terminal cap and the nut.
   (3) Disconnect the wire harness from terminal B.

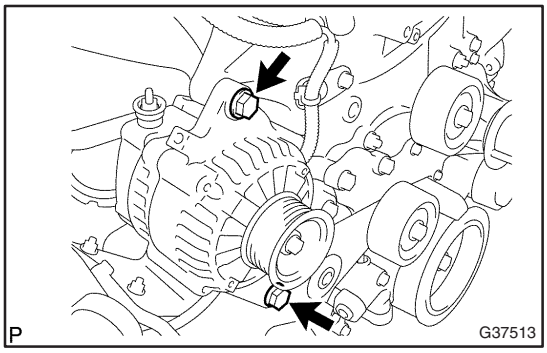

(b) Remove the 2 bolts and the generator assy.

4. **INSTALL GENERATOR ASSY**

(a) Install the generator assy with the 2 bolts.
Torque: 43 N·m (438 kgf·cm, 32 ft·lbf)

(b) Connect the wire harness.
   (1) Connect the wire harness to terminal B and install the nut.
   Torque: 9.8 N·m (100 kgf·cm, 87 in·lbf)
   (2) Connect the connector to the generator assy.

5. **INSTALL FAN AND GENERATOR V BELT (SEE PAGE 14–9)**
6. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**