


321DB–01

COMPONENTS

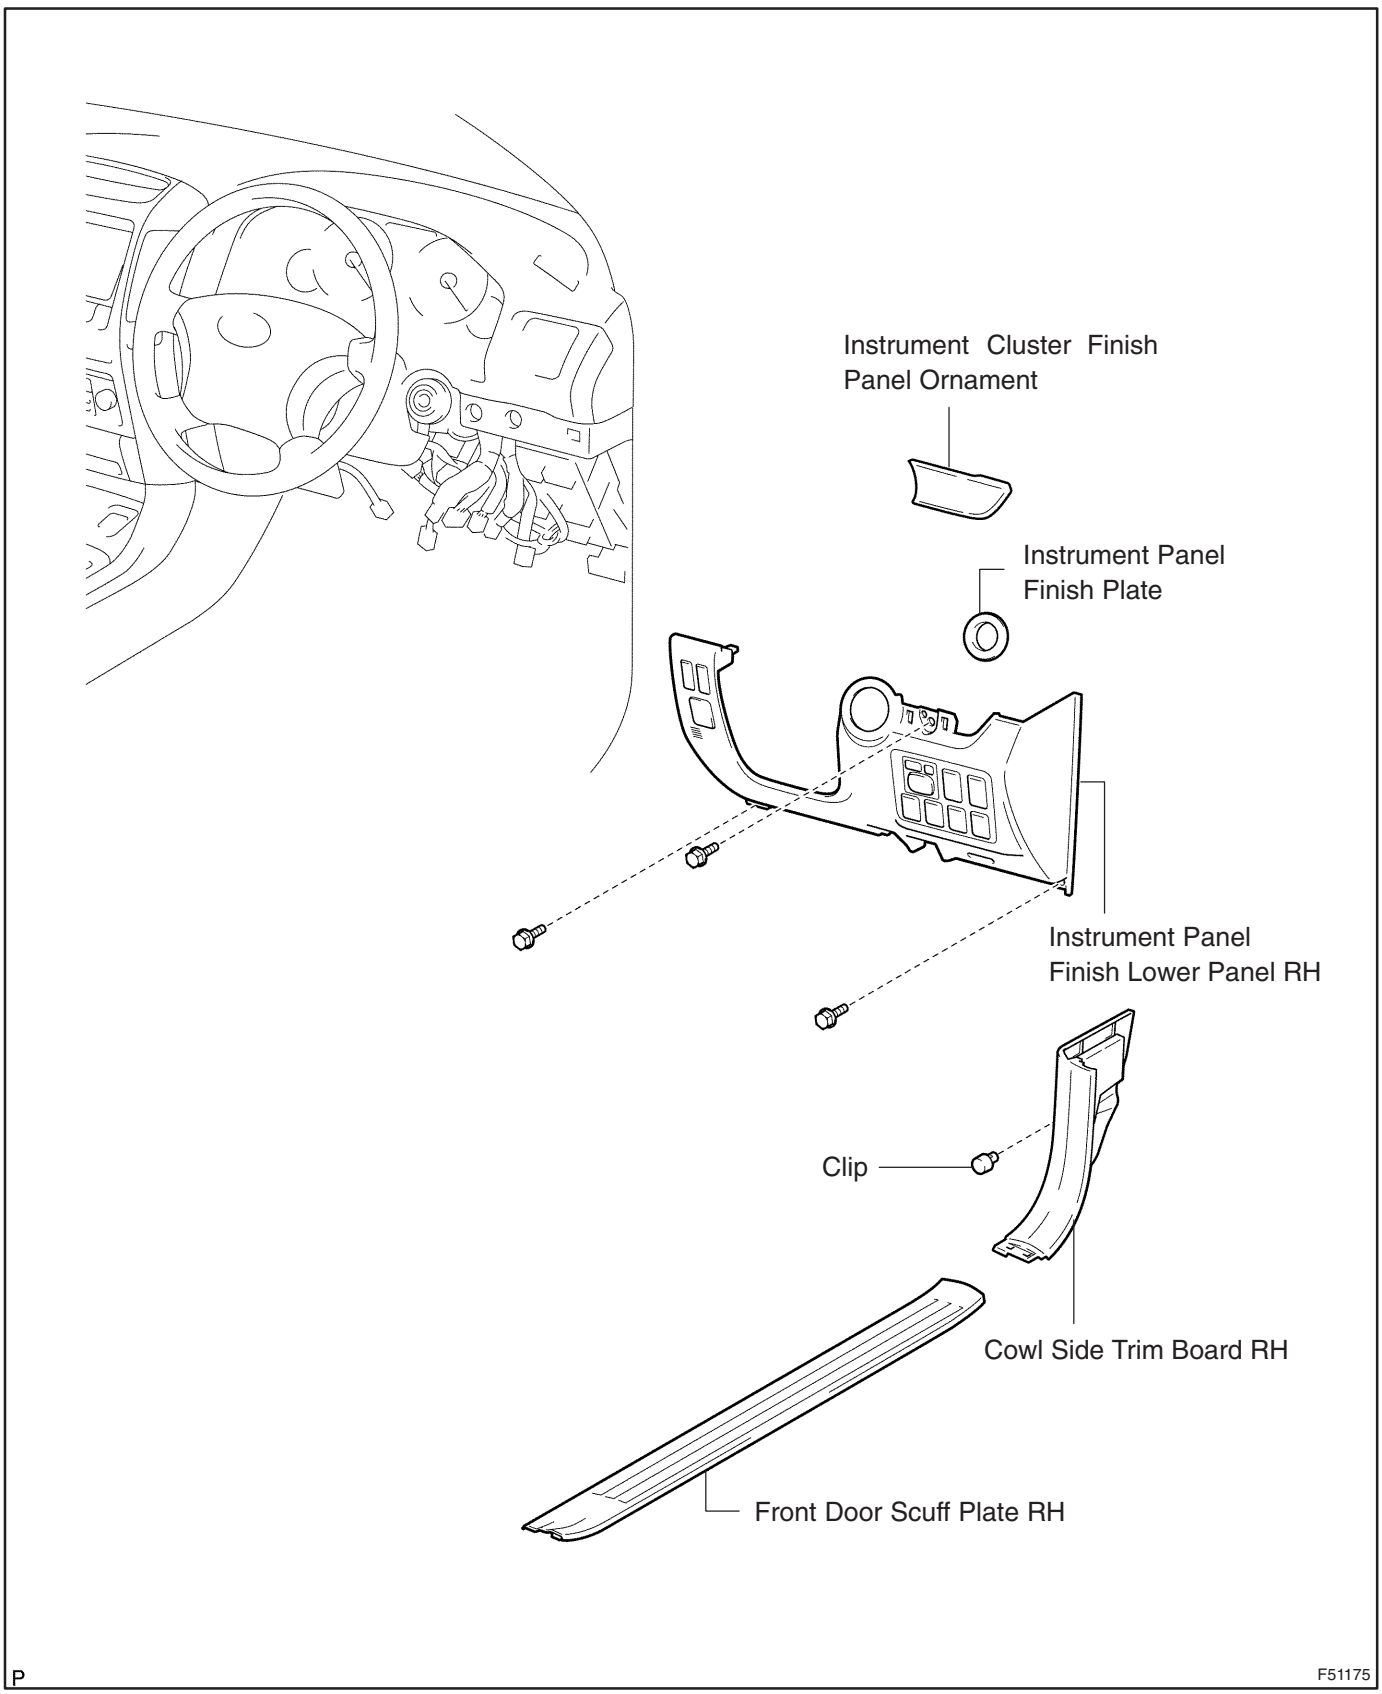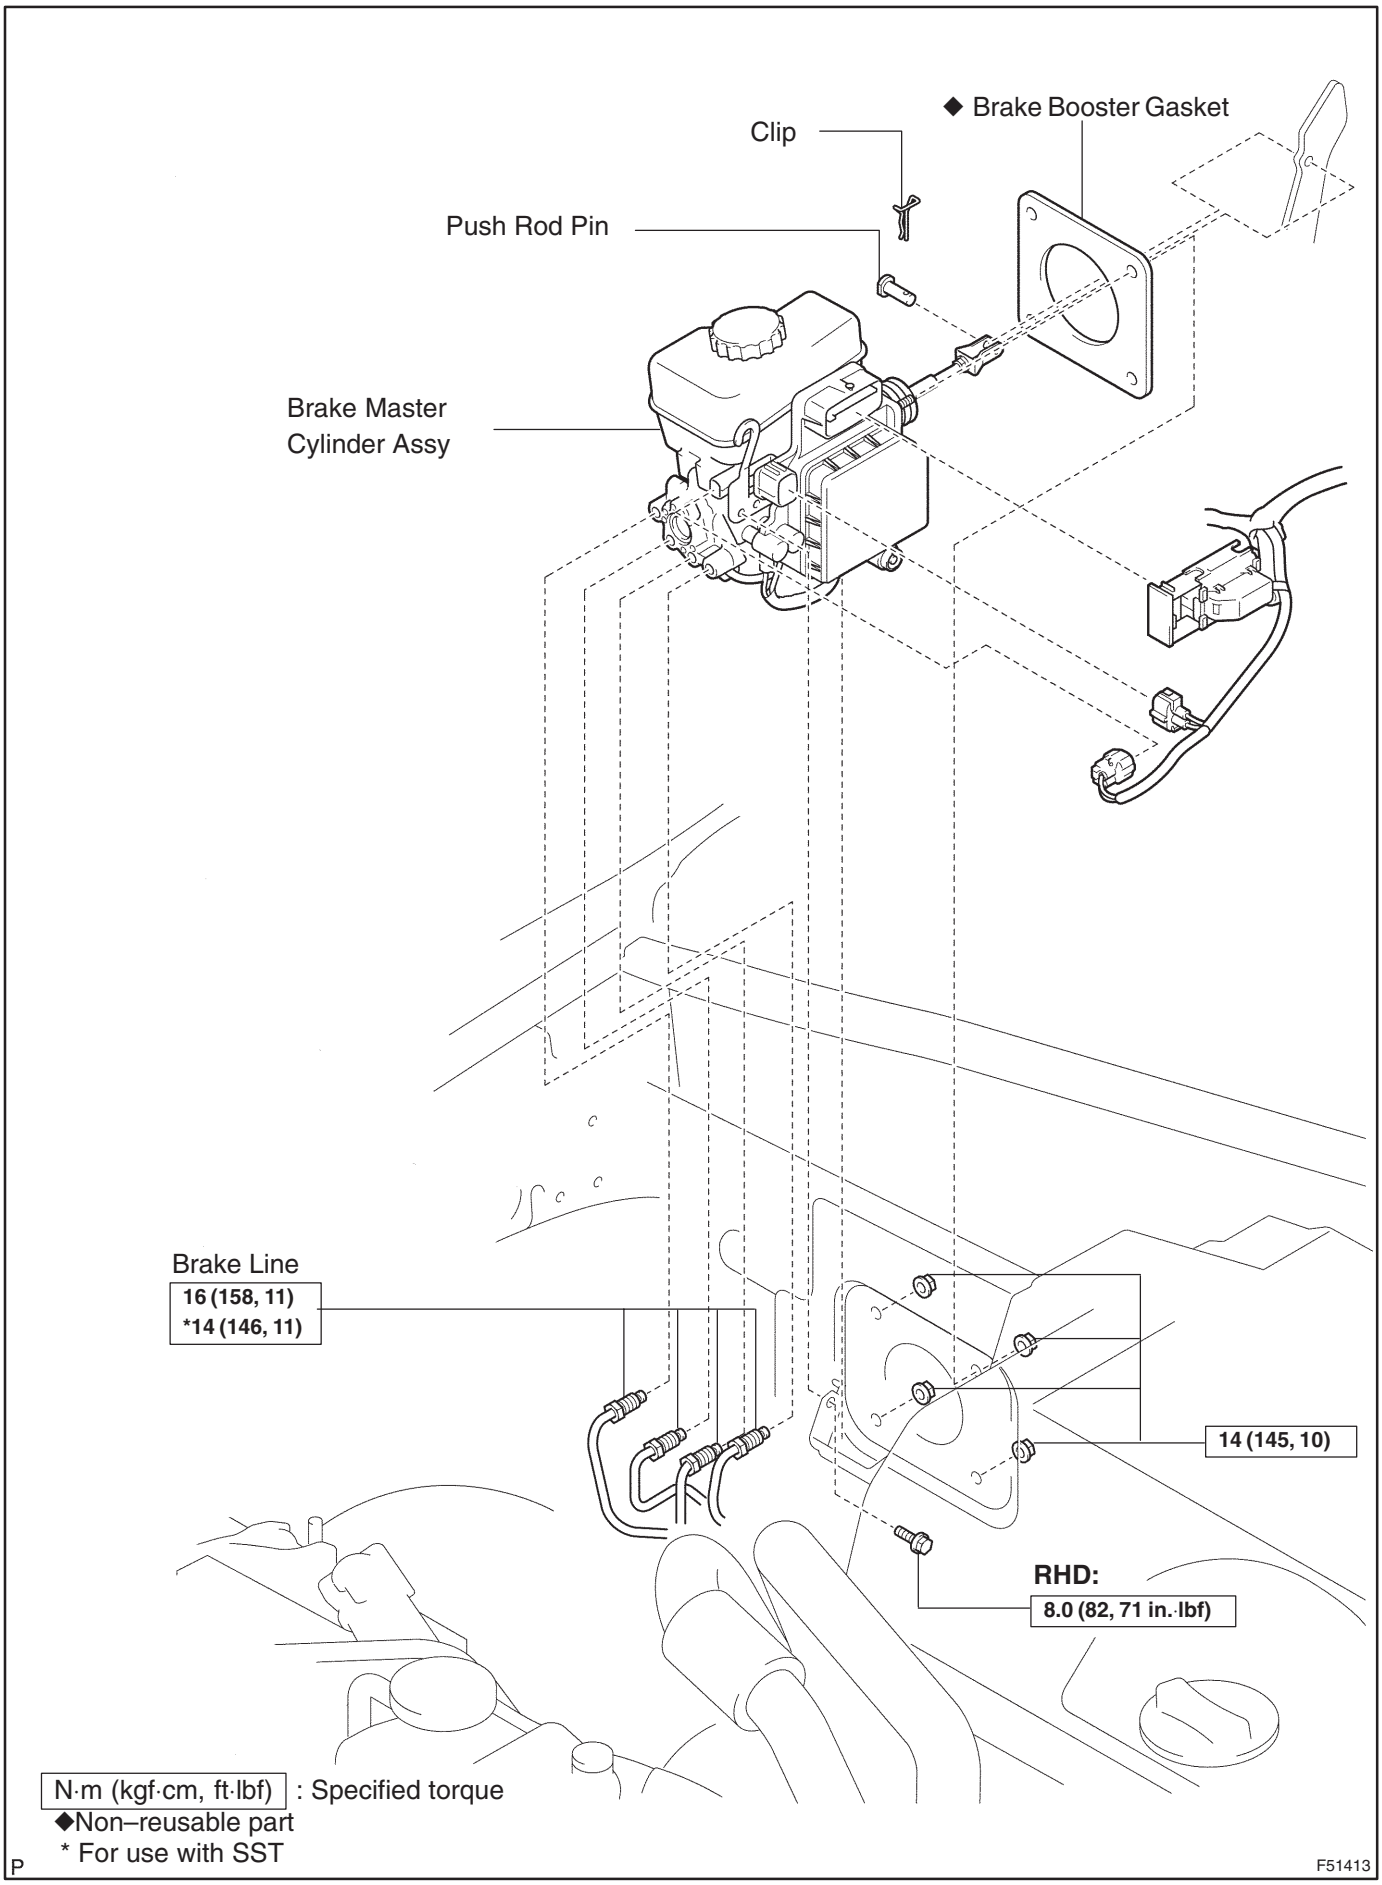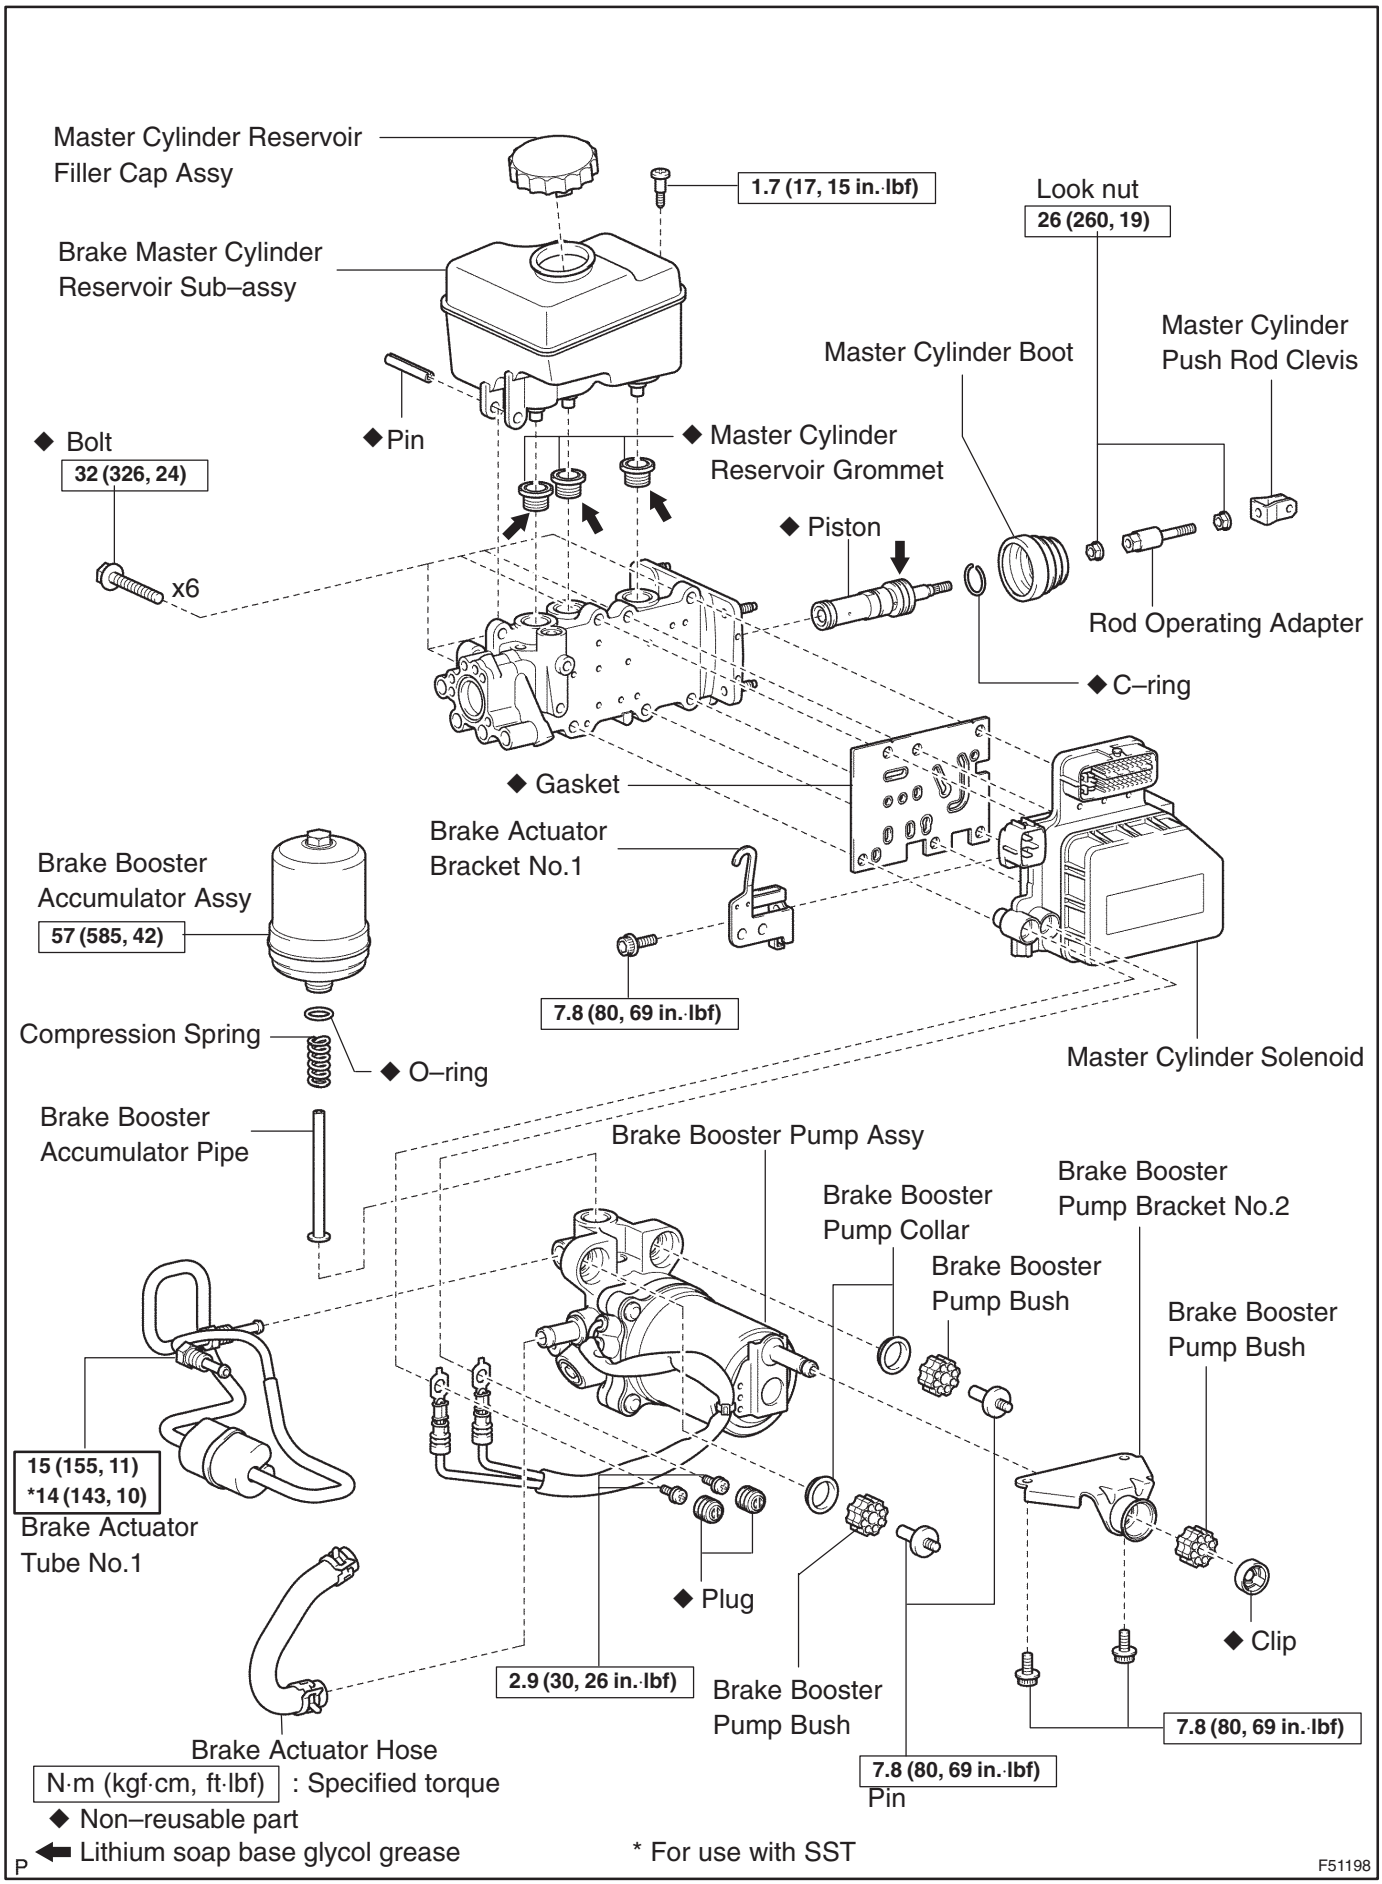


◆ Brake Booster Gasket
Clip
Push Rod Pin
Brake Master Cylinder Assy
Brake Line
16 (158, 11)
*14 (146, 11)
14 (145, 10)
RHD:
8.0 (82, 71 in.·lbf)
N·m (kgf·cm, ft·lbf) : Specified torque
◆Non–reusable part
* For use with SST
P
F51413


Master Cylinder Reservoir Filler Cap Assy
1.7 (17, 15 in.·lbf)
Look nut
26 (260, 19)
Brake Master Cylinder Reservoir Sub–assy
Master Cylinder Boot
Master Cylinder Push Rod Clevis
◆ Bolt
32 (326, 24)
x6
◆ Pin
◆ Master Cylinder Reservoir Grommet
◆ Piston
Rod Operating Adapter
◆ C–ring
◆ Gasket
Brake Actuator Bracket No.1
Brake Booster Accumulator Assy
57 (585, 42)
7.8 (80, 69 in.·lbf)
Compression Spring
◆ O–ring
Master Cylinder Solenoid
Brake Booster Accumulator Pipe
Brake Booster Pump Assy
Brake Booster Pump Collar
Brake Booster Pump Bush
Brake Booster Pump Bracket No.2
Brake Booster Pump Bush
15 (155, 11)
*14 (143, 10)
Brake Actuator Tube No.1
◆ Plug
◆ Clip
2.9 (30, 26 in.·lbf)
Brake Booster Pump Bush
7.8 (80, 69 in.·lbf)
Brake Actuator Hose
7.8 (80, 69 in.·lbf)
Pin
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
Lithium soap base glycol grease
* For use with SST
P
F51198