
STEERING SENSOR (W/VSC (1GR–FE/1KD–FTV))(From August, 2004)

321DC–01


REPLACEMENT

1. **PRECAUTION (SEE PUB. No. RM990E, PAGE 60–1)**
2. **DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PUB. No. RM990E, PAGE 60–1)**
3. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
4. **REMOVE STEERING WHEEL COVER LOWER NO.3 (SEE PUB. No. RM990E, PAGE 60–14)**
5. **REMOVE STEERING WHEEL COVER LOWER NO.2 (SEE PUB. No. RM990E, PAGE 60–14)**
6. **REMOVE HORN BUTTON ASSY (SEE PUB. No. RM990E, PAGE 60–14)**
7. **REMOVE STEERING WHEEL ASSY (SEE PUB. No. RM990E, PAGE 50–6)**
   SST 09950–50013 (09951–05010, 09952–05010, 09953–05020, 09954–05021)
8. **REMOVE STEERING COLUMN COVER (SEE PUB. No. RM990E, PAGE 50–6)**
9. **REMOVE SPIRAL CABLE SUB–ASSY (SEE PUB. No. RM990E, PAGE 60–22)**
10. **REMOVE TURN SIGNAL SWITCH ASSY (SEE PUB. No. RM990E, PAGE 65–24)**

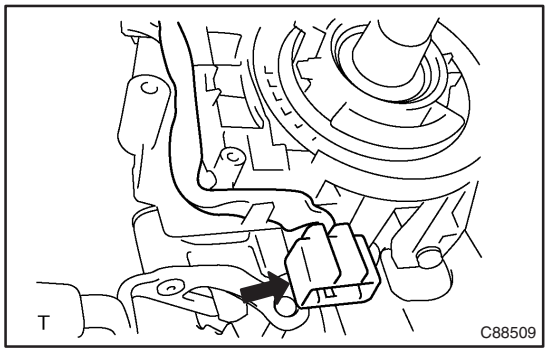


11. REMOVE STEERING SENSOR

(a) Remove the steering sensor connector.

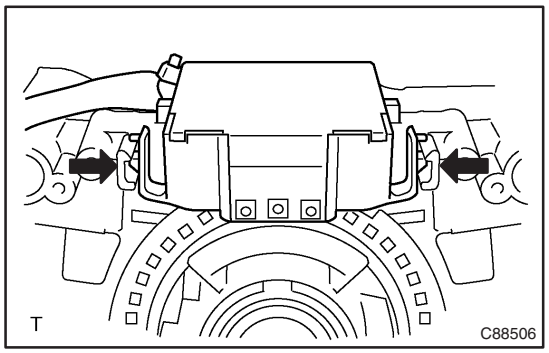


(b) Remove the 2 claws and remove the steering sensor.

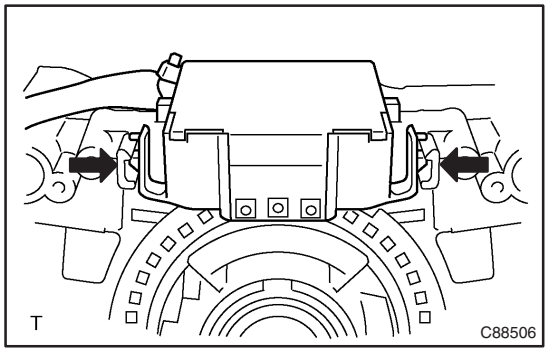

12. INSTALL STEERING SENSOR

(a) Install the steering sensor.

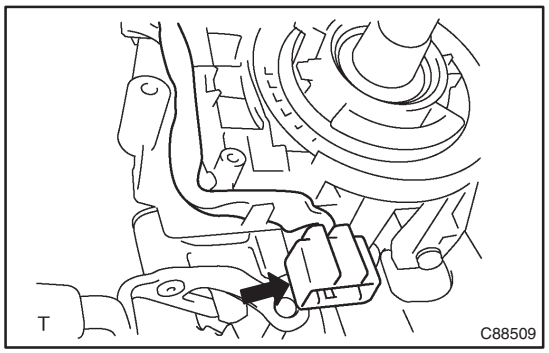

(b) Install the steering sensor connector.

13. INSTALL TURN SIGNAL SWITCH ASSY
14. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
15. INSPECT SPIRAL CABLE SUB–ASSY

(a) If the following conditions are identified, replace the spiral cable sub–assy with a new one.
Condition:
Scratches or cracks on the connector
Cracks, dents or chipping of the spiral cable sub–assy

16. INSTALL SPIRAL CABLE SUB–ASSY (SEE PUB. No. RM990E, PAGE 60–22)
17. INSTALL STEERING COLUMN COVER (SEE PUB. No. RM990E, PAGE 50–6)
18. CENTER SPIRAL CABLE (SEE PUB. No. RM990E, PAGE 60–22)
19. INSTALL STEERING WHEEL ASSY (SEE PUB. No. RM990E, PAGE 50–6)
20. INSPECT HORN BUTTON ASSY (SEE PUB. No. RM990E, PAGE 60–8)
21. INSTALL HORN BUTTON ASSY (SEE PUB. No. RM990E, PAGE 60–14)
22. INSTALL STEERING WHEEL COVER LOWER NO.2
23. INSTALL STEERING WHEEL COVER LOWER NO.3
24. INSPECT SRS WARNING LIGHT (SEE PUB. No. RM990E, PAGE 05–1122)