400CT–05

ADJUSTMENT


1. INSPECT PARK/NEUTRAL POSITION SWITCH ASSY

(a) Apply the parking brake and turn the ignition switch ON.

(b) Depress the brake pedal and check that the engine starts when the shift lever is set in the N or P position, but does not start in other positions.

(c) Check that the back–up light is lit and the reverse warning buzzer sounds when the shift lever is set in the R position, but do not function in other positions.

If a failure is found, check the park/neutral position switch for continuity.

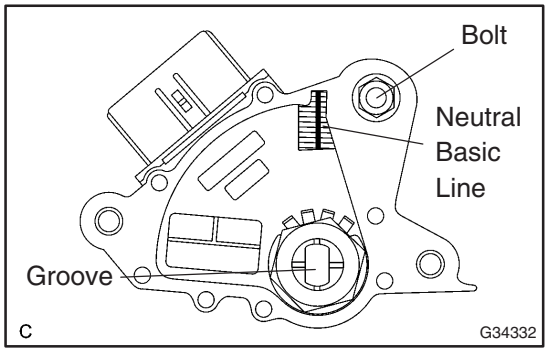

2. ADJUST PARK/NEUTRAL POSITION SWITCH ASSY

(a) Remove the 2 bolts and heat insulator.

(b) Loosen the bolt of the park/neutral position switch and set the shift lever to the N position.

(c) Align the groove and neutral basic line.

(d) Hold the switch in position and tighten the bolt.
Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)

(e) After adjustment, perform the inspection described in step 1.