
PARK/NEUTRAL POSITION SWITCH ASSY (A750F)

401GY–01

REPLACEMENT


1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL (SEE PAGE14–116)

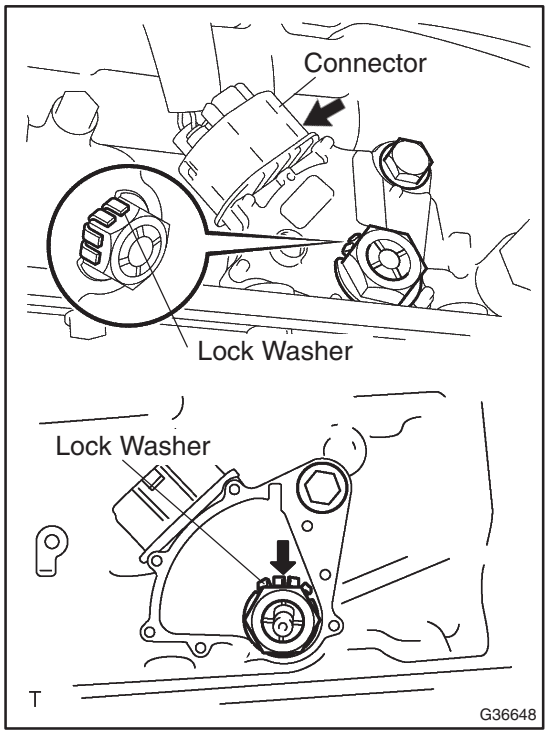

2. REMOVE PARK/NEUTRAL POSITION SWITCH ASSY


(a) Disconnect the park/neutral position switch connector.

(b) Using a screwdriver, unstake the lock washer.

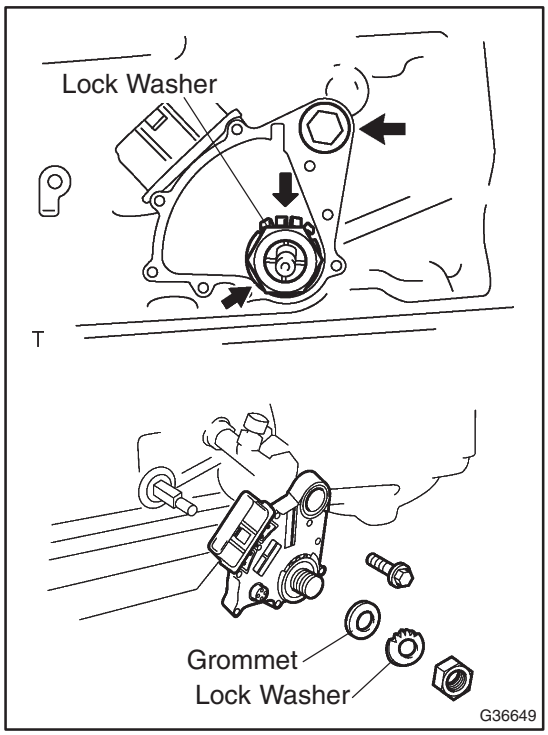

(c) Remove the nut, lock washer and grommet.


(d) Remove the bolt and park/neutral position switch.

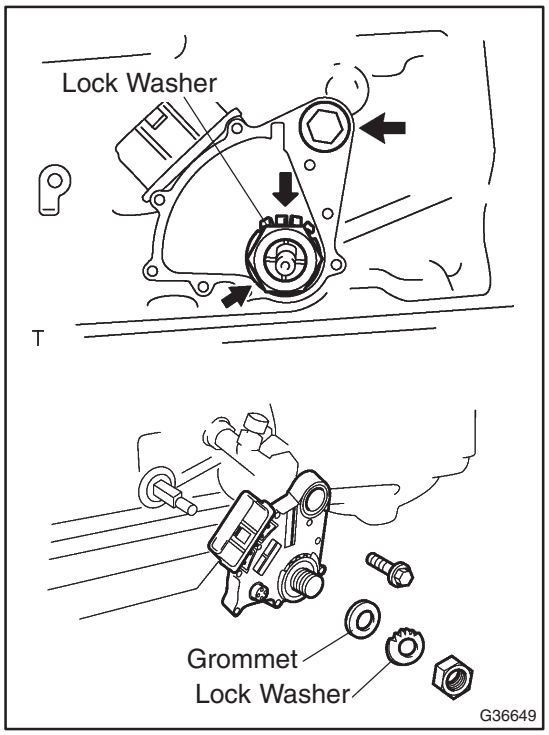


3. INSTALL PARK/NEUTRAL POSITION SWITCH ASSY

(a) Install the park/neutral position switch onto the manual valve lever shaft and temporarily tighten the bolt.


(b) Install the grommet and a new lock washer with the nut.
Torque: 6.9 N·m (70 kgf·cm, 61 in.·lbf)

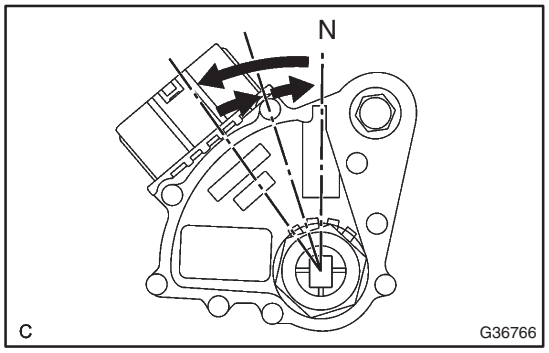

(c) Fully turn the manual lever shaft counterclockwise and turn it clockwise 2 notches to set it to the neutral position.

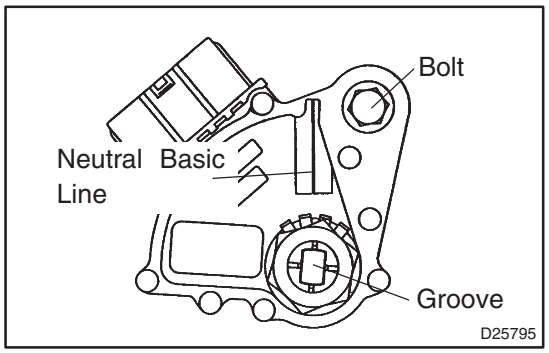

(d) Align the neutral basic line with the switch groove, and tighten the bolt.
Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)

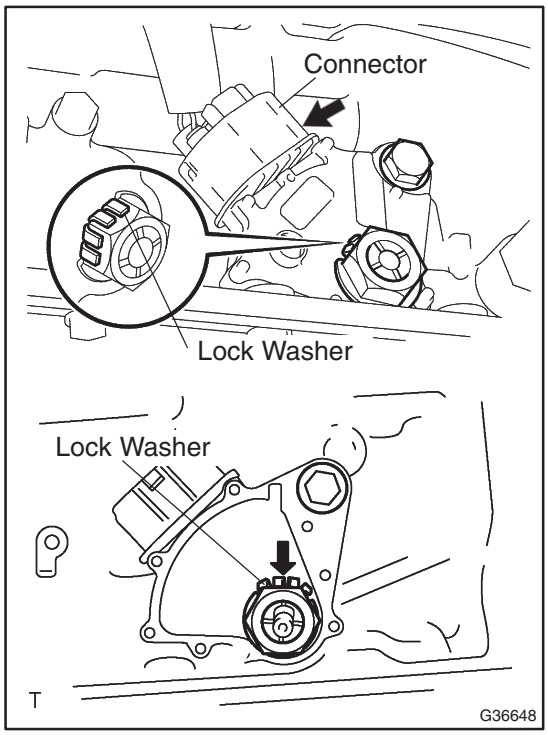

(e) Bend the tabs of the lock washer.

HINT:

Bend at least 2 tabs.

(f) Connect the park/neutral position switch connector.

4. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL (SEE PAGE 14–116)**
5. **INSPECT PARK/NEUTRAL POSITION SWITCH ASSY (SEE PAGE 40–17)**
6. **ADJUST PARK/NEUTRAL POSITION SWITCH ASSY (SEE PAGE 40–17)**
7. **ADJUST SHIFT LEVER POSITION (SEE PAGE 40–84)**
8. **INSPECT SHIFT LEVER POSITION (SEE PAGE 40–84)**