


AUTOMATIC TRANSMISSION ASSY (A343F (2TR–FE))

401GZ–01

COMPONENTS

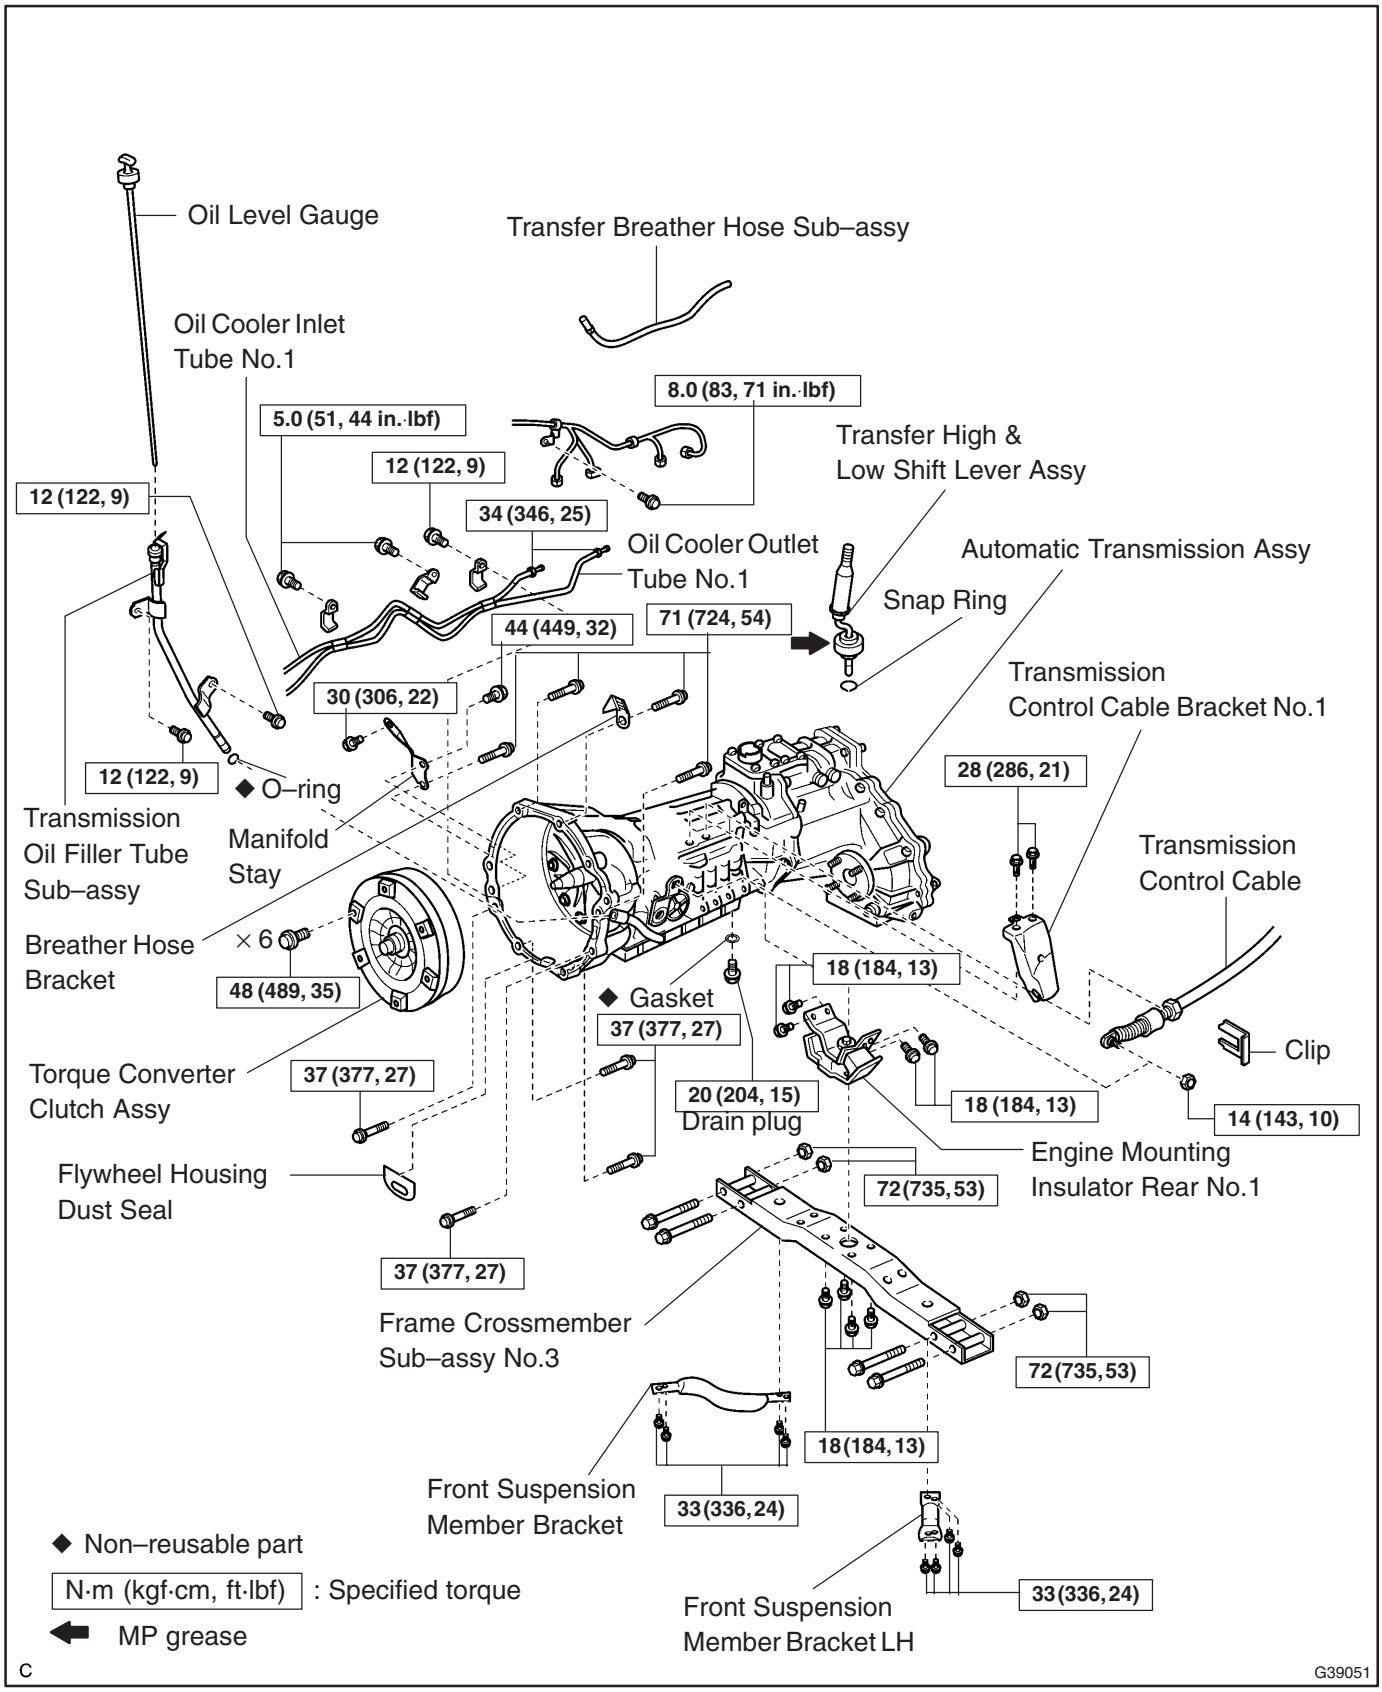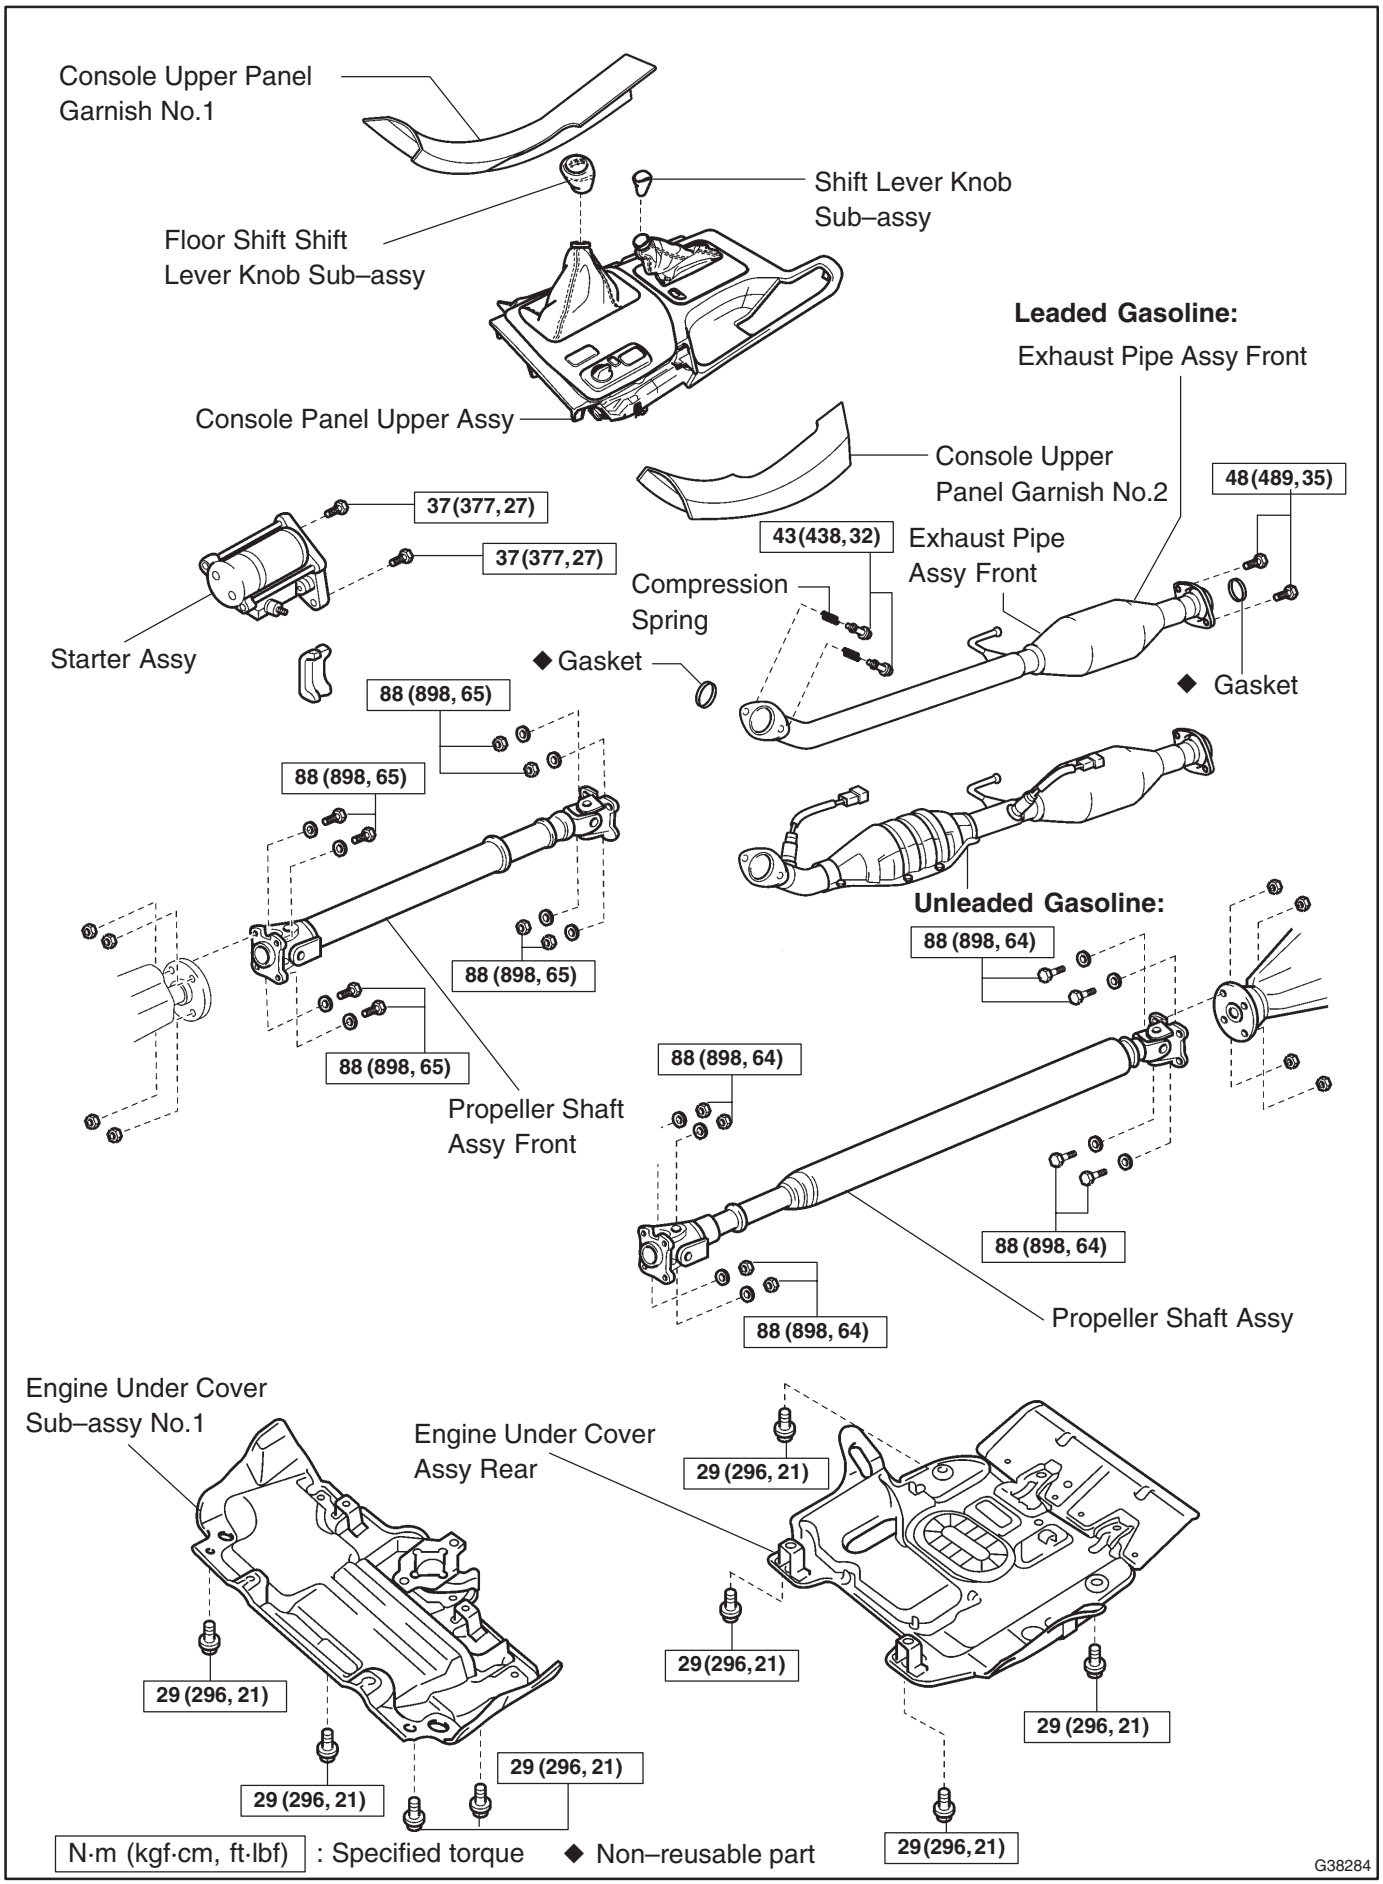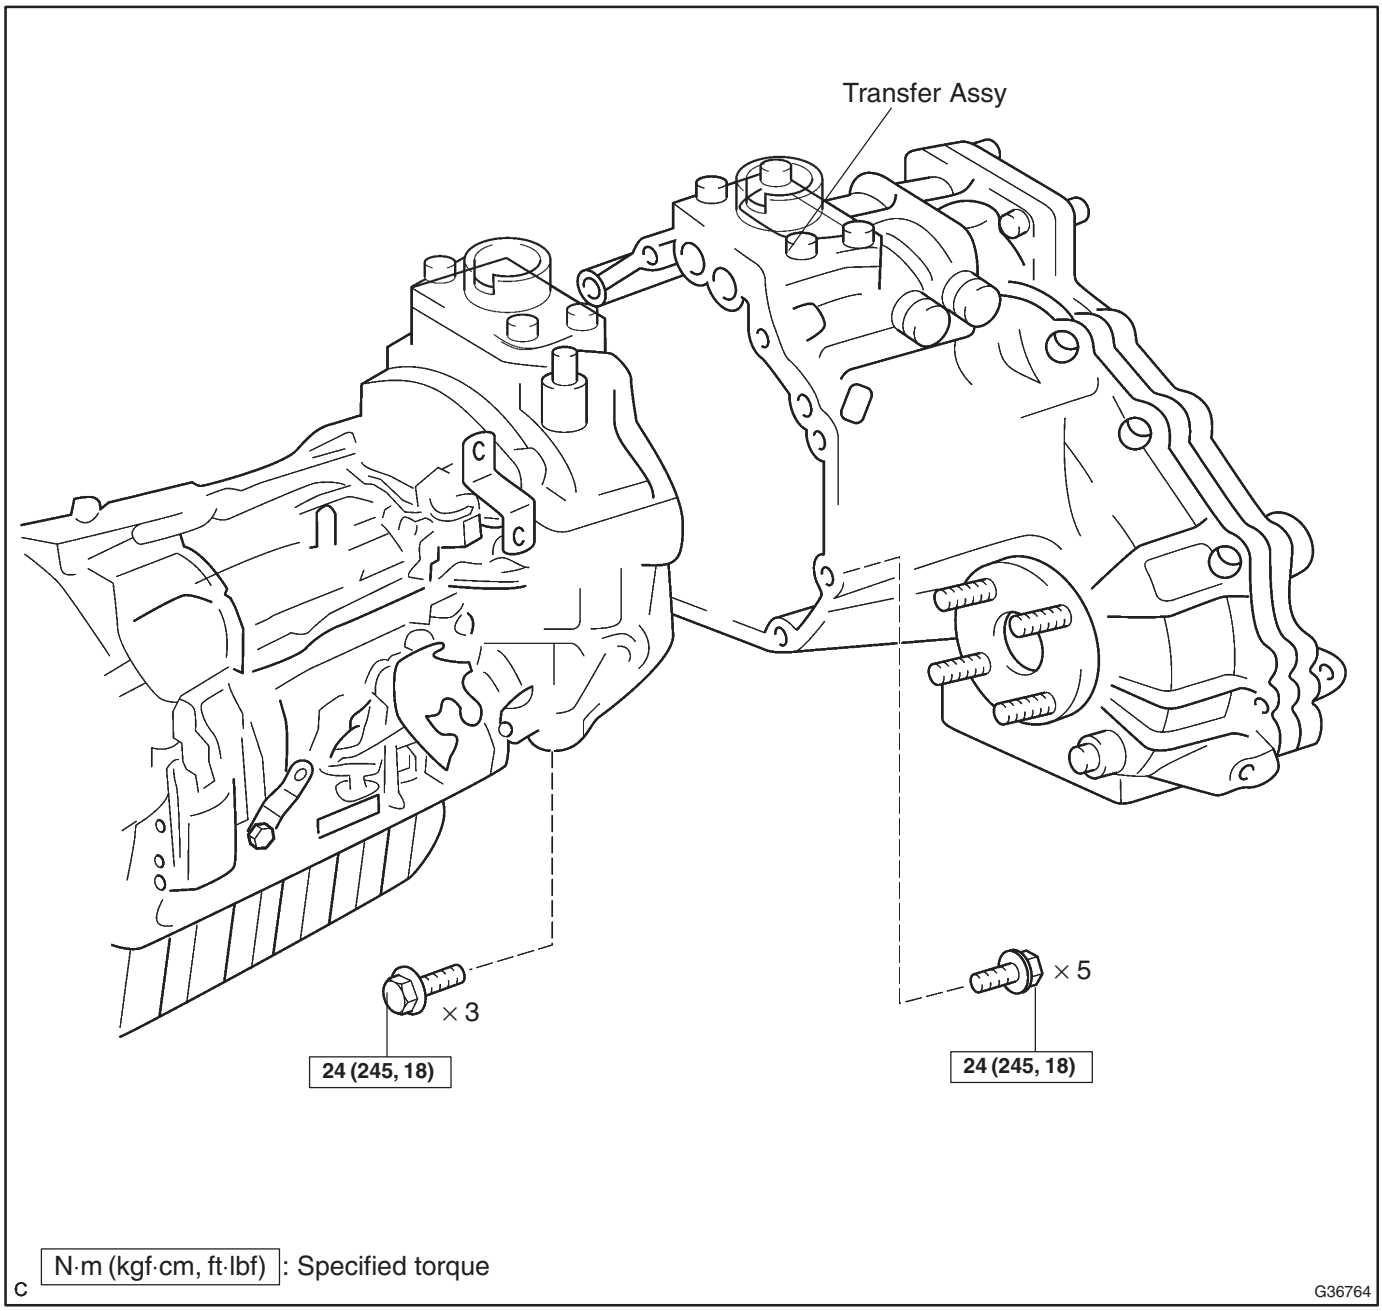


Console Upper Panel Garnish No.1
Shift Lever Knob Sub–assy
Floor Shift Shift Lever Knob Sub–assy
Console Panel Upper Assy
Leaded Gasoline:
Exhaust Pipe Assy Front
Console Upper Panel Garnish No.2
48 (489, 35)
43 (438, 32)
Exhaust Pipe Assy Front
37 (377, 27)
37 (377, 27)
Compression Spring
Starter Assy
◆ Gasket
◆ Gasket
88 (898, 65)
88 (898, 65)
88 (898, 65)
88 (898, 65)
Unleaded Gasoline:
88 (898, 64)
88 (898, 64)
88 (898, 64)
88 (898, 64)
Propeller Shaft Assy Front
Propeller Shaft Assy
Engine Under Cover Sub–assy No.1
Engine Under Cover Assy Rear
29 (296, 21)
29 (296, 21)
29 (296, 21)
29 (296, 21)
29 (296, 21)
29 (296, 21)
29 (296, 21)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
G38284


Transfer Assy
C
C
× 3
24 (245, 18)
× 5
24 (245, 18)
C
N·m (kgf·cm, ft·lbf) : Specified torque
G36764