
OIL COOLER ASSY (A750F (1GR–FE))

401H4–01

REPLACEMENT

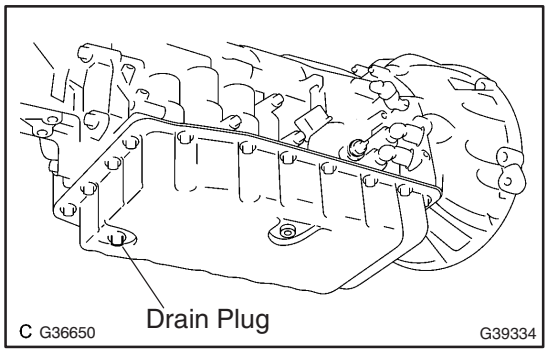


1. DRAIN AUTOMATIC TRANSMISSION FLUID

(a) Remove the drain plug and gasket, and drain the ATF.

(b) Install a new gasket and the drain plug.

Torque: 28 N·m (285 kgf·cm, 21 ft·lbf)

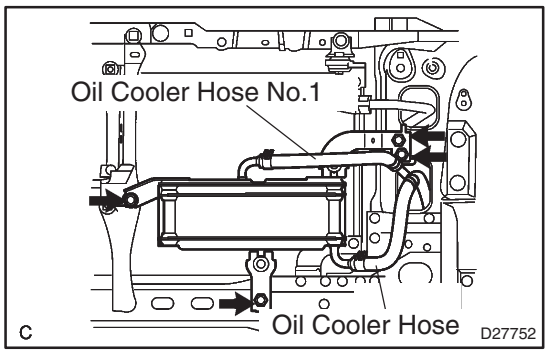


2. REMOVE OIL COOLER ASSY

(a) Loosen the clip and disconnect the oil cooler hose.

(b) Loosen the clip and disconnect the transmission oil cooler hose No.1.

(c) Remove the 4 bolts and oil cooler assy.

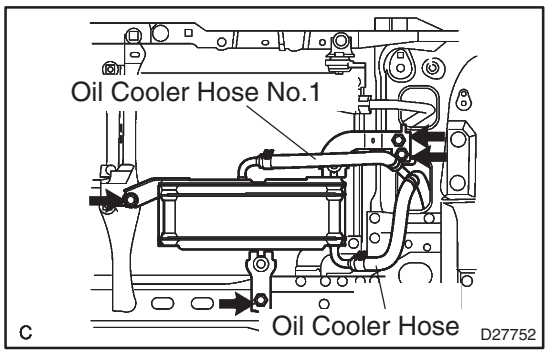

3. INSTALL OIL COOLER ASSY

(a) Install the oil cooler assy with the 4 bolts.

Torque: 5.0 N·m (51 kgf·cm, 40 in.·lbf)

(b) Install the transmission oil cooler hose No.1 with the clip.

(c) Install the oil cooler hose with the clip.

4. ADD AUTOMATIC TRANSMISSION FLUID (SEE PAGE 40–2)

5. INSPECT AUTOMATIC TRANSMISSION FLUID (SEE PAGE 40–2)