
KEY INTER LOCK SOLENOID (A750F)

INSPECTION

400D1–04

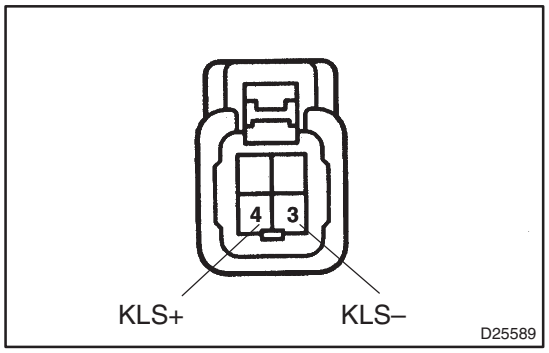

1. INSPECT KEY INTER LOCK SOLENOID

(a) Disconnect the solenoid connector.

(b) Connect terminal KLS+ (4) to the battery positive (+) terminal, and terminal KLS– (3) to the battery negative (–) terminal, and apply about 12V between terminals KLS+ and KLS–.

Check that an operation noise can be heard from the solenoid.

If the solenoid does not operate, replace the solenoid.