
TRANSMISSION CONTROL CABLE ASSY (A750F)

400TU–04


REPLACEMENT

1. **SEPARATE BATTERY NEGATIVE TERMINAL (SEE PAGE 14–116)**
2. **REMOVE SHIFT LEVER KNOB SUB–ASSY (SEE PAGE 40–79)**
3. **REMOVE FLOOR SHIFT SHIFT LEVER KNOB SUB–ASSY (SEE PAGE 40–79)**
4. **REMOVE CONSOLE UPPER PANEL GARNISH NO.1 (See Pub. No. RM990E, page 71–13)**
5. **REMOVE CONSOLE UPPER PANEL GARNISH NO.2 (See Pub. No. RM990E, page 71–13)**
6. **REMOVE CONSOLE PANEL UPPER (See Pub. No. RM990E, page 71–13)**
7. **REMOVE CONSOLE PANEL UPPER REAR (See Pub. No. RM990E, page 71–13)**

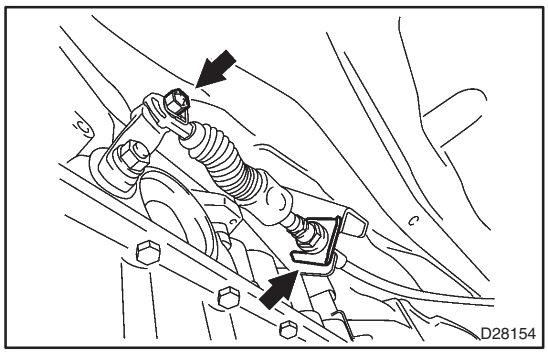

8. SEPARATE TRANSMISSION CONTROL CABLE ASSY

(a) Remove the nut and clip, and disconnect the transmission control cable assy from the automatic transmission.

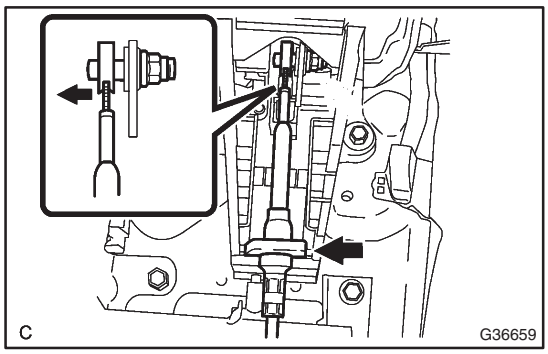


(b) Remove the clip and separate the transmission control cable assy from the floor shift lever assy.

HINT:

When the transmission control cable end is pressed, it can be removed from the floor shift lever.


NOTICE:

Do not remove the nut.

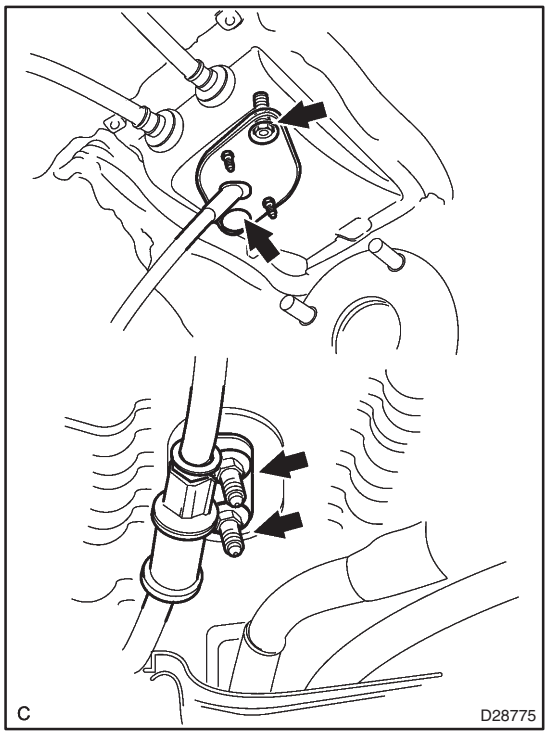

9. REMOVE TRANSMISSION CONTROL CABLE ASSY

(a) Remove the 4 nuts and pull out the transmission control cable assy.

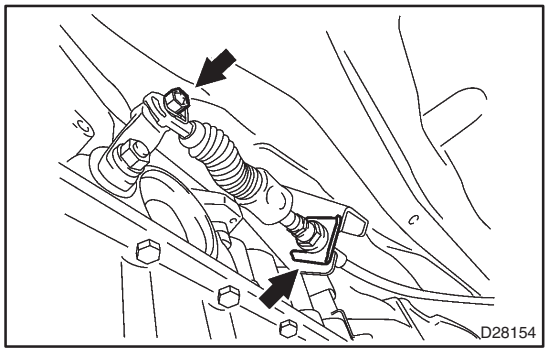


10. INSTALL TRANSMISSION CONTROL CABLE ASSY

(a) Install the transmission cable with the nut and clip on the transmission.

Torque: 14 N·m (143 kgf·cm, 10 ft·lbf)


(b) Pull in the transmission control cable assy into the body.

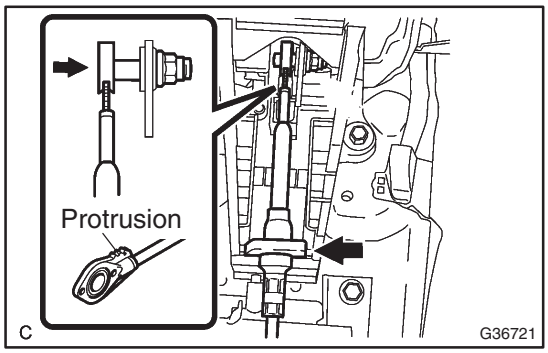

(c) Connect the transmission control cable assy to the floor shift lever assy with the clip.

NOTICE:

Install transmission control cable assy with the protrusion facing upward.

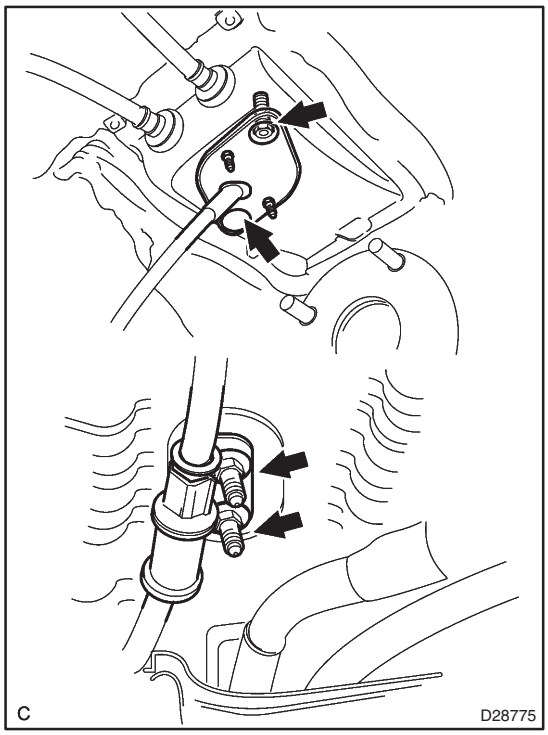

(d) Install the transmission control cable assy with the 4 nuts.
Torque: 5.5 N·m (56 kgf·cm, 49 in.·lbf)

11. **INSTALL CONSOLE PANEL UPPER REAR (See Pub. No. RM990E, page 71–13)**
12. **INSTALL CONSOLE PANEL UPPER (See Pub. No. RM990E, page 71–13)**
13. **INSTALL CONSOLE UPPER PANEL GARNISH NO.1 (See Pub. No. RM990E, page 71–13)**
14. **INSTALL CONSOLE UPPER PANEL GARNISH NO.2 (See Pub. No. RM990E, page 71–13)**
15. **INSTALL FLOOR SHIFT SHIFT LEVER KNOB SUB–ASSY (SEE PAGE 40–79)**
16. **INSTALL SHIFT LEVER KNOB SUB–ASSY (SEE PAGE 40–79)**
17. **ADJUST SHIFT LEVER POSITION (SEE PAGE 40–79)**
18. **INSPECT SHIFT LEVER POSITION (SEE PAGE 40–79)**