
MANUAL TRANSMISSION OIL (MTM)(2TR–FE/1GR–FE/1KD–FTV)

4103K–05

ON–VEHICLE INSPECTION

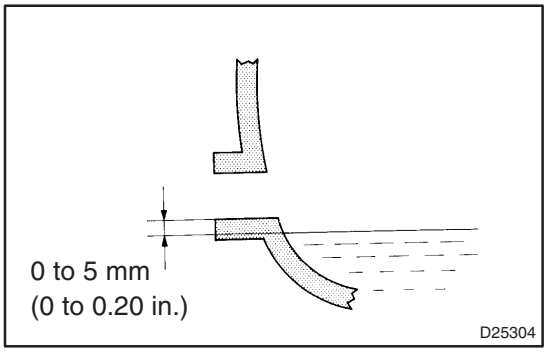

1. CHECK TRANSMISSON OIL

(a) Park the vehicle on a level place.

(b) Remove the transmission filler plug and gasket.

(c) Check that the surface of the oil is within 5 mm (0.20 in.) from the lowest position of the inner surface of the transmission filler plug opening.

NOTICE:

- **An excessively large or small amount of oil may cause problems.**
- **After replacing the oil, drive the vehicle and check the oil level.**

(d) Check for oil leakage when the oil level is low.

(e) Install the transmission filler plug and a new gasket.
Torque: 37 N·m (377 kgf·cm, 27 ft·lbf)