

710Q2–01

INSPECTION

REVERSE SHIFT WARNING BUZZER (6M/T)

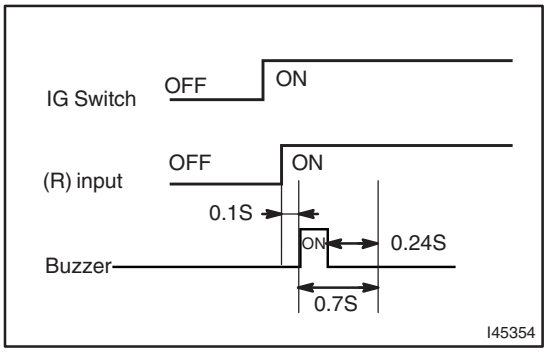

(a) Turn the ignition switch ON and move the shift lever to the reverse position, check that the buzzer sounds.
Buzzer sound: about 0.5 seconds

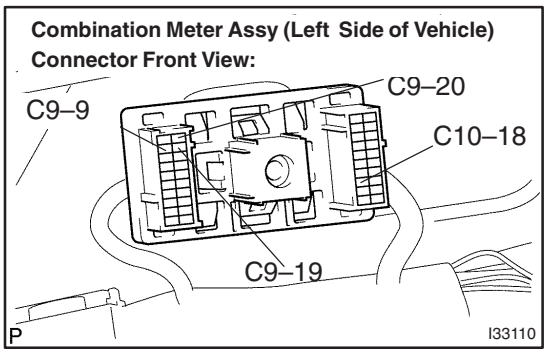

(b) Remove the combination meter.
(c) Connect the positive (+) lead from battery to terminals C9–19 and C9–20, and negative (–) lead to terminal C9–9.
(d) Connect the positive (+) lead from battery to terminal C10–18, and check that the buzzer sounds.
Buzzer sound: about 0.5 seconds