
WATER PUMP ASSY (2TR–FE)

INSPECTION

1610Q–01

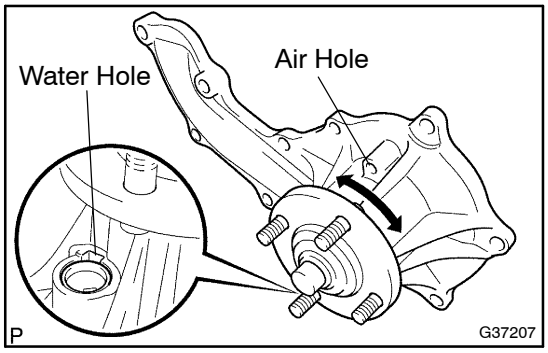

1. INSPECT WATER PUMP ASSY

(a) Visually check the water hole and air hole for coolant leakage.

If leakage is found, replace the water pump assy.

(b) Turn the pulley, and check that the pump bearing moves smoothly and quietly.

If it moves roughly or noisily, replace the water pump assy.