
REPAIR INSTRUCTION FOR MANUAL TRANSMISSION REPAIR MANUAL

010IZ–02

PRECAUTION

1. BASIC REPAIR HINT

1

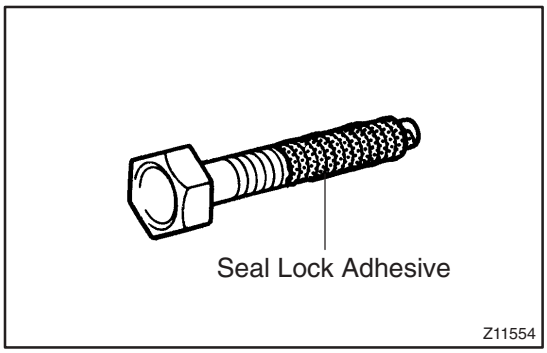

(a) PRECOATED PARTS

(1) Precoated parts are bolts, nuts, etc. that are coated with a seal lock adhesive at the factory.

(2) If a precoated part is retightened, loosened or caused to move in any way, it must be recoated with the specified adhesive.

(3) When reusing precoated parts, clean off the old adhesive and dry with compressed air. Then apply the specified seal lock adhesive to the bolt, nut or threads.

NOTICE:

Do the torque checking with the lower limit value of the torque tolerance.

(4) Depending on the seal lock agent to apply, there may be a case where it is necessary to leave it for a specified time until it hardens.

(b) GASKETS

When necessary, use a sealer on gaskets to prevent leaks.

(c) BOLTS, NUTS AND SCREWS

Carefully observe all specifications for bolt tightening torques. Always use a torque wrench.