




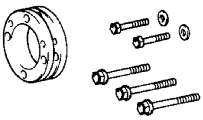













FUEL









PREPARATION

02207–01




SST

	09023–12700	Union Nut Wrench 17mm	INJECTOR ASSY(1KD–FTV) INJECTION OR SUPPLY PUMP ASSY(1KD–FTV) COMMON RAIL ASSY(1KD–FTV)
	09213–14010	Crankshaft Pulley Holding Tool	INJECTION OR SUPPLY PUMP ASSY(5L–E)
	(91651–60865)	Bolt	INJECTION OR SUPPLY PUMP ASSY(5L–E)
	09213–54015	Crankshaft Pulley Holding Tool	INJECTION OR SUPPLY PUMP ASSY(5L–E)
	(91651–60855)	Bolt	INJECTION OR SUPPLY PUMP ASSY(5L–E)
	09213–58013	Crankshaft Pully Holding Tool	INJECTION OR SUPPLY PUMP ASSY(1KD–FTV)
	09228–10002	Oil Filter Wrench	COMMON RAIL ASSY(1KD–FTV)
	09228–64010	Fuel Filter Wrench	FUEL FILTER ELEMENT SUB–ASSY (5L–E) FUEL FILTER ELEMENT(1KZ–TE)
	09228–64040	Fuel Filter Wrench	FUEL FILTER ELEMENT SUB–ASSY (1KD–FTV)
	09268–41047	Injection Measuring Tool Set	FUEL SYSTEM(3RZ–FE)
	(09268–41110)	Adaptor	FUEL SYSTEM(3RZ–FE)
	(09268–41300)	Clamp	FUEL SYSTEM(3RZ–FE)

	(95336–08070)	Hose	FUEL SYSTEM(3RZ–FE)
	09268–64010	Injection Nozzle Wrench Set	NOZZLE HOLDER AND NOZZLE SET(5L–E) NOZZLE HOLDER AND NOZZLE SET(1KZ–TE)
	(09268–64020)	Injection Nozzle Holder Retaining Nut Wrench	NOZZLE HOLDER AND NOZZLE SET(5L–E) NOZZLE HOLDER AND NOZZLE SET(1KZ–TE)
	09280–00010	Union Bolt,inspection	INJECTOR ASSY(1KD–FTV)
	09330–00021	Companion Flange Holding Tool	INJECTION OR SUPPLY PUMP ASSY(5L–E) INJECTION OR SUPPLY PUMP ASSY(1KD–FTV)
	09817–33190	Sensor Socket Wrench	FUEL TEMPERATURE SENSOR (1KD–FTV)
	09842–30070	Wire ”F” EFI Inspection	FUEL SYSTEM(3RZ–FE)
	(09268–41091)	NO.7 Union	FUEL SYSTEM(3RZ–FE)
	(95333–06030)	Hose	FUEL SYSTEM(3RZ–FE)
	09950–50013	Puller C Set	INJECTION OR SUPPLY PUMP ASSY(5L–E) INJECTION OR SUPPLY PUMP ASSY(1KZ–TE) INJECTION OR SUPPLY PUMP ASSY(1KD–FTV)
	(09951–05010)	Hanger 150	INJECTION OR SUPPLY PUMP ASSY(5L–E) INJECTION OR SUPPLY PUMP ASSY(1KZ–TE) INJECTION OR SUPPLY PUMP ASSY(1KD–FTV)
	(09952–05010)	Slide Arm	INJECTION OR SUPPLY PUMP ASSY(5L–E) INJECTION OR SUPPLY PUMP ASSY(1KZ–TE) INJECTION OR SUPPLY PUMP ASSY(1KD–FTV)

	(09953–05010)	Center Bolt 100	INJECTION OR SUPPLY PUMP ASSY(5L–E)
	(09953–05020)	Center Bolt 150	INJECTION OR SUPPLY PUMP ASSY(5L–E) INJECTION OR SUPPLY PUMP ASSY(1KZ–TE) INJECTION OR SUPPLY PUMP ASSY(1KD–FTV)
	(09954–05010)	Claw No.1	INJECTION OR SUPPLY PUMP ASSY(1KZ–TE)
	(09954–05021)	Claw No.2	INJECTION OR SUPPLY PUMP ASSY(5L–E) INJECTION OR SUPPLY PUMP ASSY(1KD–FTV)
	(09954–05030)	Claw No.3	INJECTION OR SUPPLY PUMP ASSY(5L–E)
	09960–10010	Variable Pin Wrench Set	INJECTION OR SUPPLY PUMP ASSY(5L–E)
	(09962–01000)	Variable Pin Wrench Arm Assy	INJECTION OR SUPPLY PUMP ASSY(5L–E)
	(09963–01000)	Pin 10	INJECTION OR SUPPLY PUMP ASSY(5L–E)
	09992–00242	Turbocharger Pressure Gauge	INJECTOR ASSY(1KD–FTV)

Recomended Tools

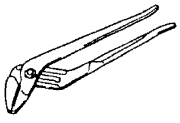	09082–00040	TOYOTA Electrical Tester	FUEL SYSTEM(3RZ–FE) FUEL SYSTEM(1KD–FTV)
	(09083–00150)	Test Lead Set	FUEL SYSTEM(3RZ–FE) FUEL SYSTEM(1KD–FTV)
	09130–00150	Water Pump Pliers	FUEL FILTER ELEMENT SUB–ASSY (5L–E) FUEL FILTER ELEMENT(1KZ–TE)

SSM

08826–00080	Seal Packing Black or equivalent (FIPG)	INJECTOR ASSY(1KD–FTV)

Equipment

Belt tension gauge	
Clip	
Dial indicator	
Hexagon wrench (10 mm)	
Measuring flask	
Ohmmeter	
Press	
Radiator cap tester	
Service wire harness	
Steel square	
Stopwatch	
Termometer	
Torque wrench	
Vernier calipers	