






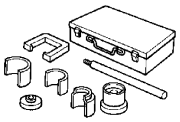









FRONT SUSPENSION

PREPARATION



021ZA–01

SST

	09223–00010	Cover & Seal Replacer	FRONT SUSPENSION ARM SUB–ASSY LOWER NO.1 LH
	09612–30012	Steering Worm Bearing Puller	FRONT SUSPENSION ARM SUB–ASSY LOWER NO.1 LH
	09613–26010	Steering Worm Bearing Cone Remover	FRONT SUSPENSION UPPER ARM ASSY LH
	09628–00011	Ball Joint Puller	FRONT SUSPENSION ARM SUB–ASSY LOWER NO.1 LH
	09628–62011	Boll Joint Puller	FRONT SUSPENSION UPPER ARM ASSY LH
	09632–36010	Steering Vane Pump Bearing Replacer	FRONT SUSPENSION ARM SUB–ASSY LOWER NO.1 LH
	09710–22021	Front Suspension Bushing Tool Set	FRONT SHOCK ABSORBER WITH COIL SPRING FRONT SUSPENSION UPPER ARM ASSY LH
	(09710–01031)	Upper Arm Bushing Replacer	FRONT SUSPENSION UPPER ARM ASSY LH
	(09710–01071)	Lower Arm Bushing Remover	FRONT SHOCK ABSORBER WITH COIL SPRING
	(09710–01081)	Lower Arm Bushing Replacer	FRONT SHOCK ABSORBER WITH COIL SPRING
	09710–26010	Rear Suspension Bushing Tool Set	FRONT SUSPENSION UPPER ARM ASSY LH FRONT SUSPENSION ARM SUB–ASSY LOWER NO.1 LH
	(09710–05061)	Replacer	FRONT SUSPENSION UPPER ARM ASSY LH

	(09710–05081)	Rear Base	FRONT SUSPENSION ARM SUB–ASSY LOWER NO.1 LH
	09727–00060	”Arm Set ””C”””	FRONT SHOCK ABSORBER WITH COIL SPRING
	09727–30021	Coil Spring Compressor	FRONT SHOCK ABSORBER WITH COIL SPRING
	(09727–00010)	Bolt Set	FRONT SHOCK ABSORBER WITH COIL SPRING
	(09727–00031)	Compressor	FRONT SHOCK ABSORBER WITH COIL SPRING
	09950–00020	Bearing Remover	FRONT SUSPENSION UPPER ARM ASSY LH FRONT SUSPENSION ARM SUB–ASSY LOWER NO.1 LH
	09950–60010	Replacer Set	FRONT SUSPENSION ARM SUB–ASSY LOWER NO.1 LH
	(09951–00400)	Replacer 40	FRONT SUSPENSION ARM SUB–ASSY LOWER NO.1 LH
	09950–60020	Replacer Set No.2	FRONT SUSPENSION ARM SUB–ASSY LOWER NO.1 LH
	(09951–00890)	Replacer 89	FRONT SUSPENSION ARM SUB–ASSY LOWER NO.1 LH

Recomended Tools

	09040–00011	Hexagon Wrench Set	FRONT SHOCK ABSORBER WITH COIL SPRING STABILIZER BAR FRONT
	(09043–20060)	Socket Hexagon Wrench 6	FRONT SHOCK ABSORBER WITH COIL SPRING STABILIZER BAR FRONT

Equipment

Torque wrench	
Dial indicator with magnetic base	
Tire pressure gauge	
Alignment tester	
Toe–in gauge	
Angle gauge	