











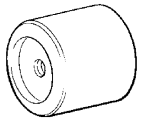








DRIVE SHAFT / PROPELLER SHAFT






PREPARATION

021ZU–01


SST

	09023–00100	Union Nut Wrench 10 mm	FRONT AXLE HUB SUB–ASSY LH FRONT AXLE LH HUB BOLT REAR AXLE SHAFT LH
	09240–00020	Wire Gauge Set	FRONT DRIVE SHAFT ASSY LH
	09308–00010	Oil Seal Puller	FRONT AXLE HUB SUB–ASSY LH REAR AXLE SHAFT LH
	09332–25010	Propeller Shaft Center Bearing Replacer	PROPELLER SHAFT ASSY FRONT PROPELLER SHAFT ASSY
	09520–01010	Drive Shaft Remover Attachment	FRONT DRIVE SHAFT ASSY LH
	09520–24010	Differential Side Gear Shaft Puller	FRONT DRIVE SHAFT ASSY LH
	(09520–32040)	Shocker Set	FRONT DRIVE SHAFT ASSY LH
	09521–24010	Rear Axle Shaft Puller	FRONT DRIVE SHAFT ASSY LH
	09521–25011	Rear Axle Shaft Puller	REAR AXLE SHAFT LH
	09521–25021	Rear Axle Shaft Puller Attachment	REAR AXLE SHAFT LH
	09527–10011	Rear Axle Shaft Bearing Remover	FRONT DRIVE SHAFT ASSY LH
	09527–17011	Rear Axle Shaft Bearing Remover	FRONT AXLE HUB SUB–ASSY LH

	09611–12010	Tie Rod End Puller	FRONT AXLE LH HUB BOLT
	09628–62011	Boll Joint Puller	FRONT DRIVE SHAFT ASSY LH FRONT AXLE HUB SUB–ASSY LH
	09636–20010	Upper Ball Joint Dust Cover Replacer	PROPELLER SHAFT ASSY FRONT PROPELLER SHAFT ASSY
	09649–17010	Steering Knuckle Tool	FRONT AXLE HUB SUB–ASSY LH
	09650–17011	Hub Bolt Remover	REAR AXLE SHAFT LH REAR AXLE LH HUB BOLT
	09710–30021	Suspension Bushing Tool Set	FRONT AXLE HUB SUB–ASSY LH
	(09710–03051)	Bushing Replacer	FRONT AXLE HUB SUB–ASSY LH
	09950–00020	Bearing Remover	FRONT DRIVE SHAFT ASSY LH
	09950–40011	Puller B Set	FRONT AXLE HUB SUB–ASSY LH
	(09951–04020)	Hanger 200	FRONT AXLE HUB SUB–ASSY LH
	(09952–04010)	Slide Arm	FRONT AXLE HUB SUB–ASSY LH
	(09953–04020)	Center Bolt 150	FRONT AXLE HUB SUB–ASSY LH
	(09954–04010)	Arm 25	FRONT AXLE HUB SUB–ASSY LH

	(09955–04061)	Claw No.6	FRONT AXLE HUB SUB–ASSY LH
	(09957–04010)	Attachment	FRONT AXLE HUB SUB–ASSY LH
	(09958–04011)	Holder	FRONT AXLE HUB SUB–ASSY LH
	09950–60020	Replacer Set No.2	REAR AXLE SHAFT LH
	(09951–00770)	Replacer 77	REAR AXLE SHAFT LH
	09950–70010	Handle Set	FRONT AXLE HUB SUB–ASSY LH REAR AXLE SHAFT LH
	(09951–07100)	Handle 100	FRONT AXLE HUB SUB–ASSY LH
	(09951–07150)	Handle 150	REAR AXLE SHAFT LH
	09951–01000	Replacer 100	FRONT AXLE HUB SUB–ASSY LH

Recomended Tools

	09905–00012	Snap Ring No.1 Expander	FRONT DRIVE SHAFT ASSY LH REAR AXLE SHAFT LH

Equipment

Torque wrench	
Dial indicator with magnetic base	
Spring tension gauge	