






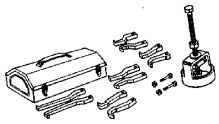

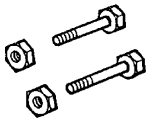








TRANSFER




PREPARATION

02204–01

SST

	09223–15020	Oil Seal & Bearing Replacer	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	09223–46011	Crankshaft Front Oil Seal Replacer	TRANSFER EXTENSION HOUSING TYPE T OIL SEAL TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	09304–12012	Input Shaft Front Bearing Replacer	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	09308–00010	Oil Seal Puller	TRANSFER CASE OIL SEAL TRANSFER EXTENSION HOUSING TYPE T OIL SEAL
	09316–60011	Transmission & Transfer Bearing Replacer	TRANSFER CASE OIL SEAL TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	(09316–00011)	Replacer Pipe	TRANSFER CASE OIL SEAL TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	(09316–00031)	Replacer ”B”	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	(09316–00071)	Replacer ”F”	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	09330–00021	Companion Flange Holding Tool	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	09515–30010	Rear Wheel Bearing Replacer	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	09554–30011	Differential Oil Seal Replacer	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	09555–55010	Differential Drive Pinion Bearing Replacer	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)

	09612–65014	Steering Worm Bearing Puller	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	(09612–01030)	Claw "C"	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	(09612–01050)	Hanger Pin with Nut	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	09631–32020	Seal Ring Tool	TRANSFER EXTENSION HOUSING TYPE T OIL SEAL TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	09950–40011	Puller B Set	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	(09951–04020)	Hanger 200	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	(09952–04010)	Slide Arm	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	(09953–04030)	Center Bolt 200	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	(09954–04010)	Arm 25	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	(09955–04051)	Claw No.5	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	(09957–04010)	Attachment	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	(09958–04011)	Holder	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	09950–60010	Replacer Set	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)

	(09951–00320)	Replacer 32	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	(09951–00570)	Replacer 57	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	(09951–00590)	Replacer 59	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	09950–70010	Handle Set	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)
	(09951–07100)	Handle 100	TRANSFER ASSY(VF2A) TRANSFER ASSY(VF4BM)

Equipment

Dial indicator with magnetic base	
Micrometer	
Torque wrench	
Plastic hammer	
Vernier calipers	

Lubricant

Transfer oil	1.4 liters (1.5 US qts, 1.2 Imp. qts)	API GL–5 SAE 75W–90

SSM (Special Service Materials)

	08826–00090	”Seal Packing 1281,” THREE BOND 1281 or equivalent (FIPG)