













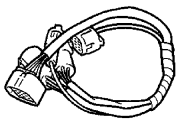
BRAKE

PREPARATION




021ZO–01

SST

	09023–00100	Union Nut Wrench 10 mm	BRAKE ACTUATOR ASSY FRONT BRAKE BRAKE MASTER CYLINDER ASSY (W/ VSC) BRAKE MASTER CYLINDER ASSY (W/O VSC) BRAKE BOOSTER ASSY LOAD SENSING W/SPRING VALVE ASSY BRAKE FLUID(W/O VSC)
	09318–12010	Transfer Bearing Adjusting Nut Wrench	BRAKE MASTER CYLINDER ASSY (W/ VSC)
	09608–04031	Front Hub Inner Bearing Cone Replacer	VACUUM PUMP ASSY(1KD–FTV/1KZ–TE)
	09630–00014	Power Steering Gear Housing Overhaul Tool Set	BRAKE MASTER CYLINDER ASSY (W/ VSC)
	(09631–00142)	Overhaul Stand	BRAKE MASTER CYLINDER ASSY (W/ VSC)
	09737–00020	Brake Booster Push Rod Wrench	BRAKE MASTER CYLINDER ASSY (W/O VSC) BRAKE BOOSTER ASSY
	09922–10010	Variable Open Wrench	VACUUM PUMP ASSY(5L–E)
	09950–50013	Puller C Set	STEERING SENSOR
	(09951–05010)	Hanger 150	STEERING SENSOR
	(09952–05010)	Slide Arm	STEERING SENSOR
	(09953–05020)	Center Bolt 150	STEERING SENSOR

	(09954–05021)	Claw No.2	STEERING SENSOR
	09950–60010	Replacer Set	BRAKE MASTER CYLINDER ASSY (W/ VSC) VACUUM PUMP ASSY(5L–E)
	(09951–00180)	Replacer 18	BRAKE MASTER CYLINDER ASSY (W/ VSC)
	(09951–00190)	Replacer 19	BRAKE MASTER CYLINDER ASSY (W/ VSC)
	(09951–00400)	Replacer 40	VACUUM PUMP ASSY(5L–E)
	09950–70010	Handle Set	VACUUM PUMP ASSY(5L–E)
	(09951–07150)	Handle 150	VACUUM PUMP ASSY(5L–E)
	09990–00150	ABS Actuator Checker and Sub–harness	BRAKE FLUID(W/ VSC)
	09990–00480	ABS Actuator Checker Sub–harness ”S”	BRAKE FLUID(W/ VSC)

Recomended Tools

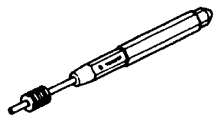	09031–00040	Pin Punch .	VACUUM PUMP ASSY(1KD–FTV/1KZ–TE)
	09042–00010	Torx Socket T30	STEERING SENSOR
	09905–00013	Snap Ring Pliers	VACUUM PUMP ASSY(1KD–FTV/1KZ–TE)

Equipment

Slide calipers	Hexagon wrench
Dial indicator	
Micrometer	
Torque wrench	

Lubricant

Item	Capacity	Classification
Brake fluid	–	SAE J1703 or FMVSS No. 116 DOT3