


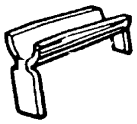
AUTOMATIC TRANSMISSION / TRANS

021YT–01

PREPARATION

SST

	09023–12700	Union Nut Wrench 17mm	AUTOMATIC TRANSMISSION ASSY(1KD–FTV) AUTOMATIC TRANSMISSION ASSY(1KZ–TE) AUTOMATIC TRANSMISSION ASSY(3RZ–FE) TEMPERATURE SENSOR(ATM)
	09032–00100	Oil Pan Seal Cutter	THROTTLE CABLE ASSY(3RZ–FE) TRANSMISSION WIRE(ATM) TRANSMISSION VALVE BODY ASSY(ATM)
	09350–32014	TOYOTA Automatic Transmission Tool Set	AUTOMATIC TRANSMISSION ASSY(1KD–FTV) AUTOMATIC TRANSMISSION ASSY(1KZ–TE) AUTOMATIC TRANSMISSION ASSY(3RZ–FE) TORQUE CONVERTER CLUTCH AND DRIVE PLATE(ATM)
	(09351–32010)	One–way Clutch Test Tool	AUTOMATIC TRANSMISSION ASSY(1KD–FTV) AUTOMATIC TRANSMISSION ASSY(1KZ–TE) AUTOMATIC TRANSMISSION ASSY(3RZ–FE) TORQUE CONVERTER CLUTCH AND DRIVE PLATE(ATM)
	(09351–32020)	Stator Stopper	AUTOMATIC TRANSMISSION ASSY(1KD–FTV) AUTOMATIC TRANSMISSION ASSY(1KZ–TE) AUTOMATIC TRANSMISSION ASSY(3RZ–FE) TORQUE CONVERTER CLUTCH AND DRIVE PLATE(ATM)

Equipment

Straight edge	Torque converter
Vernier calipers	Torque converter
Dial indicator or dial indicator with magnetic base	Drive plate
Torque wrench	

Lubricant

Item	Capacity	Classification
Automatic transmission fluid Dry fill Drain and fill	 10.1 liters (10.7 US qts, 8.9 Imp.qts) 2.0 liters (2.1 US qts, 1.8 Imp.qts)	ATF Type T–IV