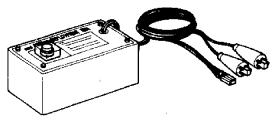
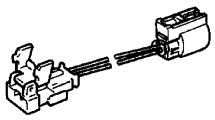









# SUPPLEMENTAL RESTRAINT SYSTEM


021ZT–01

## PREPARATION

### SST

| | | | |
|---|---|---|---|
|  | 09082–00700 | SRS Airbag Deployment Tool | HORN BUTTON ASSY<br>INSTR PNL PASS L/DOOR AIR BAG ASSY<br>CURTAIN SHIELD AIR BAG ASSY RH<br>FRONT SEAT AIRBAG ASSY RH |
|  | 09082–00750 | Airbag Deployment Wire Sub–harness No.3 | FRONT SEAT AIRBAG ASSY RH |
|  | 09082–00780 | Airbag Deployment Wire Sub–harness No.6 | HORN BUTTON ASSY<br>INSTR PNL PASS L/DOOR AIR BAG ASSY |
|  | 09082–00802 | Airbag Deployment Wire Sub–Harness No. 8 | HORN BUTTON ASSY<br>CURTAIN SHIELD AIR BAG ASSY RH |
|  | (09082–10801) | Wire A | HORN BUTTON ASSY<br>CURTAIN SHIELD AIR BAG ASSY RH |
|  | (09082–20801) | Wire B | CURTAIN SHIELD AIR BAG ASSY RH |
|  | (09082–30801) | Wire C | HORN BUTTON ASSY |
|  | 09950–50013 | Puller C Set | SPIRAL CABLE SUB–ASSY<br>INSTR PNL PASS L/DOOR AIR BAG ASSY |
|  | (09951–05010) | Hanger 150 | SPIRAL CABLE SUB–ASSY<br>INSTR PNL PASS L/DOOR AIR BAG ASSY |
|  | (09952–05010) | Slide Arm | SPIRAL CABLE SUB–ASSY<br>INSTR PNL PASS L/DOOR AIR BAG ASSY |
|  | (09953–05020) | Center Bolt 150 | SPIRAL CABLE SUB–ASSY<br>INSTR PNL PASS L/DOOR AIR BAG ASSY |
|  | (09954–05021) | Claw No.2 | SPIRAL CABLE SUB–ASSY<br>INSTR PNL PASS L/DOOR AIR BAG ASSY |

## Recomended Tools

| | | |
|---|---|---|
|  | 09042–00010 Torx Socket T30 | HORN BUTTON ASSY<br>SPIRAL CABLE SUB–ASSY<br>INSTR PNL PASS L/DOOR AIR BAG ASSY |

## Equipment

| | |
|---|---|
| Torque wrench | |
| Bolt Length: 35.0 mm (1.387 in.) Pitch: 1.0 mm (0.039 in.)<br>Diam.: 6.0 mm (0.236 in.) | Airbag disposal |
| Tire Width: 185 mm (7.28 in.) Inner diam.: 360 mm (14.17 in.) | Airbag disposal |
| Tire with disc wheel Width: 185 mm (7.28 in.)<br>Inner diam.: 360 mm (14.17 in.) | Airbag disposal |
| Plastic bag | Airbag disposal |