
HEIGHT CONTROL INDICATOR LAMP CIRCUIT

CIRCUIT DESCRIPTION

The height control indicator lamp indicates the aimed height, not the actual height.
It blinks when the height control is operated by pressing the height control switch and stays on when the operation is completed.

WIRING DIAGRAM

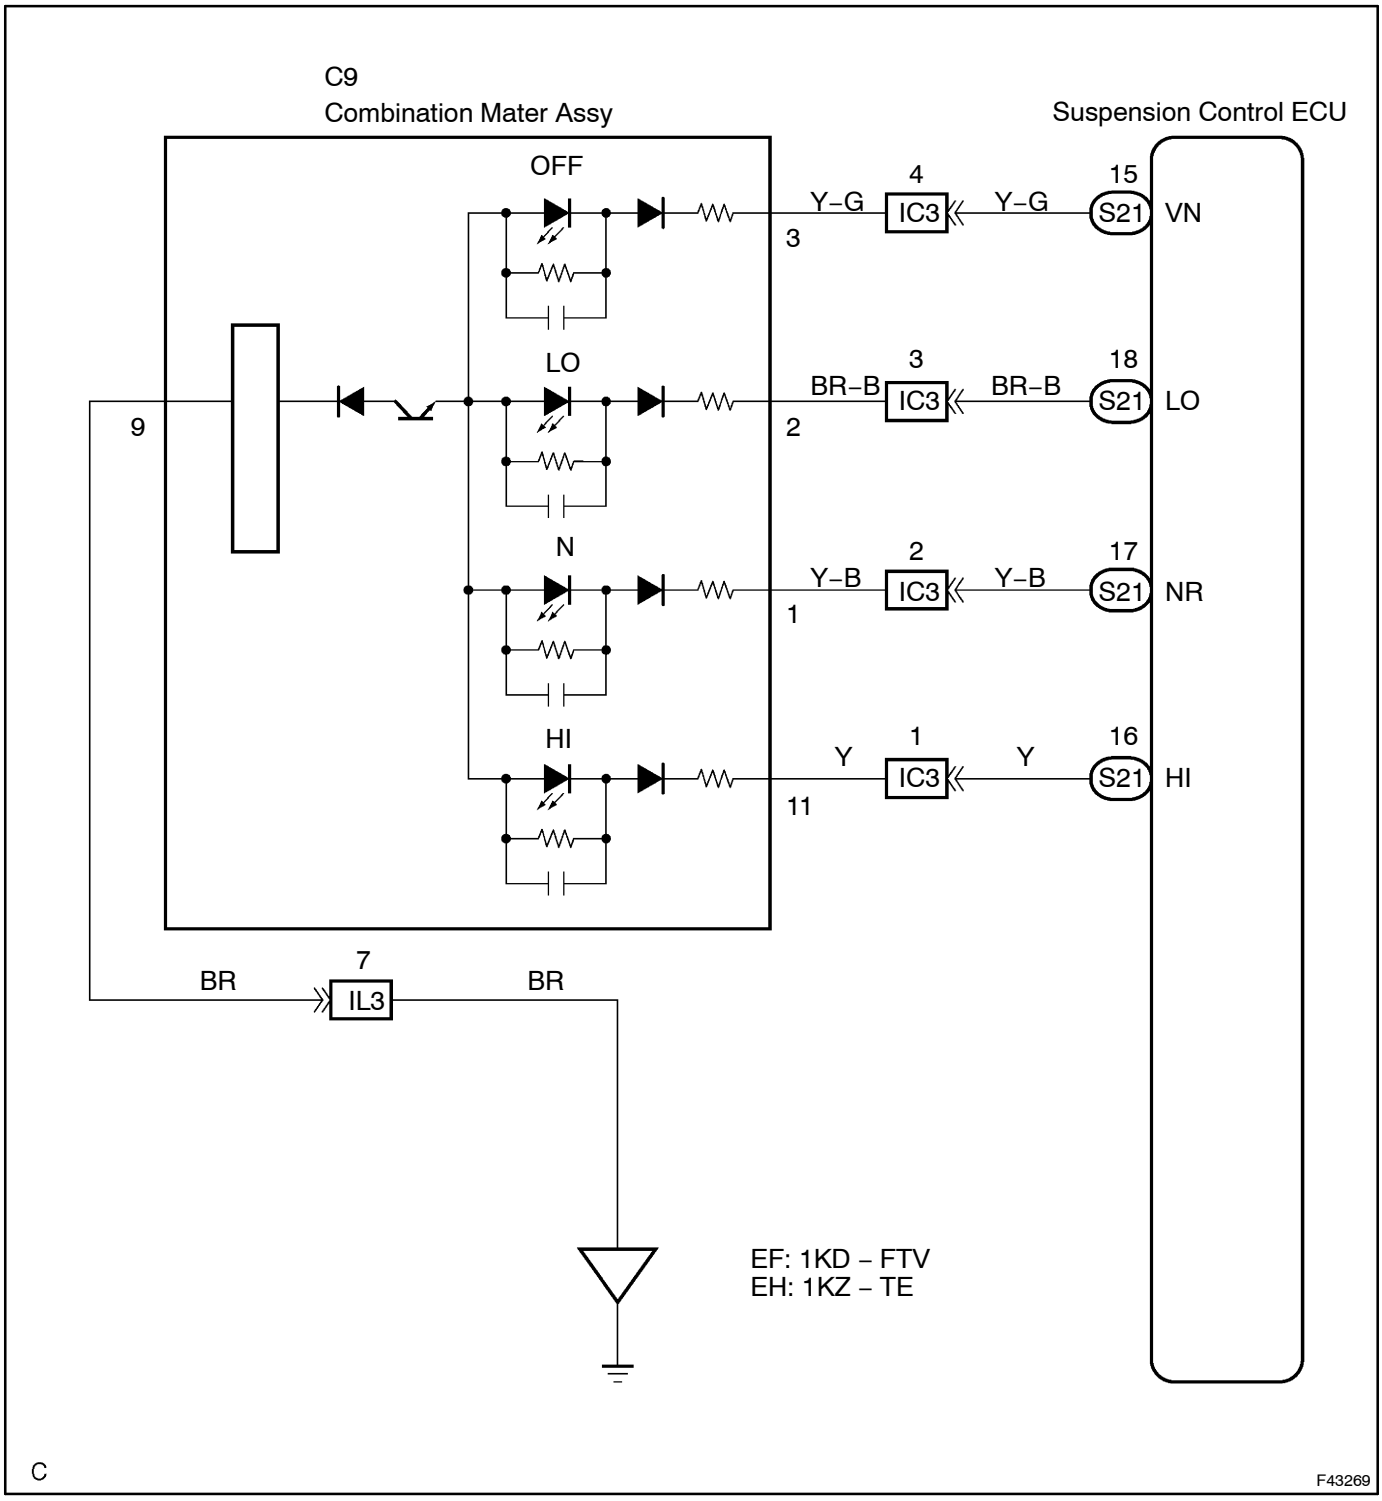

INSPECTION PROCEDURE

1	INSPECT HEIGHT CONROL INDICATOR LAMP

HINT:
See combination meter troubleshooting on page 71–1.

NG → REPAIR OR REPLACE BULB OR COMBINATION METER ASSEMBLY

OK

2	CHECK HARNESS AND CONNECTOR(SUSPENSION CONTROL ECU – COMBINATION METER ASSY)

(a) Check for open and short circuit in the harness and the connector between the suspension control ECU and the combination meter assy (height control indicator lamp) (See page 01–36).

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE SUSPENSION CONTROL ECU (See page 01–36)