
TC TERMINAL CIRCUIT

CIRCUIT DESCRIPTION


DTC is output when there is a short circuit between terminal TC and CG of DLC3.

WIRING DIAGRAM

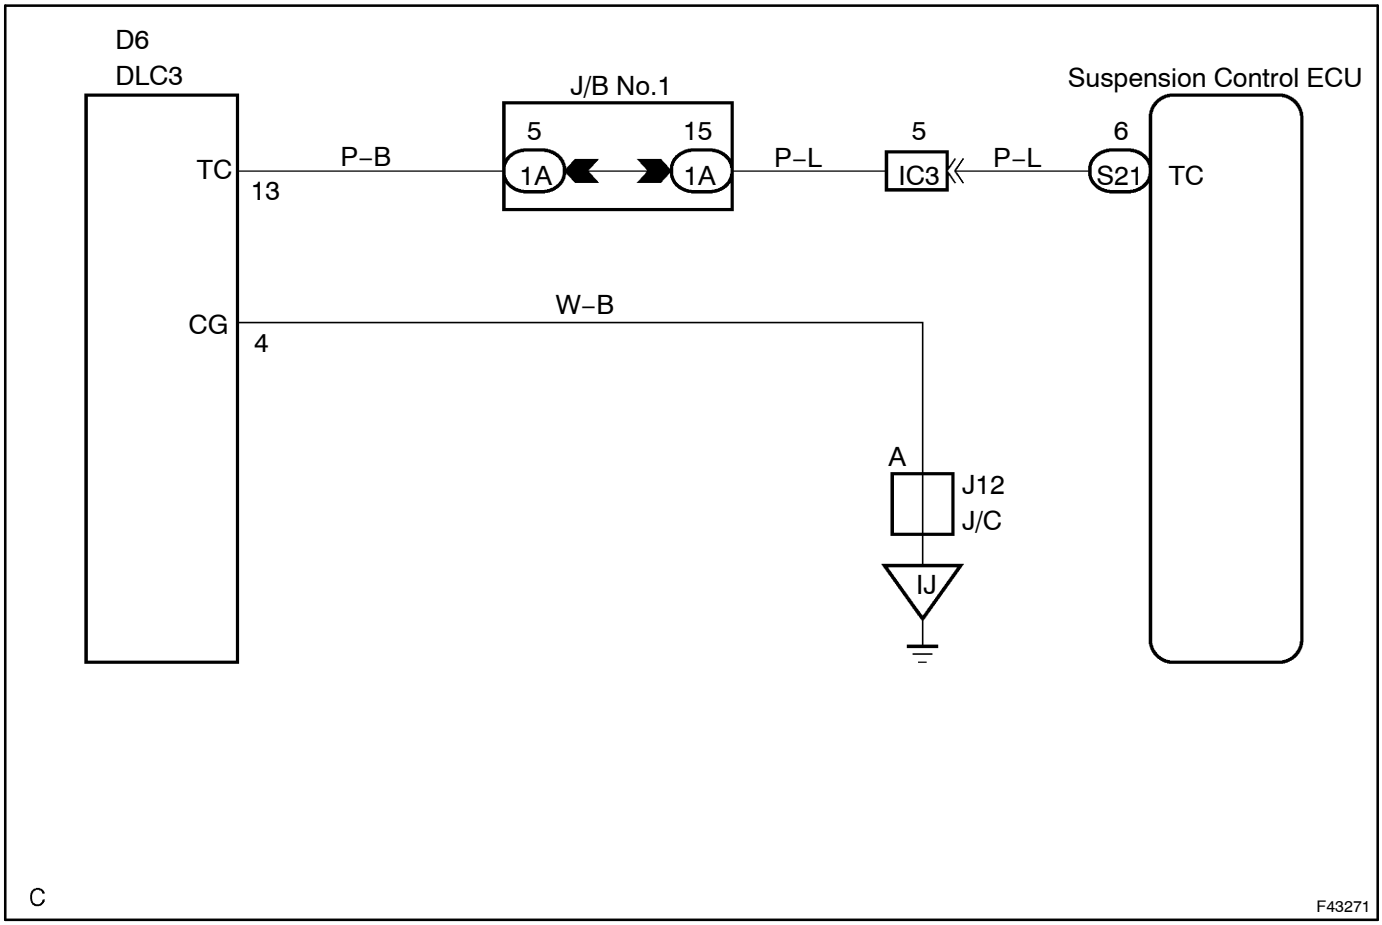

INSPECTION PROCEDURE

1	INSPECT DLC3 TERMINAL VOLTAGE(TC TERMINAL)

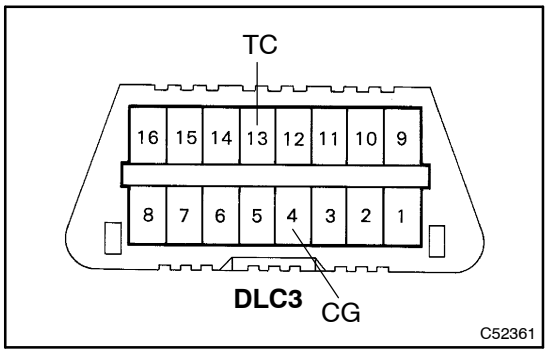

(a) Turn the ignition switch to ON.
(b) Measure voltage between terminal TC and CG of DLC3.
Standard:
10 – 14 V

OK	Go to step 3

NG

2	CHECK HARNESS AND CONNECTOR(DLC3 – BODY GROUND)

(a) Check for open and short circuit in the harness and the connector between terminal CG of DLC3 and body ground (See page 01–36).

NG	REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3	CHECK HARNESS AND CONNECTOR(DLC3 – SUSPENSION CONTROL ECU)

(a) Check for open and short circuit in the harness and the connector between terminal TC of DLC3 and the suspension control ECU (See page 01–36).

NG	REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE SUSPENSION CONTROL ECU (See page 01–36)