
ABS WARNING LIGHT CIRCUIT (DOES NOT LIGHT UP)

CIRCUIT DESCRIPTION

If the ECU detects trouble, it lights the ABS warning light while at the same time prohibiting ABS control. At this time, the ECU records a DTC in memory.
Connect terminals Tc and CG of the DLC3 to make the ABS warning light blink and output the DTC.

WIRING DIAGRAM

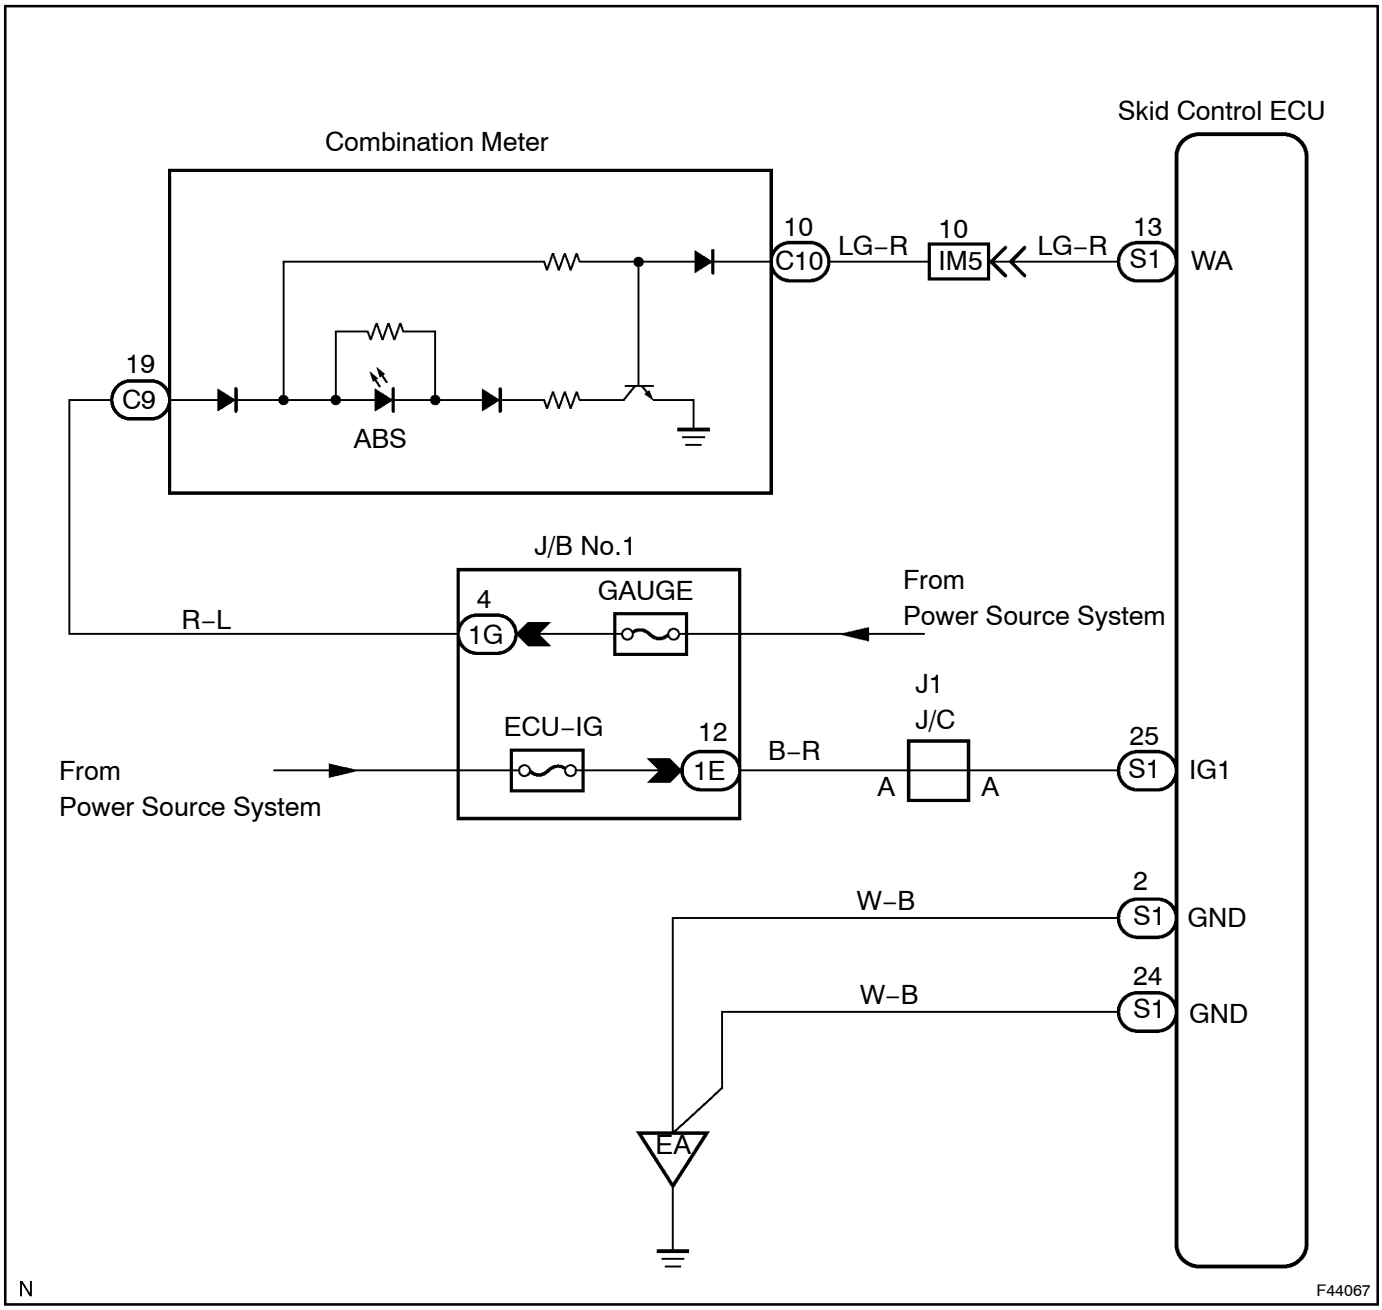

INSPECTION PROCEDURE

1	PERFORM ACTIVE TEST BY HAND–HELD TESTER(ABS WARNING LIGHT OPERATION)

(a) Select the item ”ABS WARN LIGHT” in the ACTIVE TEST and operate the ABS warning light on the hand–held tester.
(b) Check that ”ON” and ”OFF” operation of the ABS warning light can be done on the combination meter by the hand–held tester.

OK → CHECK AND REPLACE BRAKE ACTUATOR ASSY

NG

2	INSPECT COMBINATION METER ASSY(ABS WARNING LIGHY CIRCUIT)

NG → REPAIR COMBINATION METER ASSY

OK

CHECK AND REPAIR HARNESS AND CONNECTOR