
BRAKE WARNING LIGHT CIRCUIT

CIRCUIT DESCRIPTION

The brake warning light lights up when the brake fluid is insufficient, the EBD is abnormal, or the parking brake is applied.

WIRING DIAGRAM

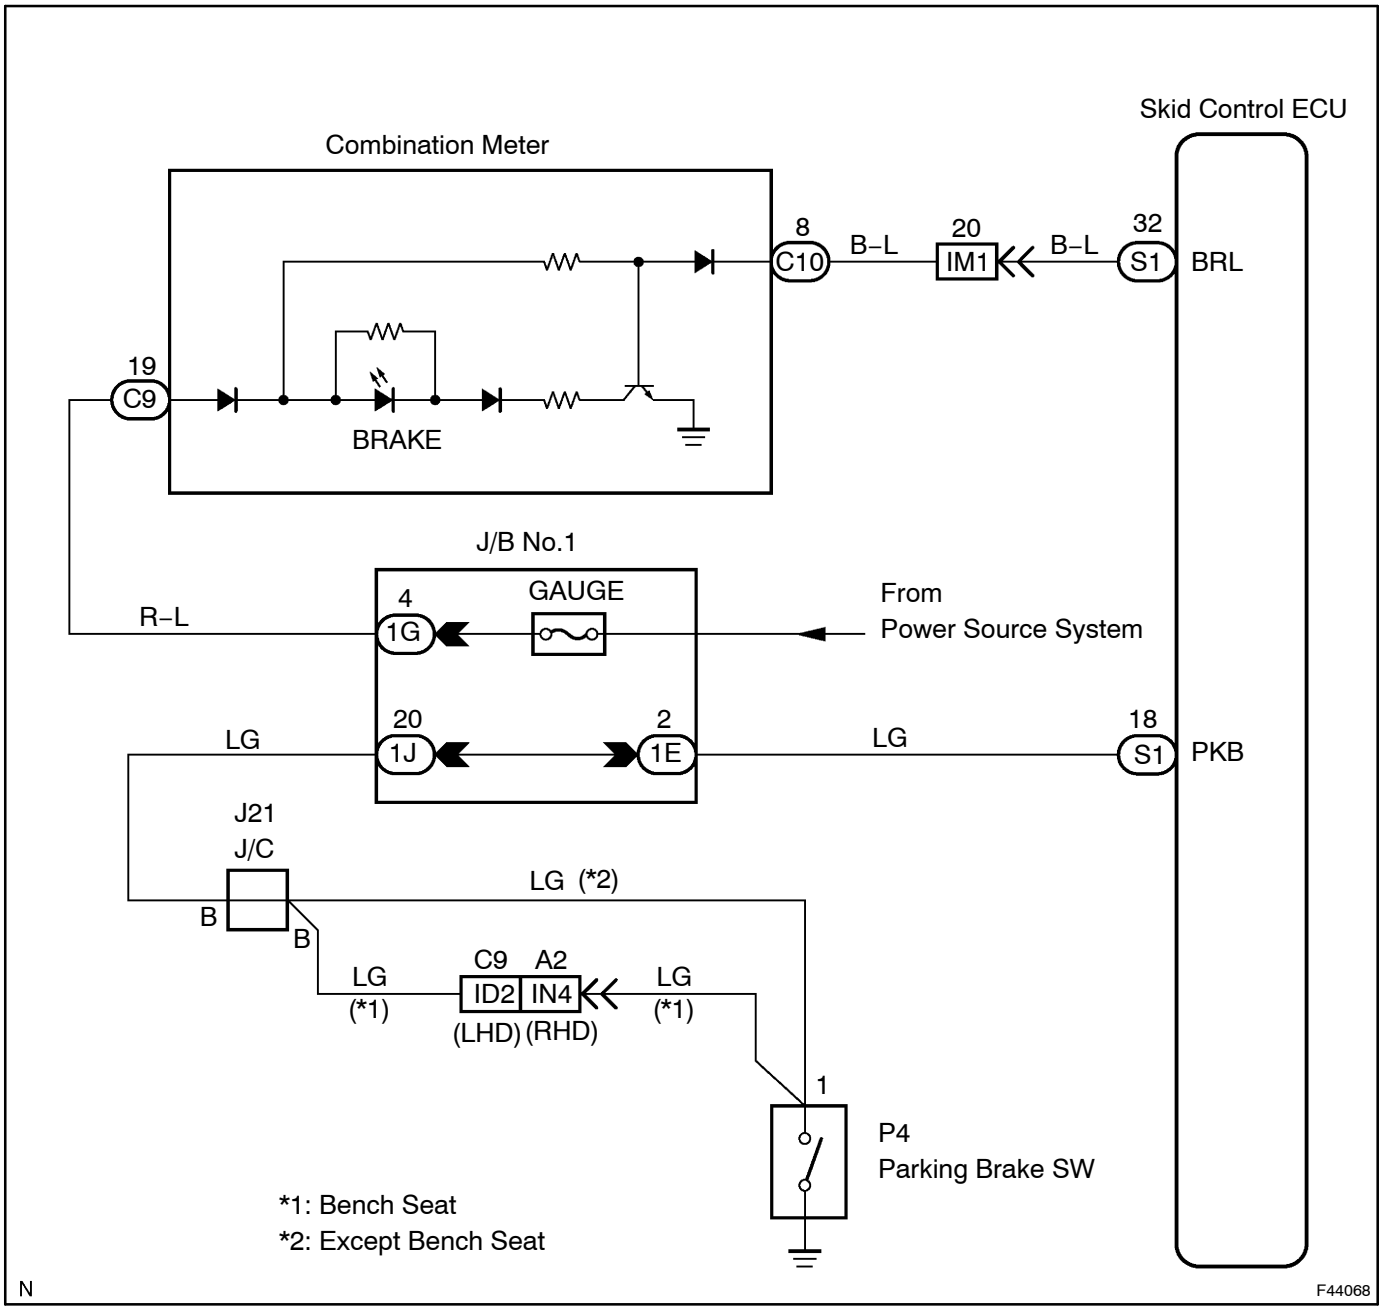

INSPECTION PROCEDURE

1	CHECK PARKING BRAKE SWITCH CIRCUIT

NG → REPAIR OR REPLACE PARKING BRAKE SWITCH CIRCUIT

OK

2	CHECK BRAKE FLUID LEVEL WARNING SWITCH CIRCUIT

NG → REPAIR OR REPLACE BRAKE FLUID LEVEL WARNING SWITCH CIRCUIT

OK

3	RECONFIRM DTC

A	Normal Code
B	Malfunction Code

B → REPAIR CIRCUIT INDICATED BY OUTPUT CODE

A

4	INSPECT COMBINATION METER ASSY(BRAKE WARNING LIGHT CIRCUIT)

NG → REPAIR OR REPLACE COMBINATION METER ASSY

OK

5	CHECK HARNESS AND CONNECTOR(SKID CONTROL ECU – COMBINATION METER)

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE BRAKE ACTUATOR ASSY