
TC TERMINAL CIRCUIT

CIRCUIT DESCRIPTION


Connecting terminals Tc and CG of the DLC3 causes the ECU to display the DTC by flashing the ABS warning light.

WIRING DIAGRAM

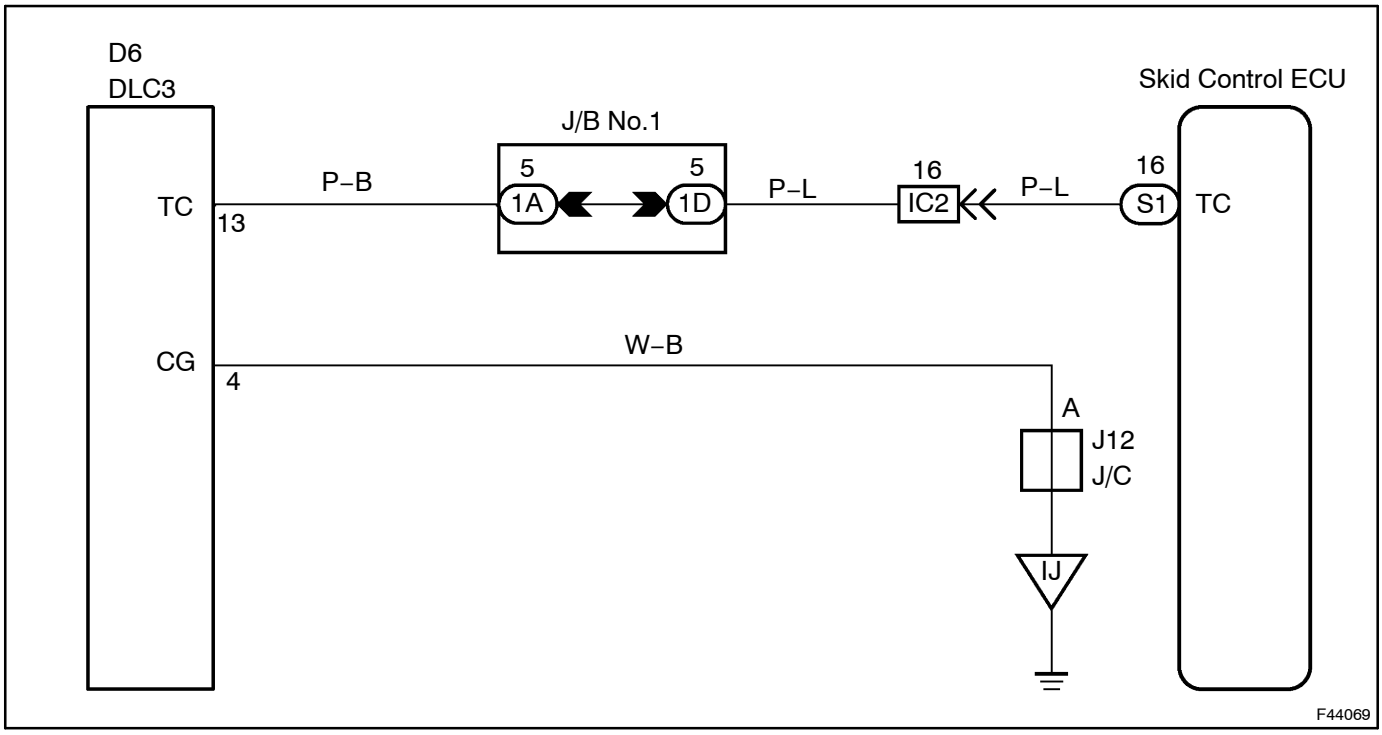

INSPECTION PROCEDURE

1	INSPECT DLC3

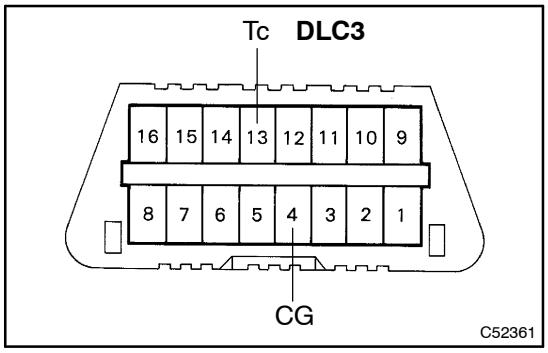

(a) Turn the ignition switch ON.
(b) Measure voltage between terminals Tc and CG of DLC3.
OK: : 10 – 14 V

NG → **Go to step 3**

OK


2	CHECK HARNESS AND CONNECTOR(DLC3 – SKID CONTROL ECU, DLC3 – BODY GROUND)

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3	CHECK ABS WARNING LIGHT

SST 09843–18040

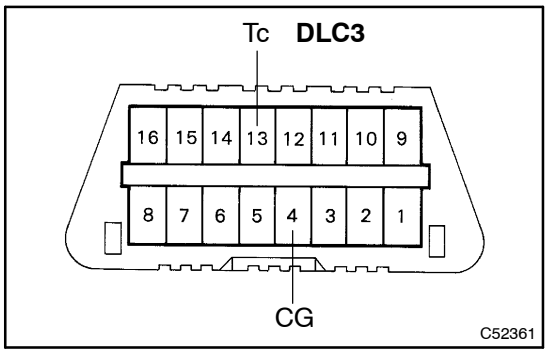

(a) Using SST, connect the terminals Tc and CG of the DLC3.
(b) Check the ABS warning light.
OK: ABS warning light blinks

OK → END

NG

CHECK AND REPLACE BRAKE ACTUATOR ASSY