
TS TERMINAL CIRCUIT

CIRCUIT DESCRIPTION


The sensor check circuit detects the abnormalities in the speed sensor signal which cannot be detected by the DTC check.
Connecting terminals Ts and CG of the DLC3 starts the check.

WIRING DIAGRAM

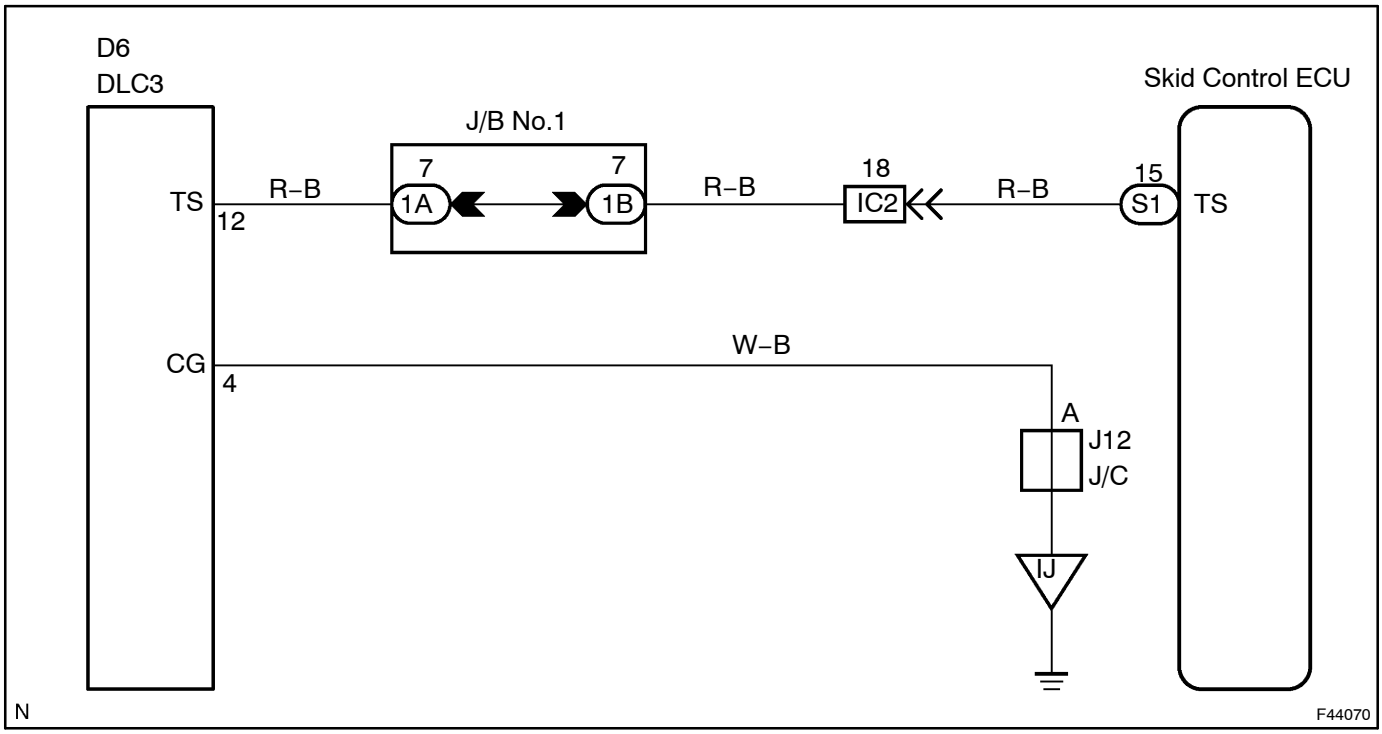

INSPECTION PROCEDURE

1	INSPECT DLC3

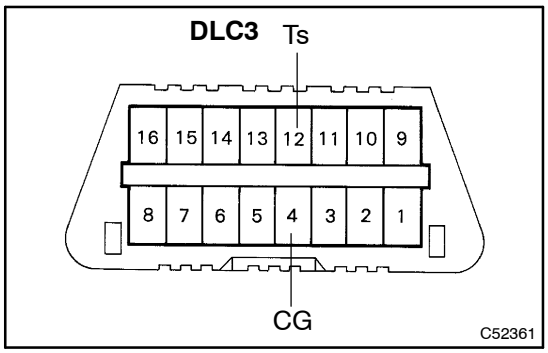

(a) Turn the ignition switch ON.
(b) Measure voltage between terminals Ts and CG of DLC3.
OK: 10 – 14 V

NG → **Go to step 3**

OK


2	CHECK HARNESS AND CONNECTOR(DLC3 – SKID CONTROL ECU, DLC3 – BODY GROUND)

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3	CHECK ABS WARNING LIGHT

SST 09843–18040

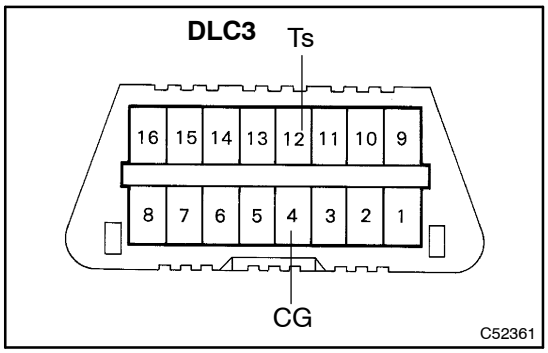

(a) Using SST, connect the terminals Ts and CG of the DLC3.
(b) Turn the ignition switch ON.
(c) Check the ABS warning light.
OK: ABS warning light blinks

OK → END

NG

CHECK AND REPLACE BRAKE ACTUATOR ASSY