DTC	C1380/64	MALFUNCTION IN STOP LIGHT OPERATION RELAY

INSPECTION PROCEDURE

1	CHECK HARNESS AND CONNECTOR

(a) Check for open and short circuit in harness and connector of STP2 input circuit (See page 01–36).

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


2	INSPECT STOP LIGHT SWITCH ASSY

(a) Check that the stop light lights up when brake pedal is depressed and turns OFF when the brake pedal is released.

NG → REPAIR OR REPLACE STOP LIGHT SWITCH ASSY OR HARNESS AND CONNECTOR

OK

3 CHECK STOP LIGHT OPERATION RELAY

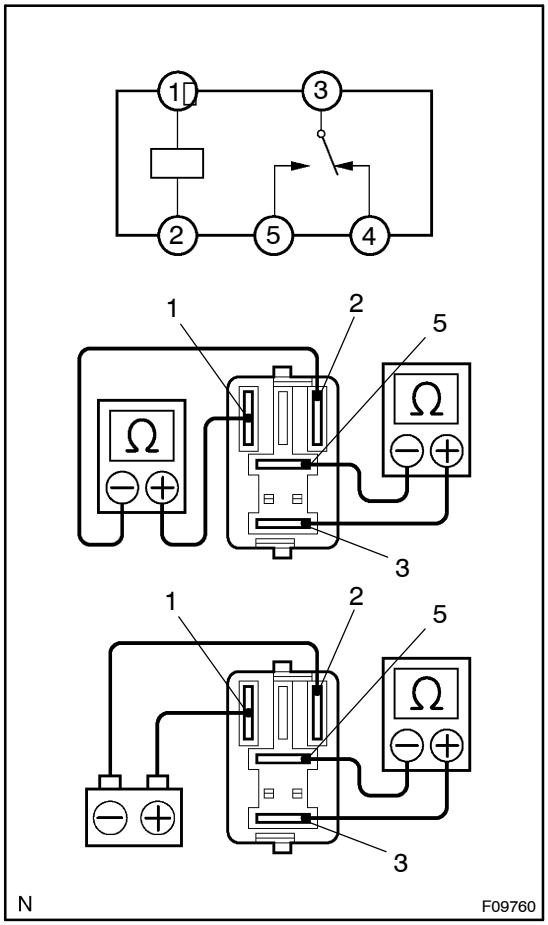

(a) Check continuity between each terminal of stop light operation relay.

OK:

Terminal 1 and 2	Continuity (Reference value 62 Ω)
Terminal 3 and 5	Open

(b) Apply battery voltage between terminal 1 and 2.

(c) Check continuity between terminal 3 and 5 of stop light operation relay.

OK:

Terminal 3 and 5	Contunuity

NG → **REPLACE STOP LIGHT SWITCH ASSY**

OK

4 CHECK HARNESS AND CONNECTOR (STPO OUTPUT CIRCUIT)

(a) Check for open and short circuit in harness and connector of STPO output circuit (See page 01–36).

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK

CHECK AND REPLACE SKID CONTROL ECU ASSY