

SKID CONTROL BUZZER CIRCUIT

CIRCUIT DESCRIPTION

The skid control buzzer sounds during VSC operation.

WIRING DIAGRAM

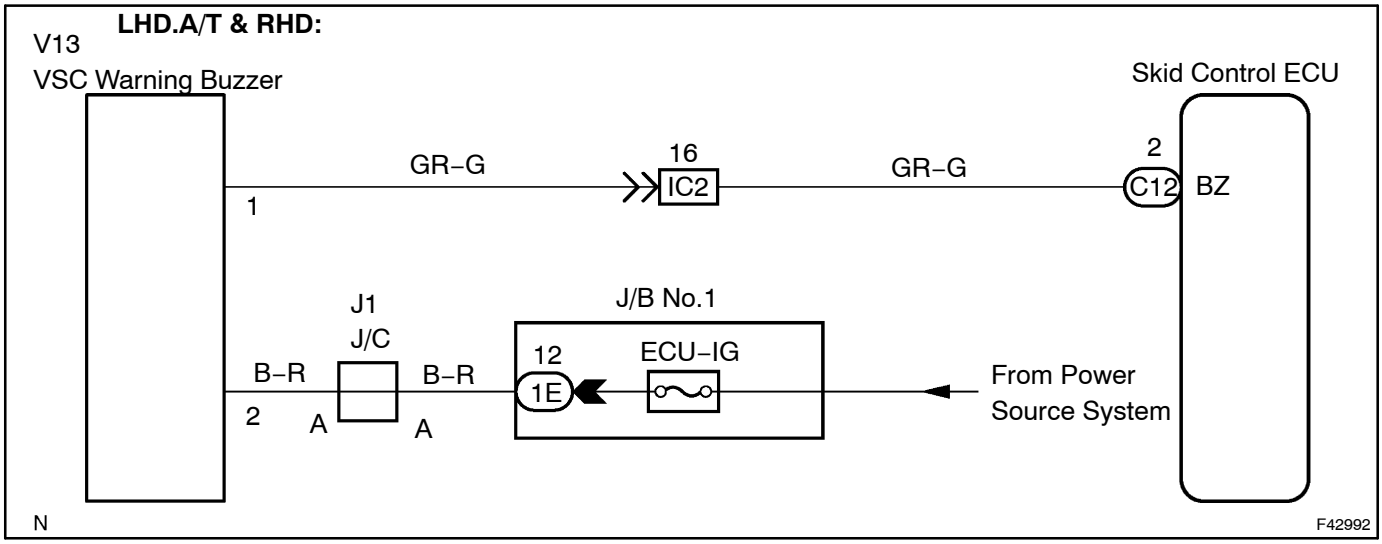

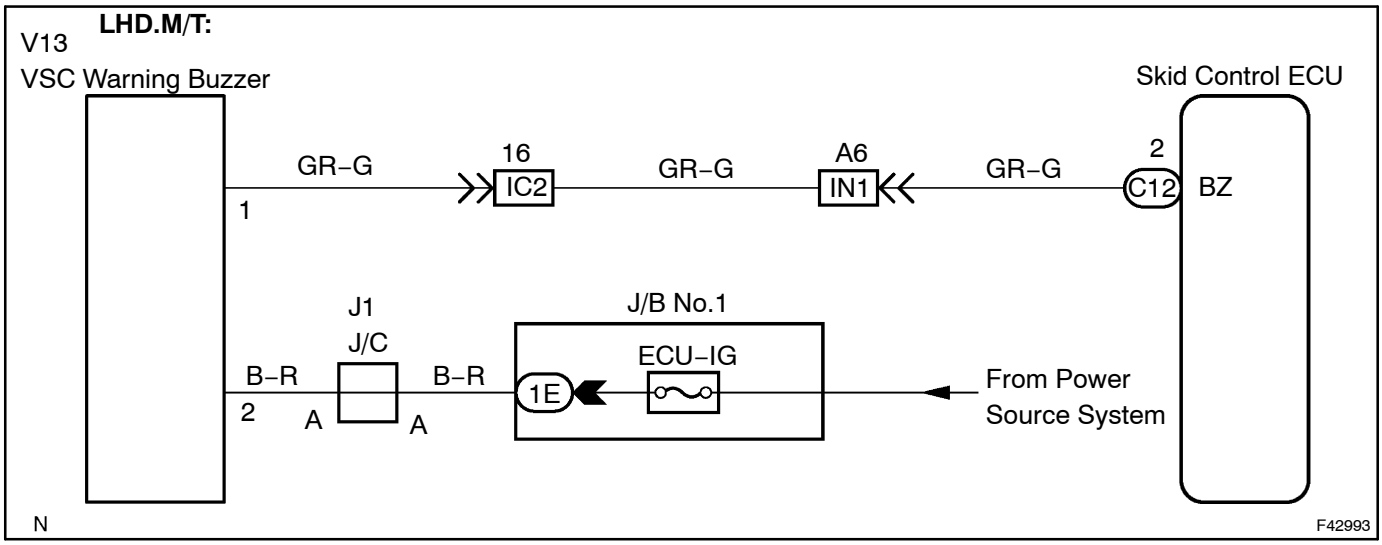

INSPECTION PROCEDURE

HINT:
Start the inspection from step 1 in case of using the hand–held tester and start from step 2 in case of not using the hand–held tester.


1	PERFORM ACTIVE TEST BY SKID CONTROL BUZZER ASSY

(a) Check that skid control buzzer sounds ”ON” and ”OFF” with the hand–held tester.

OK ⇒ **Go to step 3**

NG

2	INSPECT SKID CONTROL BUZZER ASSY

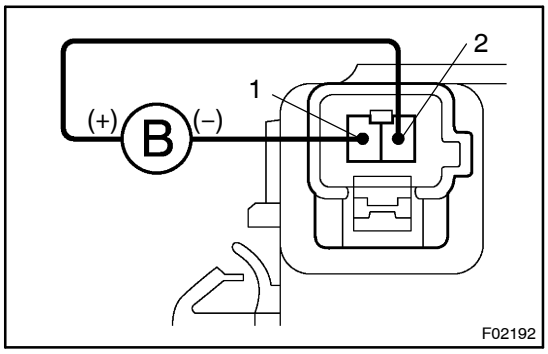

(a) Disconnect the skid control buzzer connector.
(b) Apply battery positive voltage to the terminals 1 and 2 of skid control buzzer connector, check that the buzzer sounds.

NG ⇒ **REPLACE SKID CONTROL BUZZER ASSY**

OK

3	CHECK HARNESS AND CONNECTOR(SKID CONTROL BUZZER – SKID CONTROL ECU)

(a) Check for open and short circuit in harness and connector between terminal BZ of skid control ECU and skid control buzzer (See page 01–36).

NG ⇒ **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK

CHECK AND REPLACE SKID CONTROL ECU ASSY