


05A7K–01

LOCATION

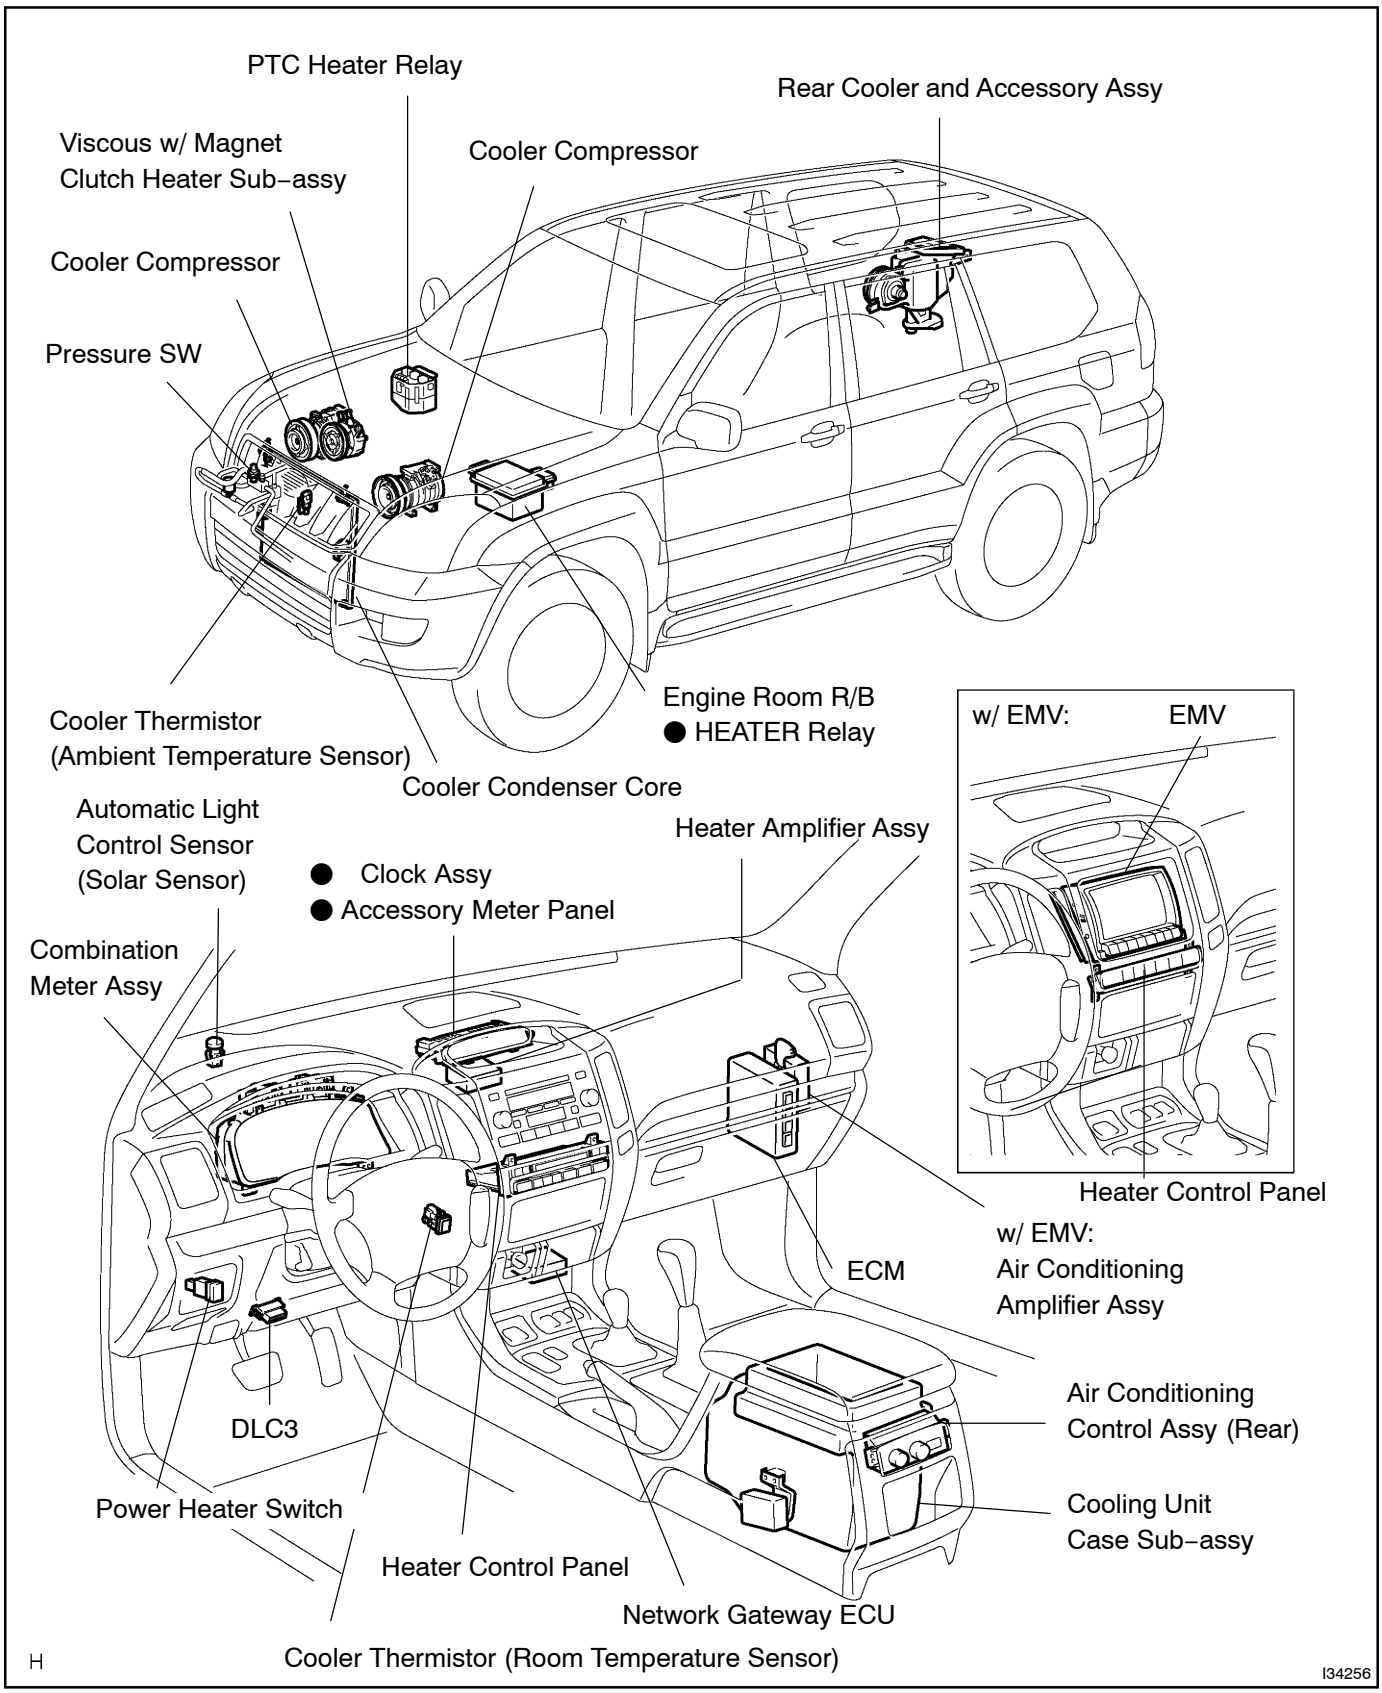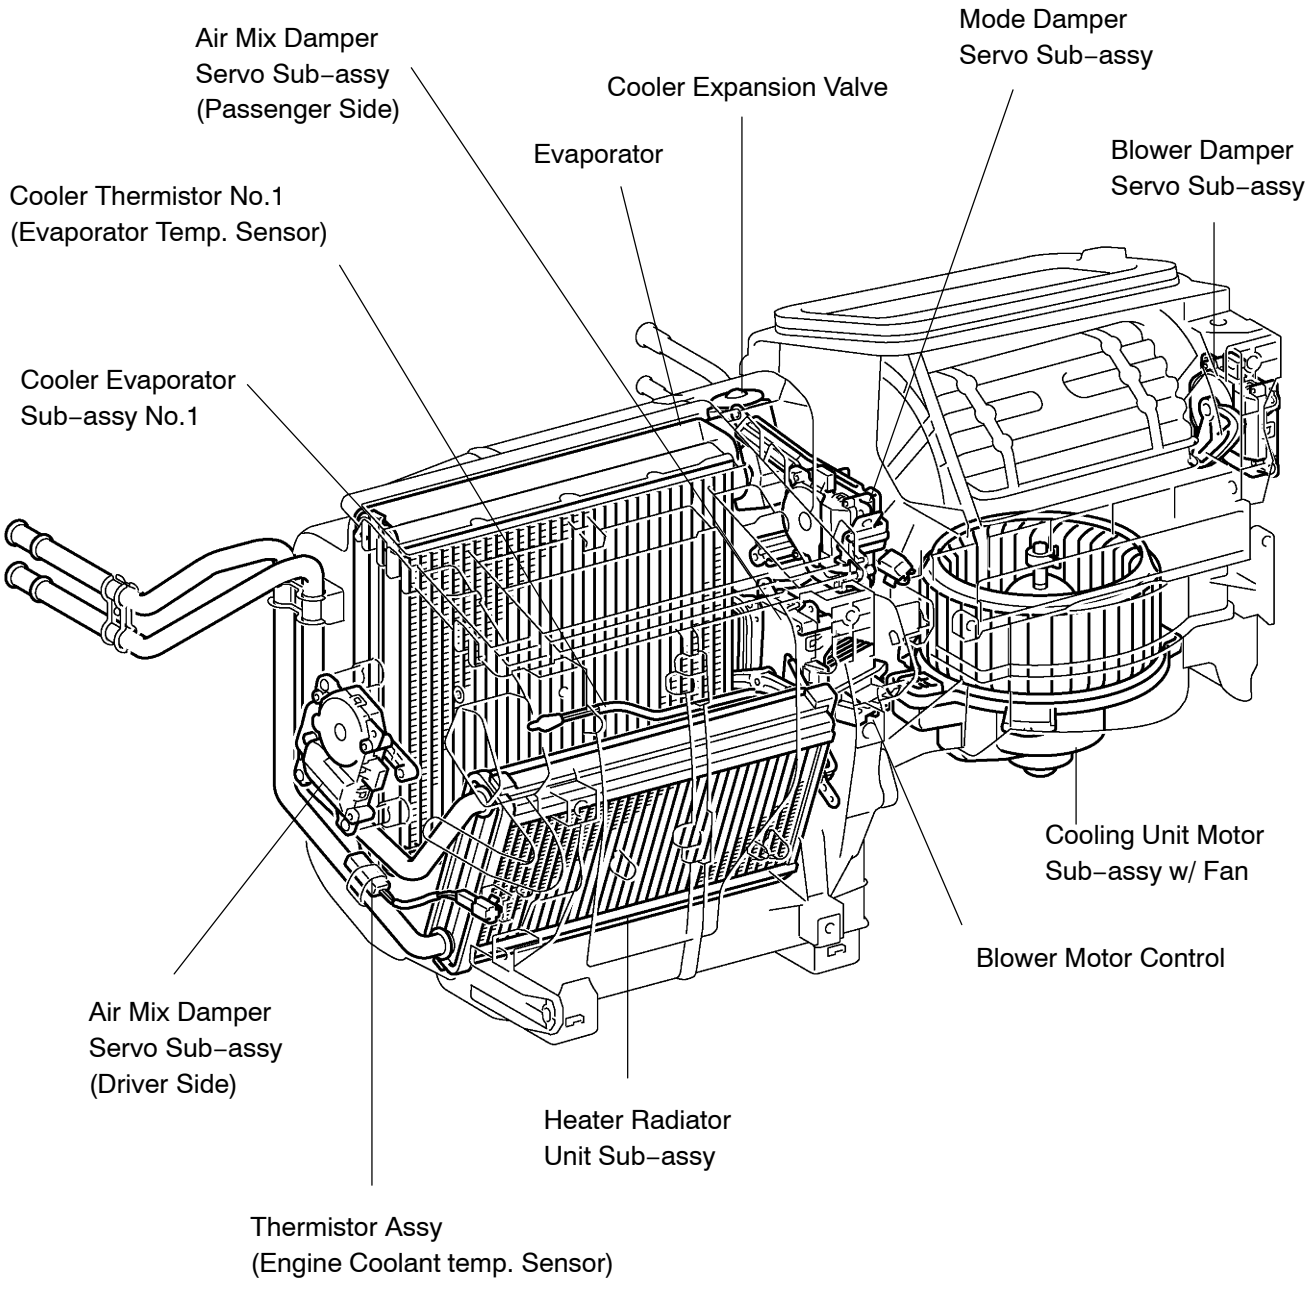



Air Mix Damper
Servo Sub–assy
(Passenger Side)
Mode Damper
Servo Sub–assy
Cooler Expansion Valve
Evaporator
Blower Damper
Servo Sub–assy
Cooler Thermistor No.1
(Evaporator Temp. Sensor)
Cooler Evaporator
Sub–assy No.1
Cooling Unit Motor
Sub–assy w/ Fan
Blower Motor Control
Air Mix Damper
Servo Sub–assy
(Driver Side)
Heater Radiator
Unit Sub–assy
Thermistor Assy
(Engine Coolant temp. Sensor)
H
I34259

Cooling Unit Case Sub–assy

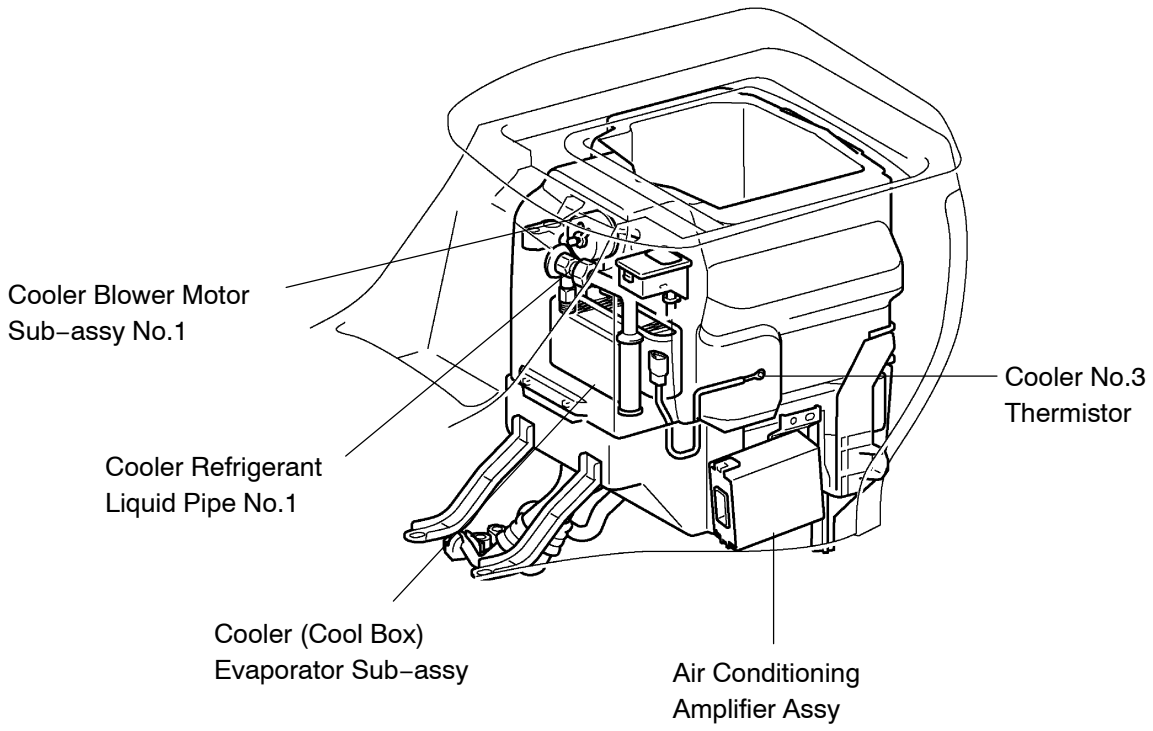

Rear Cooler and Accessory Assy

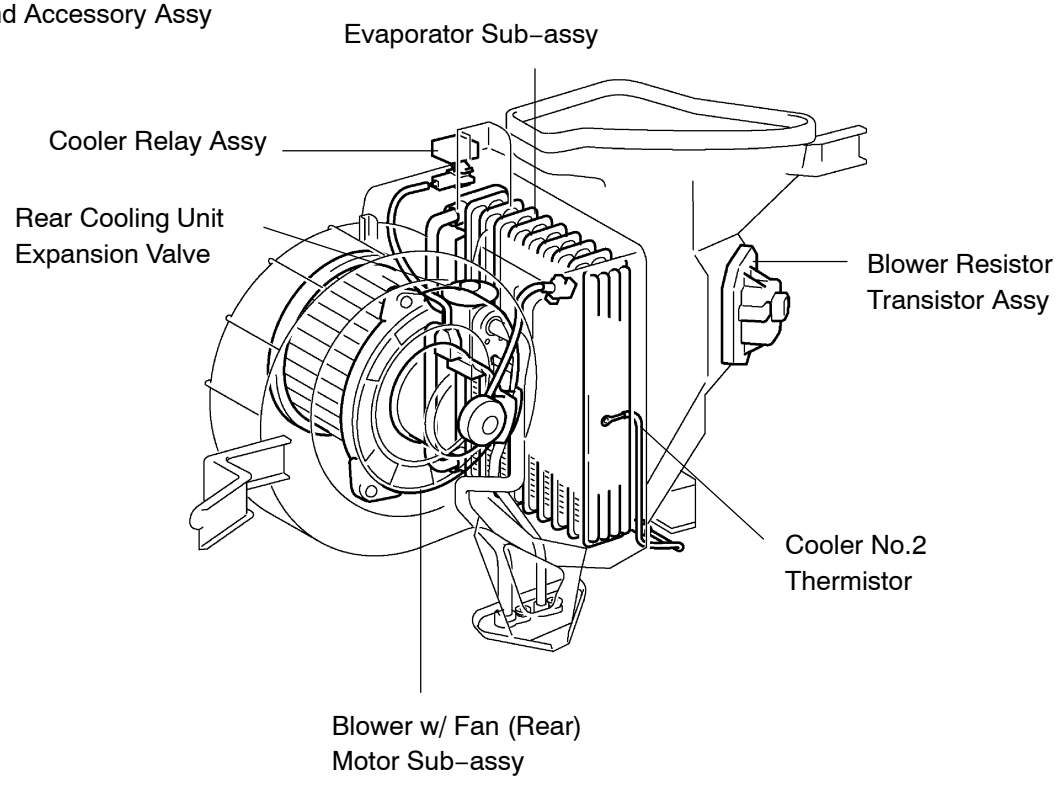

H

I34257