
BACK–UP POWER SOURCE CIRCUIT

CIRCUIT DESCRIPTION

This is the back–up power source for the A/C amplifier. Power is supplied even when the ignition switch is off and is used for diagnostic trouble code memory, etc.

WIRING DIAGRAM

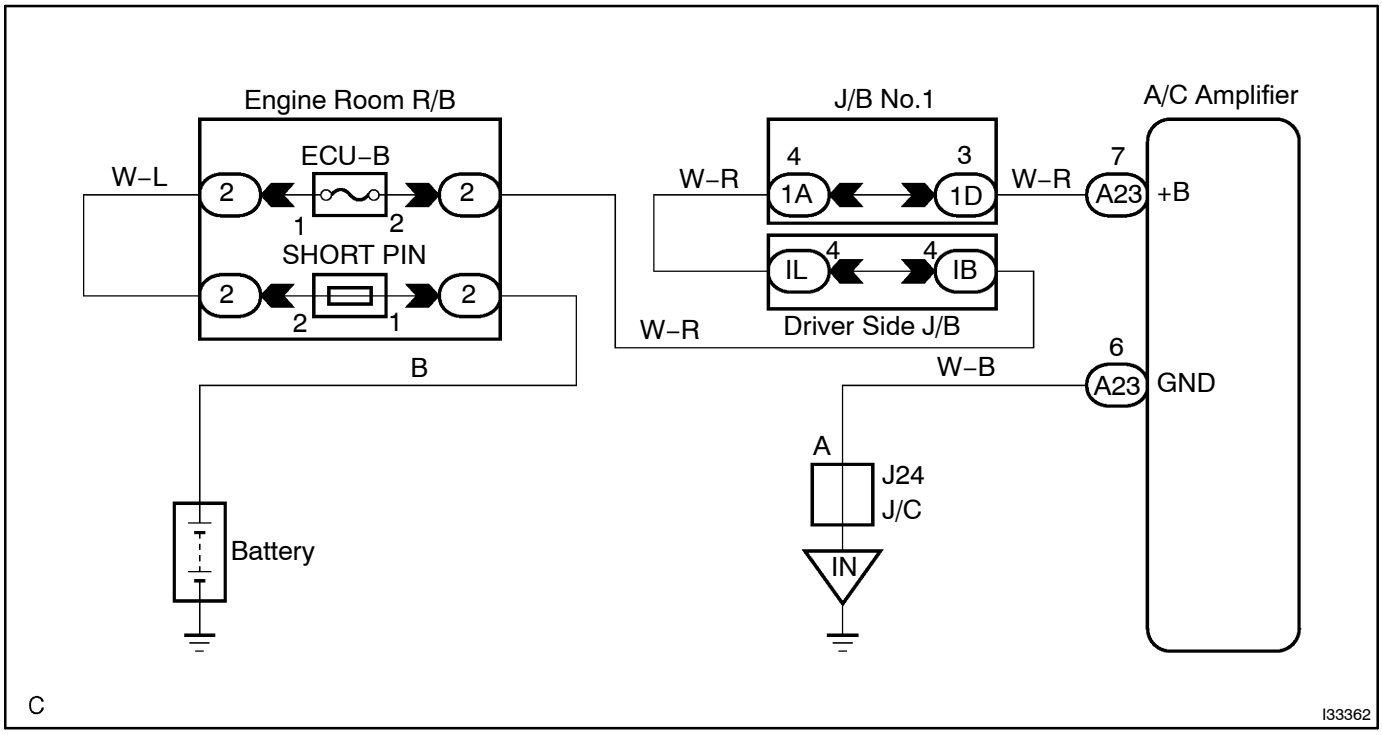

INSPECTION PROCEDURE


1	CHECK FUSE(ECU–B FUSE)

(a) Remove the ECU–B fuse from the engine room R/B.
(b) Check that the continuity exists of ECU–B fuse.

NG → **REPLACE FUSE**

OK

2	CHECK HARNESS AND CONNECTOR(A/C AMPLIFIER – BATTERY)

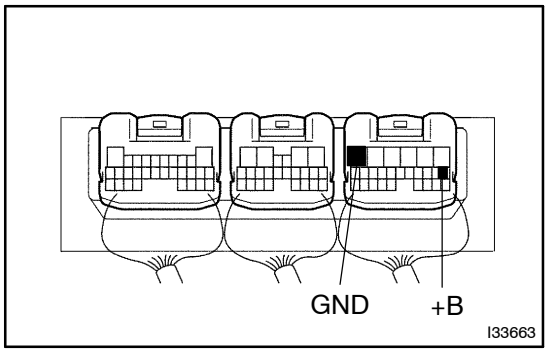

(a) Remove the A/C amplifier with being connected.
(b) Measure voltage between terminal +B and GND of A/C amplifier.

Voltage: 10 – 14 V

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN ON PROBLEM SYMPTOMS TABLE