
05A6C–01

TERMINALS OF ECU

w/o Side Airbag Assy:

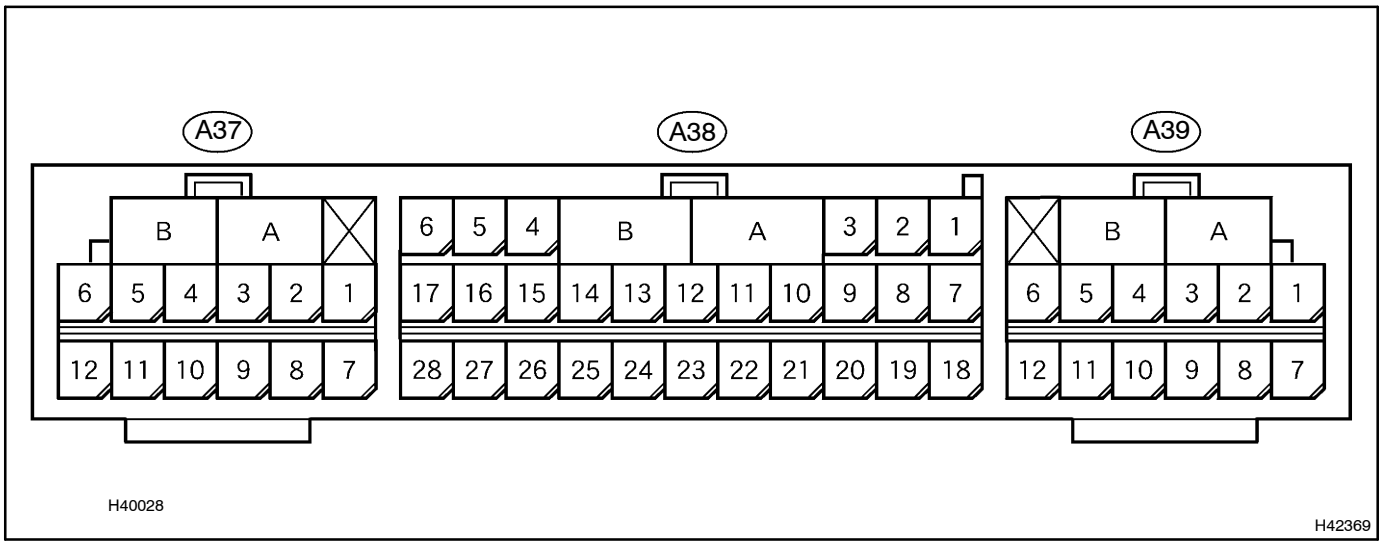


Terminal No.	Symbol	Terminal Name
A	–	Electrical Connector Check Mechanism
B	–	Electrical Connector Check Mechanism
A38–3	LA	SRS Warning Light
A38–5	IG2	Power Source (SRS Fuse)
A38–7	P2–	Squib (Passenger, 2nd step)
A38–8	P2+	Squib (Passenger, 2nd step)
A38–9	+SR	Front AIrbag Sensor RH
A38–10	P+	Squib (Passenger)
A38–11	P–	Squib (Passenger)
A38–12	SIL	Diagnosis
A38–13	D–	Squib (Driver)
A38–14	D+	Squib (Driver)
A38–15	+SL	Front AIrbag Sensor LH
A38–16	D2+	Squib (Driver, 2nd step)
A38–17	D2–	Squib (Driver, 2nd step)
A38–19	TC	Diagnosis
A38–20	–SR	Front Airbag sensor LH
A38–23	GSW2	ECM
A38–26	–SL	Front AIrbag Sensor LH
A38–27	E1	Ground
A38–28	E2	Ground
A37–1	PL–	Squib (Seat Belt Pretensioner, LH)
A37–2	PL+	Squib (Seat Belt Pretensioner, LH)
A37–3	LSP+ (*1)	Seat Position Airbag Sensor
A37–8	LSP– (*1)	Seat Position Airbag Sensor
A37–11	LBE+ (*1)	Seat Belt Buckle Switch LH
A39–4	RSP+ (*2)	Seat Position Airbag Sensor
A39–5	PR+ (*2)	Squib (Seat Belt Pretensioner, RH)
A39–6	PR–	Squib (Seat Belt Pretensioner, RH)
A39–8	RBE+	Seat Belt Buckle Switch RH
A39–11	RSP– (*2)	Seat Position Airbag Sensor

*1: LHD

*2: RHD

w/ Side Airbag Assy:

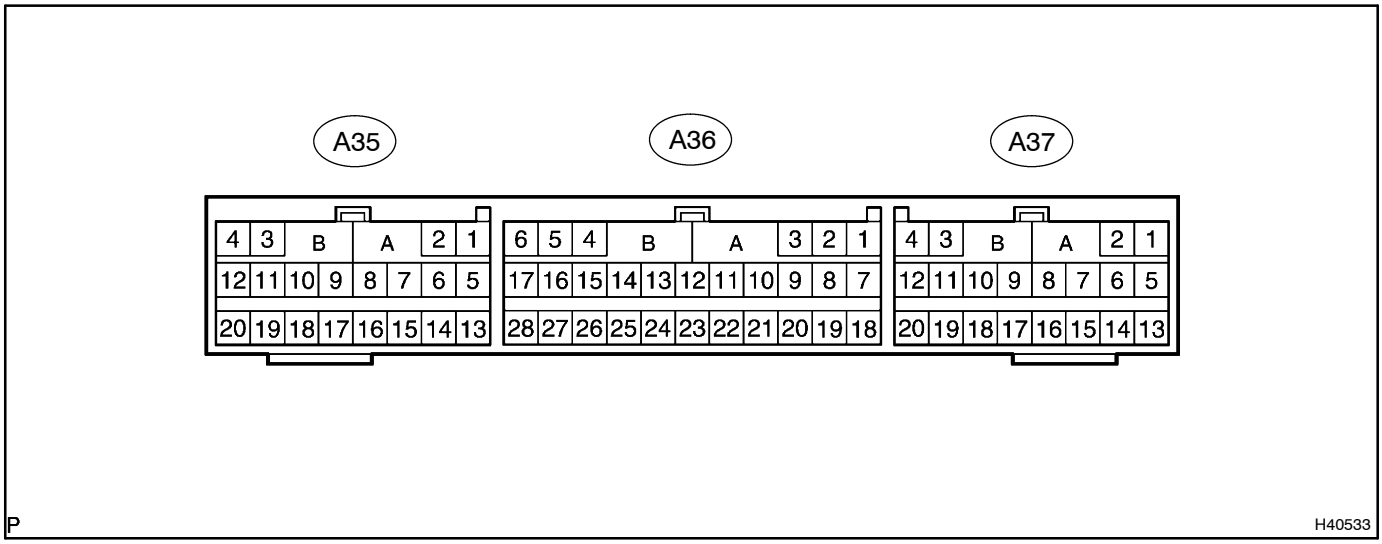

No.	Symbol	Terminal Name
A	–	Electrical Connector Check Mechanism
B	–	Electrical Connector Check Mechanism
A36–3	LA	SRS Warning Light
A36–5	IG2	Power Source (IGN Fuse)
A36–7	P2–	Squib (Passenger, 2 step)
A36–8	P2+	Squib (Passenger, 2 step)
A36–9	+SR	Airbag Front RH Sensor
A36–10	P+	Squib (Passenger)
A36–11	P–	Squib (Passenger)
A36–12	SIL	Diagnosis
A36–13	D–	Squib (Driver)
A36–14	D+	Squib (Driver)
A36–15	+SL	Airbag Sensor Front LH
A36–16	D2+	Squib (Driver, 2nd step)
A36–17	D2–	Squib (Driver, 2nd step)
A36–19	TC	Diagnosis
A36–20	–SR	Airbag Front RH Sensor
A36–26	–SL	Airbag Sensor Front LH
A36–27	E1	Ground
A36–28	E2	Ground
A35–1	CSL–	Airbag Sensor Rear LH
A35–3	LSP– (*1)	Seat Position Airbag Sensor
A35–4	LSP+ (*1)	Seat Position Airbag Sensor
A35–7	PL–	Squib (Seat Belt Pretensioner, LH)
A35–8	PL+	Squib (Seat Belt Pretensioner, LH)
A35–9	ICL+	Squib (Curtain Shield Airbag Assy, LH)
A35–10	ICL–	Squib (Curtain Shield Airbag Assy, LH)
A35–11	SFL–	Squib (Side, LH)
A35–12	SFL+	Squib (Side, LH)
A35–13	ESCL	Airbag Sensor Rear LH
A35–14	VUCL	Airbag Sensor Rear LH
A35–15	CSL+	Airbag Sensor Rear LH
A35–16	VUPL	Side Airbag Sensor Assy LH
A35–17	SSL+	Side Airbag Sensor Assy LH

No.	Symbol	Terminal Name
A35–18	ESL	Side Airbag Sensor Assy LH
A35–19	LBE+ (*1)	Seat Belt Buckle Switch LH
A35–20	SSL–	Side Airbag Sensor Assy LH
A37–1	RSP+ (*2)	Seat Position Airbag Sensor
A37–2	RSP– (*2)	Seat Position Airbag Sensor
A37–4	CSR–	Airbag Sensor Rear RH
A37–5	SFR+	Squib (Side, RH)
A37–6	SFR–	Squib (Side, RH)
A37–7	ICR–	Squib (Curtain Shield Airbag Assy, RH)
A37–8	ICR+	Squib (Curtain Shield Airbag Assy, RH)
A37–9	PR+	Squib (Seat Belt Pretensioner, RH)
A37–10	PR–	Squib (Seat Belt Pretensioner, RH)
A37–13	SSR–	Side Airbag Sensor Assy RH
A37–14	RBE+ (*2)	Seat Belt Buckle Switch RH
A37–15	ESR	Side Airbag Sensor Assy RH
A37–16	SSR+	Side Airbag Sensor Assy RH
A37–17	VUPR	Side Airbag Sensor Assy RH
A37–18	CSR+	Airbag Sensor Rear RH
A37–19	VUCR	Airbag Sensor Rear RH
A37–20	ESCR	Airbag Sensor Rear RH

*1: LHD

*2: RHD