# DTC B0101/14 OPEN IN D SQUIB CIRCUIT

## CIRCUIT DESCRIPTION

The D squib circuit consists of the airbag sensor assy center, the spiral cable sub–assy and the horn button assy.
It causes the SRS to deploy when the SRS deployment conditions are satisfied.
DTC B0101/14 is recorded when an open is detected in the D squib circuit.


| DTC No. | DTC Detecting Condition | Trouble Area |
|---|---|---|
| B0101/14 | • Open in D squib circuit<br>• D squib malfunction<br>• Spiral cable sub–assy malfunction<br>• Airbag sensor assy center malfunction | • Horn button assy (D squib)<br>• Spiral cable sub–assy<br>• Airbag sensor assy center<br>• Instrument panel wire |

## WIRING DIAGRAM

See page 05–1137.

## INSPECTION PROCEDURE

| 1 | CHECK D SQUIB CIRCUIT(AIRBAG SENSOR ASSY CENTER – HORN BUTTON ASSY) |
|---|---|

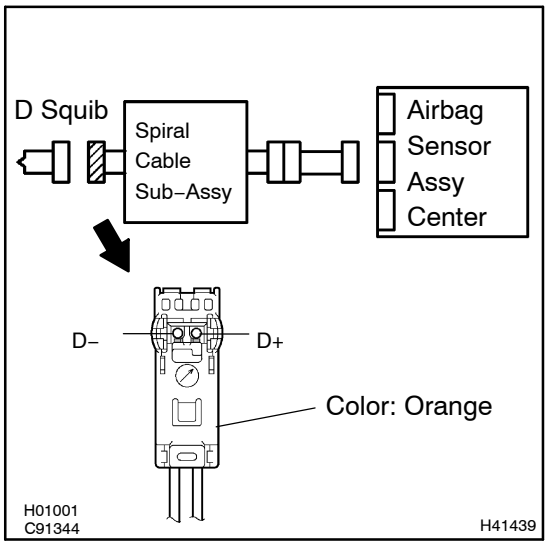



(a) Disconnect the negative (–) terminal cable from the battery, and wait at least for 90 seconds.
(b) Disconnect the connectors between the airbag sensor assy center and the horn button assy.
(c) Measure the resistance between D+ and D– of the orange connector on the horn button assy side between the airbag sensor assy center and the horn button assy.
**OK:**
**Resistance: Below 1 Ω**

**NG** → **Go to step 4**

**OK**

## 2 CHECK AIR BAG SENSOR ASSY CENTER

SST 09843–18040

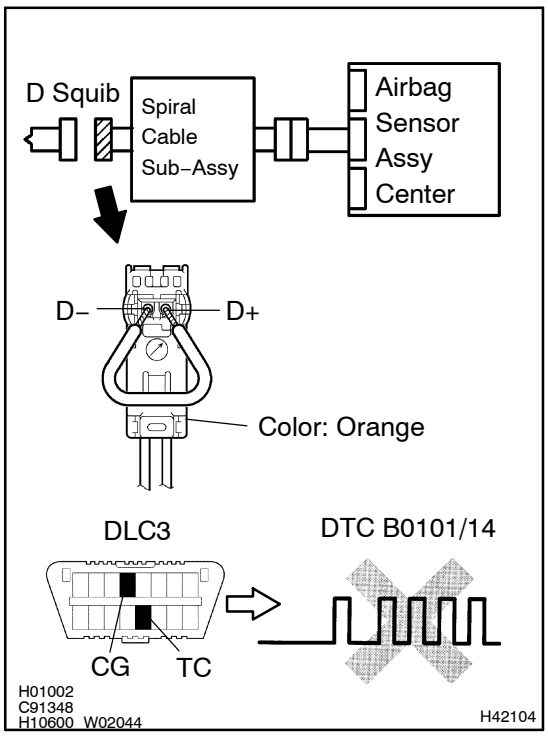


(a) Connect the connector to the airbag sensor assy center.
(b) Using a service wire, connect D+ and D– of the orange connector on the horn button assy side between the airbag sensor assy center and the horn button assy.
(c) Connect the negative (–) terminal cable to the battery, and wait at least for 2 seconds.
(d) Turn the ignition switch to ON, and wait at least for 10 seconds.
(e) Clear the DTC stored in memory (See page 05–1122).
(f) Turn the ignition switch to LOCK, and wait at least for 10 seconds.
(g) Turn the ignition switch to ON, and wait at least for 10 seconds.
(h) Check the DTC (See page 05–1122).
**OK:**
**DTC B0101/14 is not output.**


HINT:
Codes other than code B0101/14 may be output at this time, but they are not relevant to this check.

**NG** → **REPLACE AIR BAG SENSOR ASSY CENTER**

**OK**

## 3 CHECK D SQUIB

SST 09843–18040

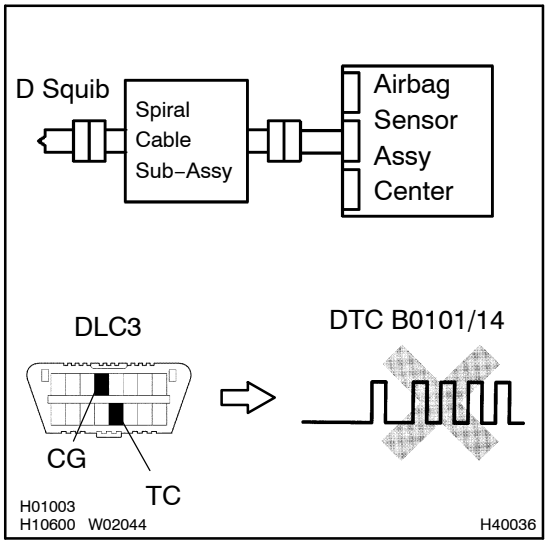


(a) Turn the ignition switch to LOCK.
(b) Disconnect the negative (–) terminal cable from the battery, and wait at least for 90 seconds.
(c) Connect the horn button assy connectors.
(d) Connect the negative (–) terminal cable to the battery, and wait at least for 2 seconds.
(e) Turn the ignition switch to ON, and wait at least for 10 seconds.
(f) Clear the DTC stored in memory (See page 05–1122).
(g) Turn the ignition switch to LOCK, and wait at least for 10 seconds
(h) Turn the ignition switch to ON, and wait at least for 10 seconds.
(i) Check the DTC (See page 05–1122).
**OK:**
**DTC B0101/14 is not output.**


HINT:
Codes other than code B0101/14 may be output at this time, but they are not relevant to this check.

**NG** → **REPLACE HORN BUTTON ASSY**

**OK**

**USE SIMULATION METHOD TO CHECK**

## 4 CHECK INSTRUMENT PANEL WIRE

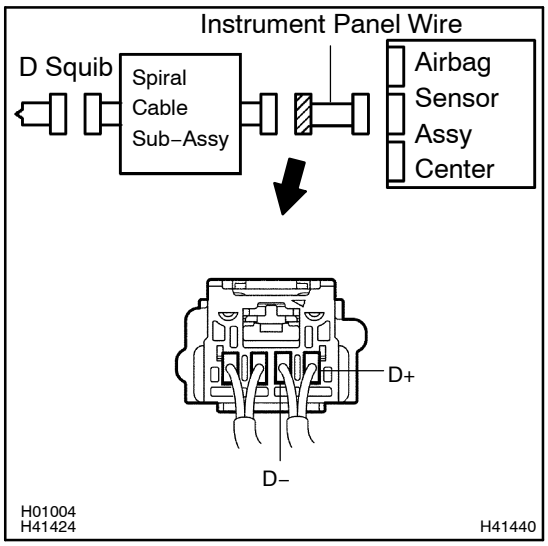



(a) Disconnect the spiral cable sub–assy connector from the instrument panel wire.
(b) For the connector (on the spiral cable sub–assy side) between the airbag sensor assy center and the spiral cable sub–assy, measure the resistance between D+ and D–.
**OK:**
**Resistance: Below 1 Ω**

**NG** → **REPAIR OR REPLACE INSTRUMENT PANEL WIRE**

**OK**

| 5 | CHECK SPIRAL CABLE SUB–ASSY |
|---|---|

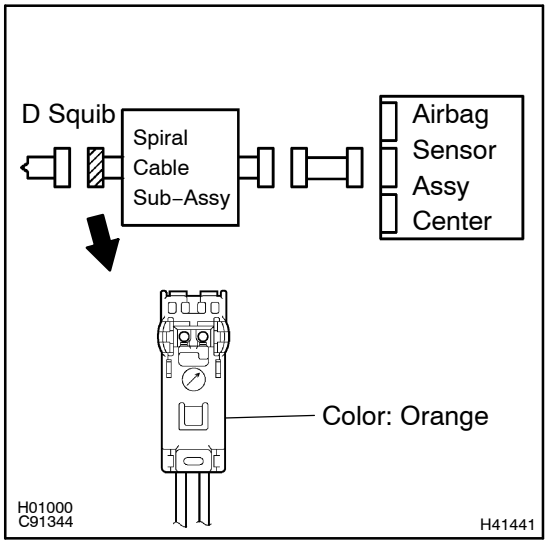


(a) Measure the resistance between D+ and D– of the orange spiral cable sub–assy connector on the horn button assy side.
**OK:**
**Resistance: Below 1 Ω**

**NG** → **REPLACE SPIRAL CABLE SUB–ASSY**

**OK**

**USE SIMULATION METHOD TO CHECK**