
05A59–01


LOCATION

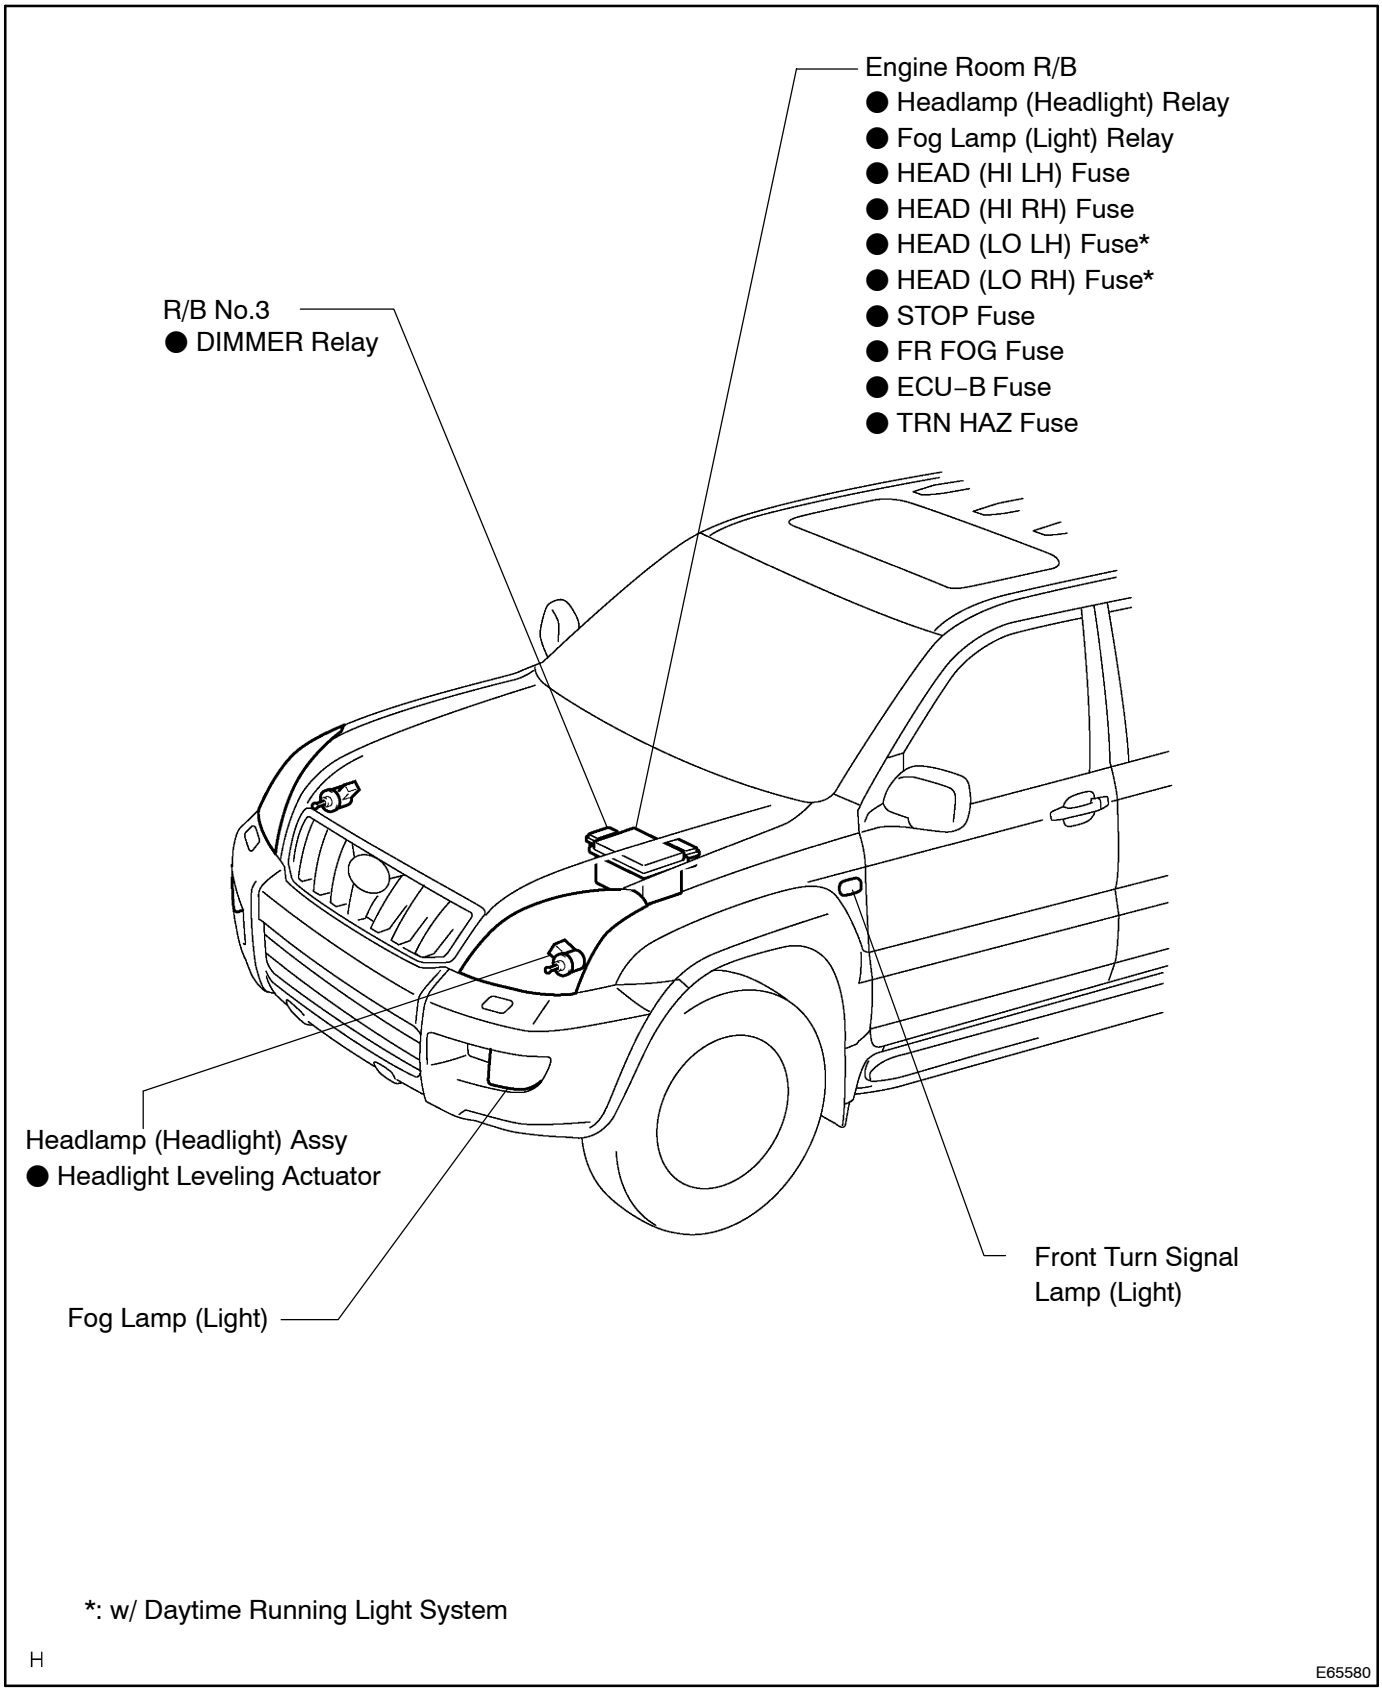


*: w/ Daytime Running Light System

H

E65580

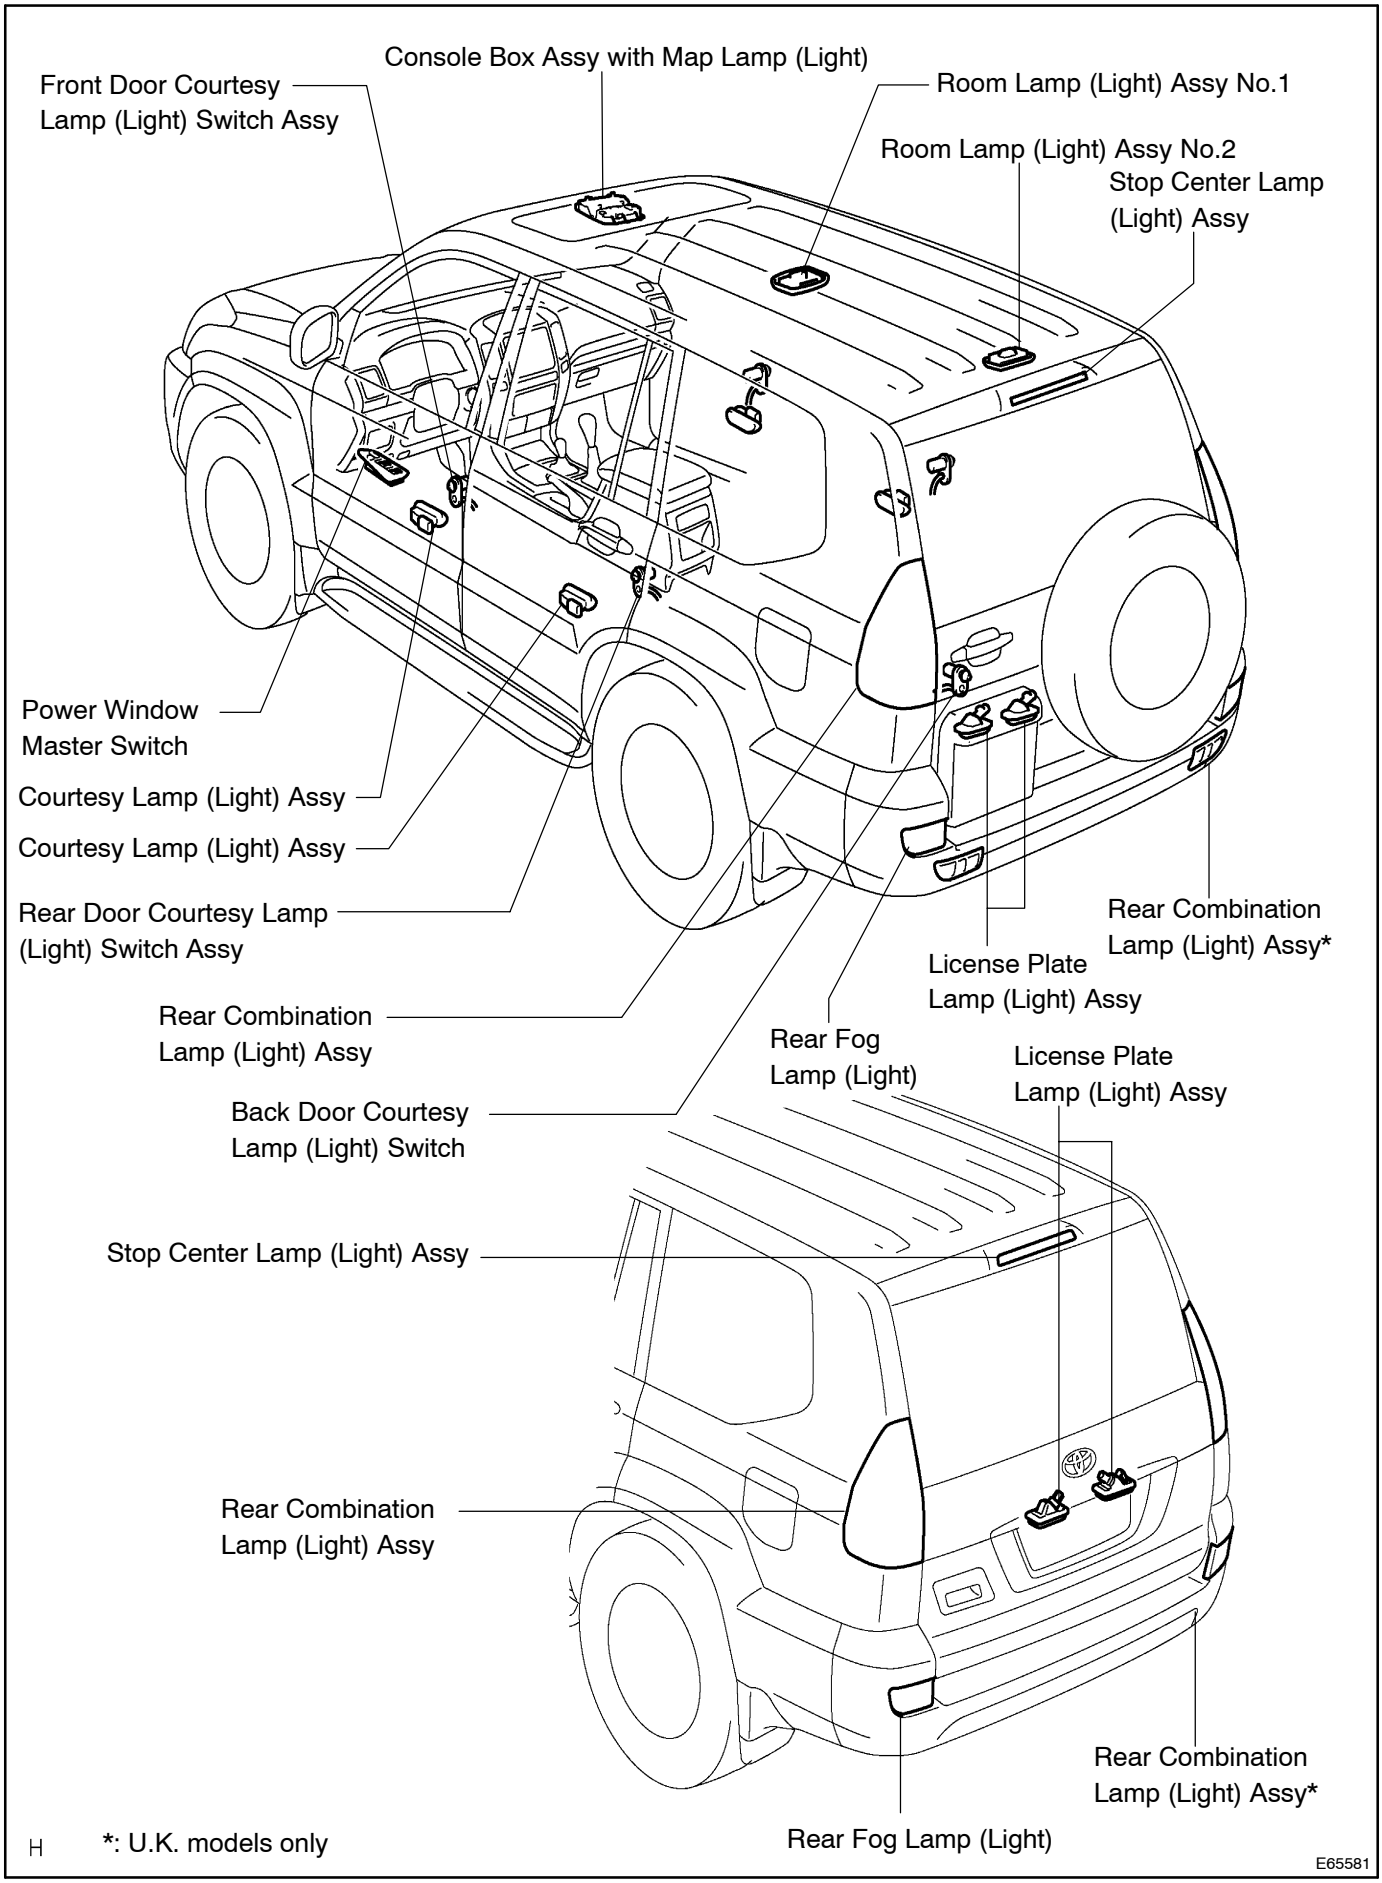

*: U.K. models only

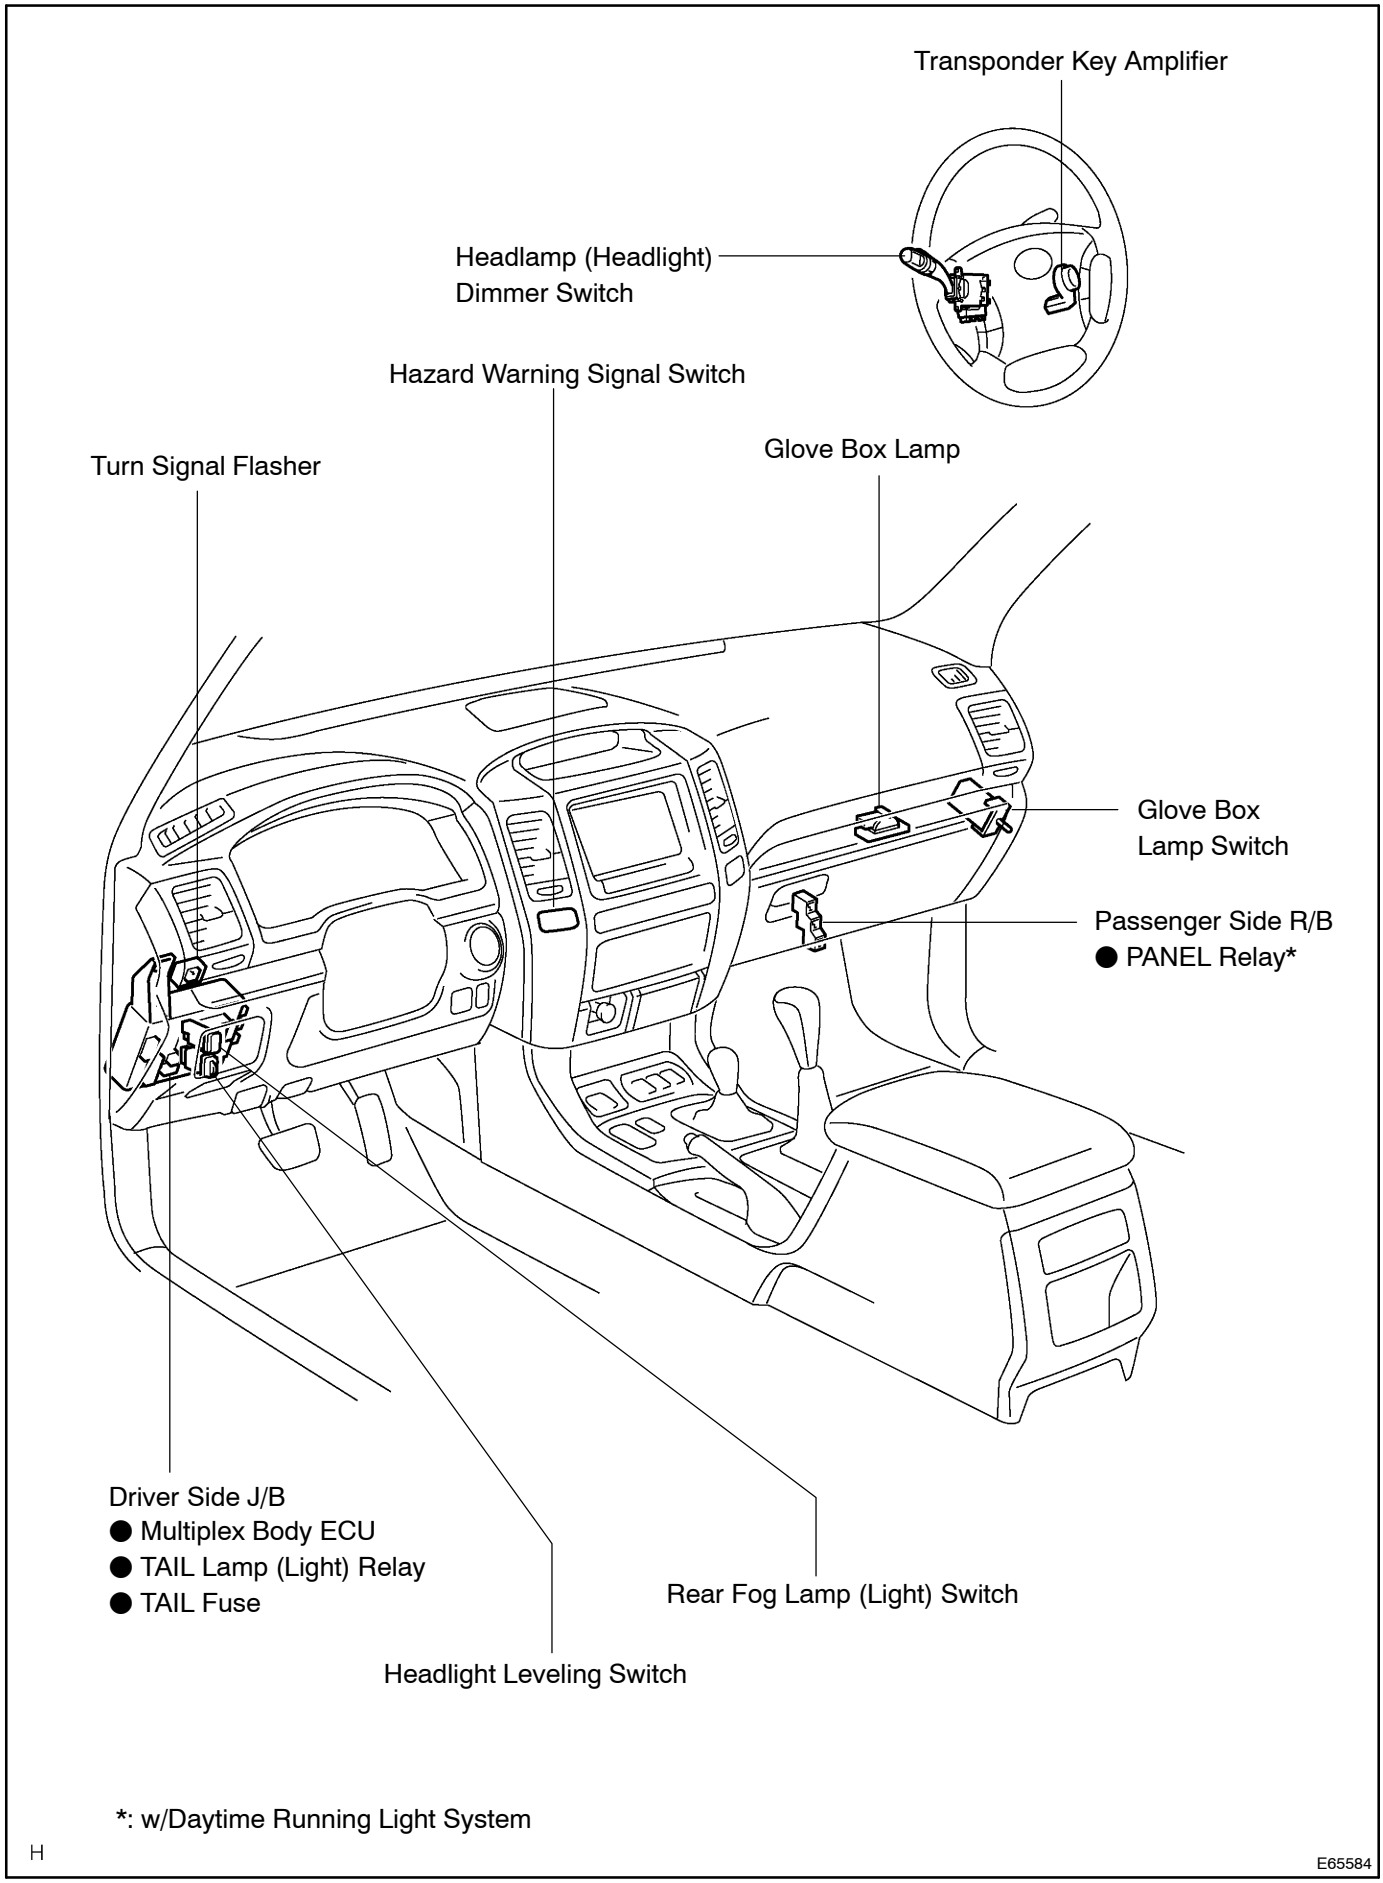
Transponder Key Amplifier
Headlamp (Headlight) Dimmer Switch
Hazard Warning Signal Switch
Turn Signal Flasher
Glove Box Lamp
Glove Box Lamp Switch
Passenger Side R/B
● PANEL Relay*
Driver Side J/B
● Multiplex Body ECU
● TAIL Lamp (Light) Relay
● TAIL Fuse
Rear Fog Lamp (Light) Switch
Headlight Leveling Switch
*: w/Daytime Running Light System
H
E65584