

05AAA–01

LOCATION

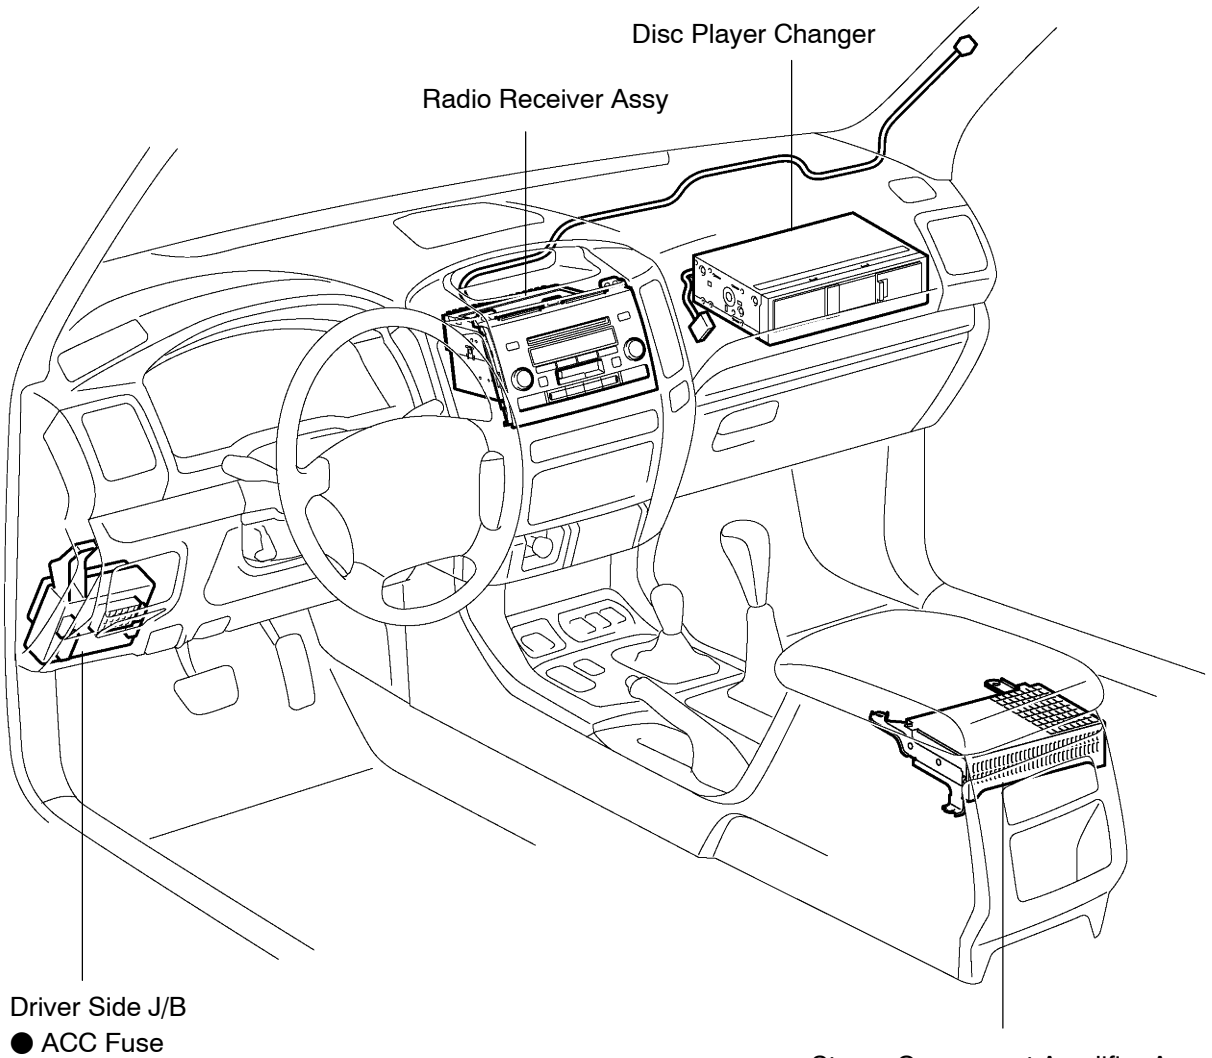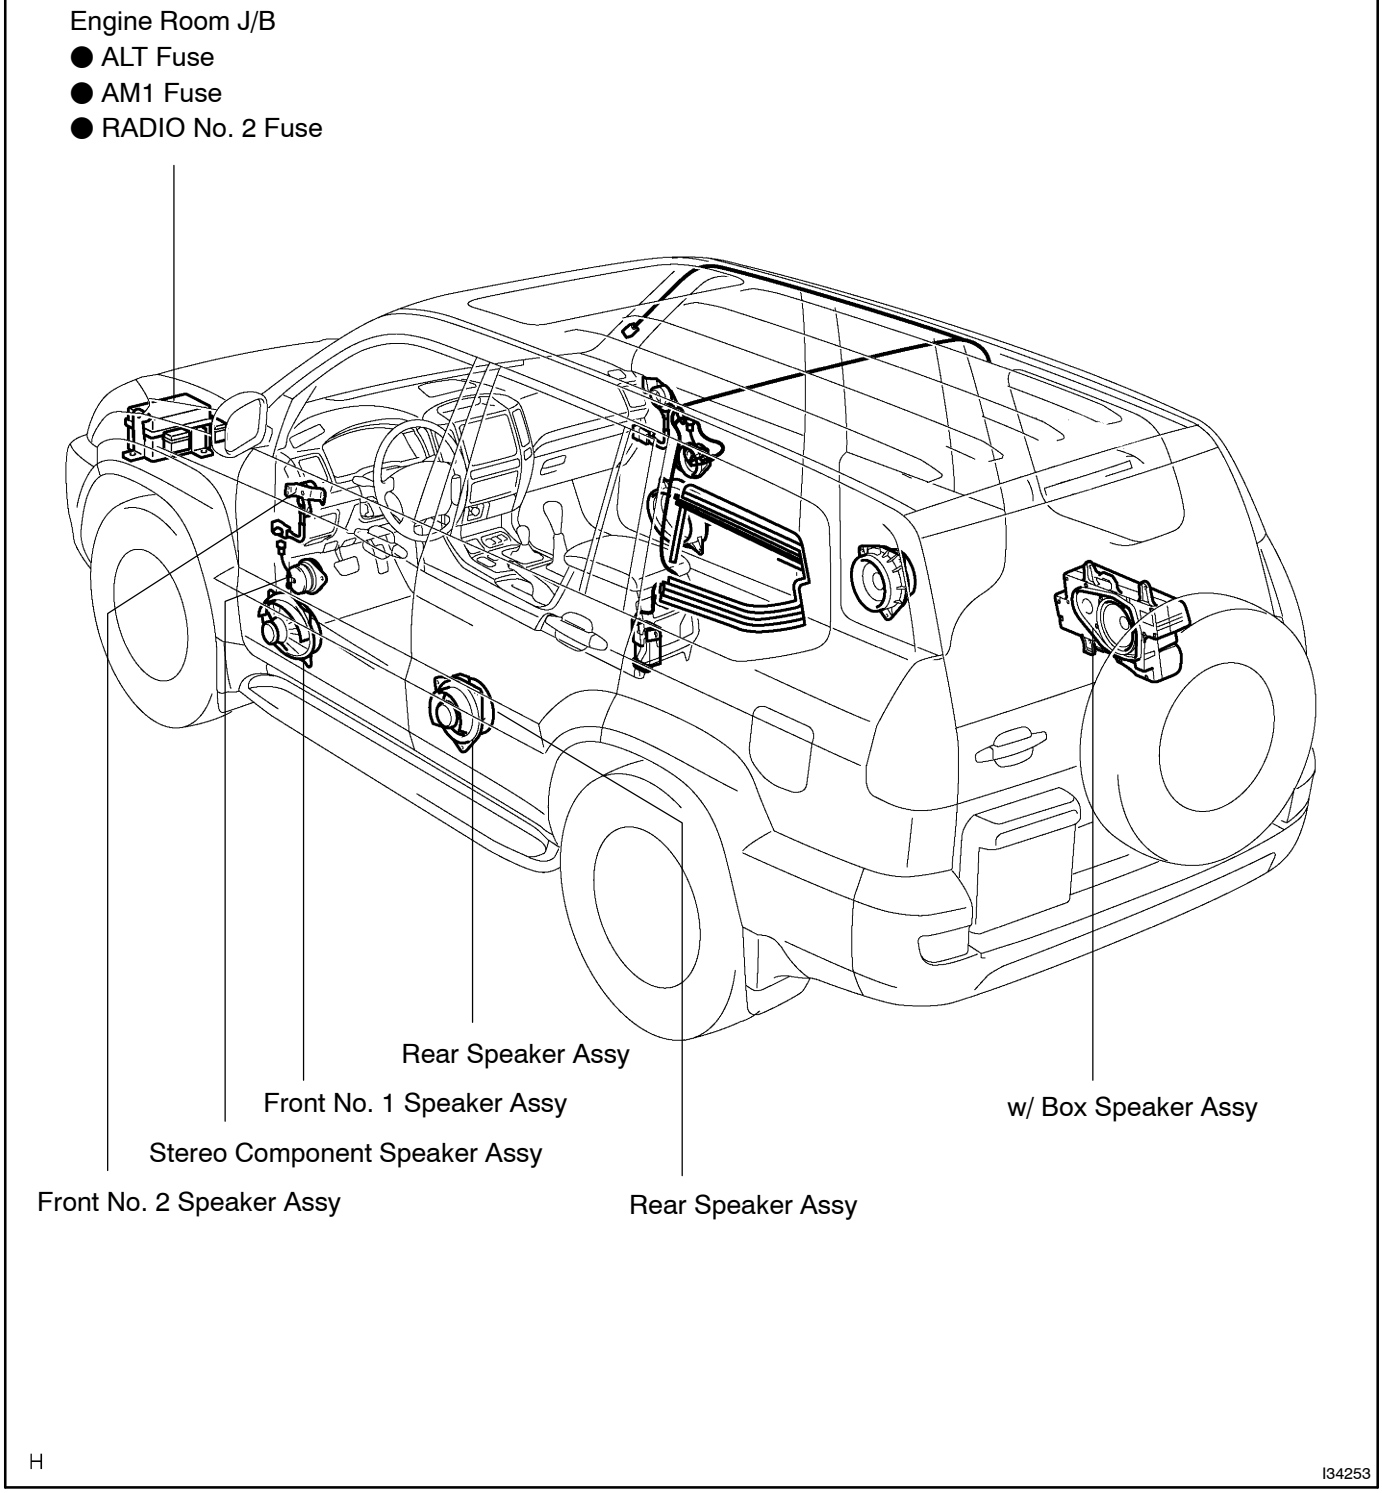

H

I34252


Engine Room J/B
● ALT Fuse
● AM1 Fuse
● RADIO No. 2 Fuse
Rear Speaker Assy
Front No. 1 Speaker Assy
w/ Box Speaker Assy
Stereo Component Speaker Assy
Front No. 2 Speaker Assy
Rear Speaker Assy
H
I34253