
PRESSING POWER SWITCH DOES NOT START SYSTEM


WIRING DIAGRAM

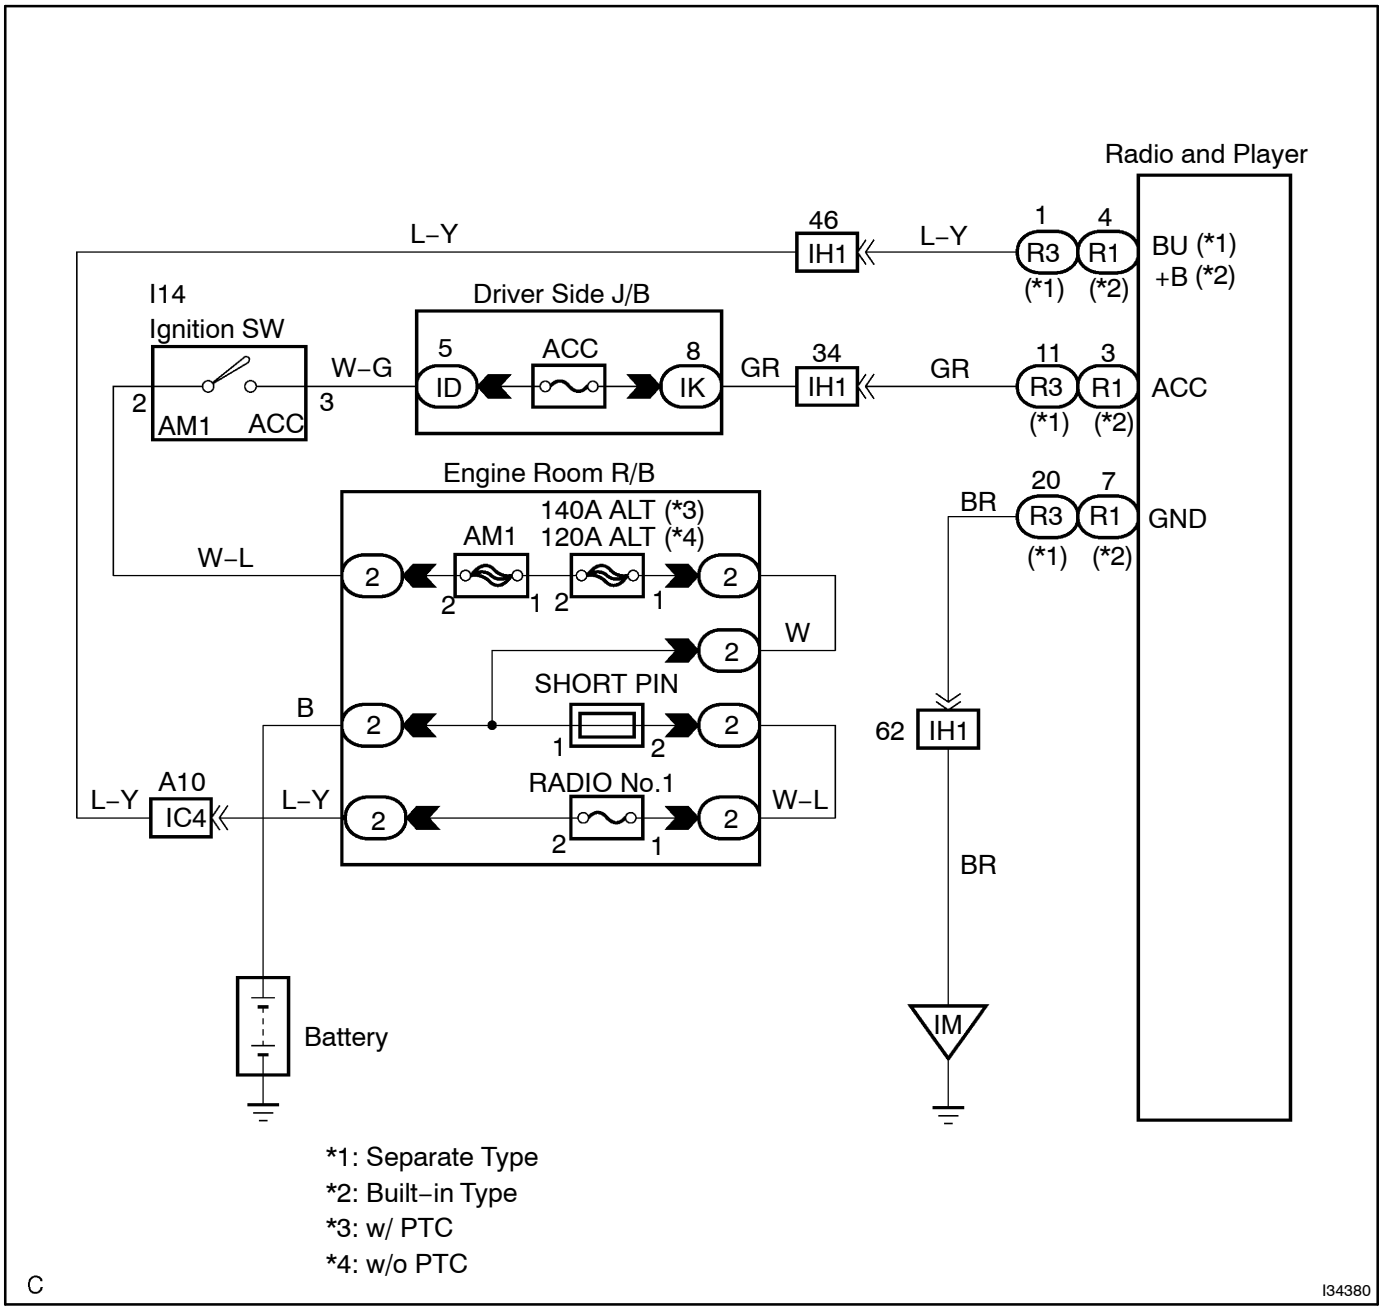


INSPECTION PROCEDURE

1	INSPECT RADIO RECEIVER ASSY(BU, +B, ACC, GND)

Except 9 Speakers Models:

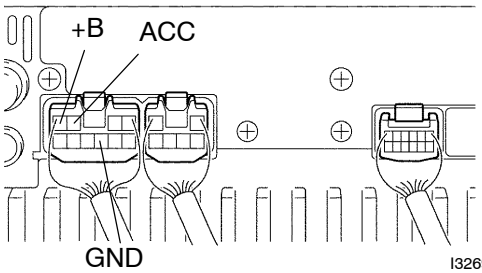

9 Speakers Models:

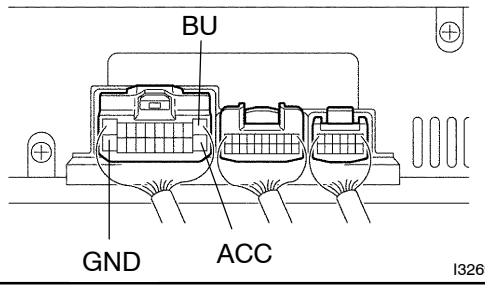

(a) Check that the continuity between terminals at each condition, as shown in the chart.

Standard:

Tester connection	Condition	Specified condition
GND – Body ground	Constant	Continuity

(b) Check that the voltage between terminals at each condition, as shown in the chart.

Standard:

Tester connection	Condition	Specified condition
BU *1, +B *2 – GND	Constant	10 – 14 V
ACC – GND	Ignition switch ACC or ON	10 – 14 V

*1: 9 Speakers Models

*2: Except 9 Speakers Models

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK

CHECK AND REPLACE RADIO RECEIVER ASSY