
TURNING ON LIGHT SWITCH DOES NOT COME ON NIGHT TIME ILLUMINATION OF RADIO RECEIVER


WIRING DIAGRAM

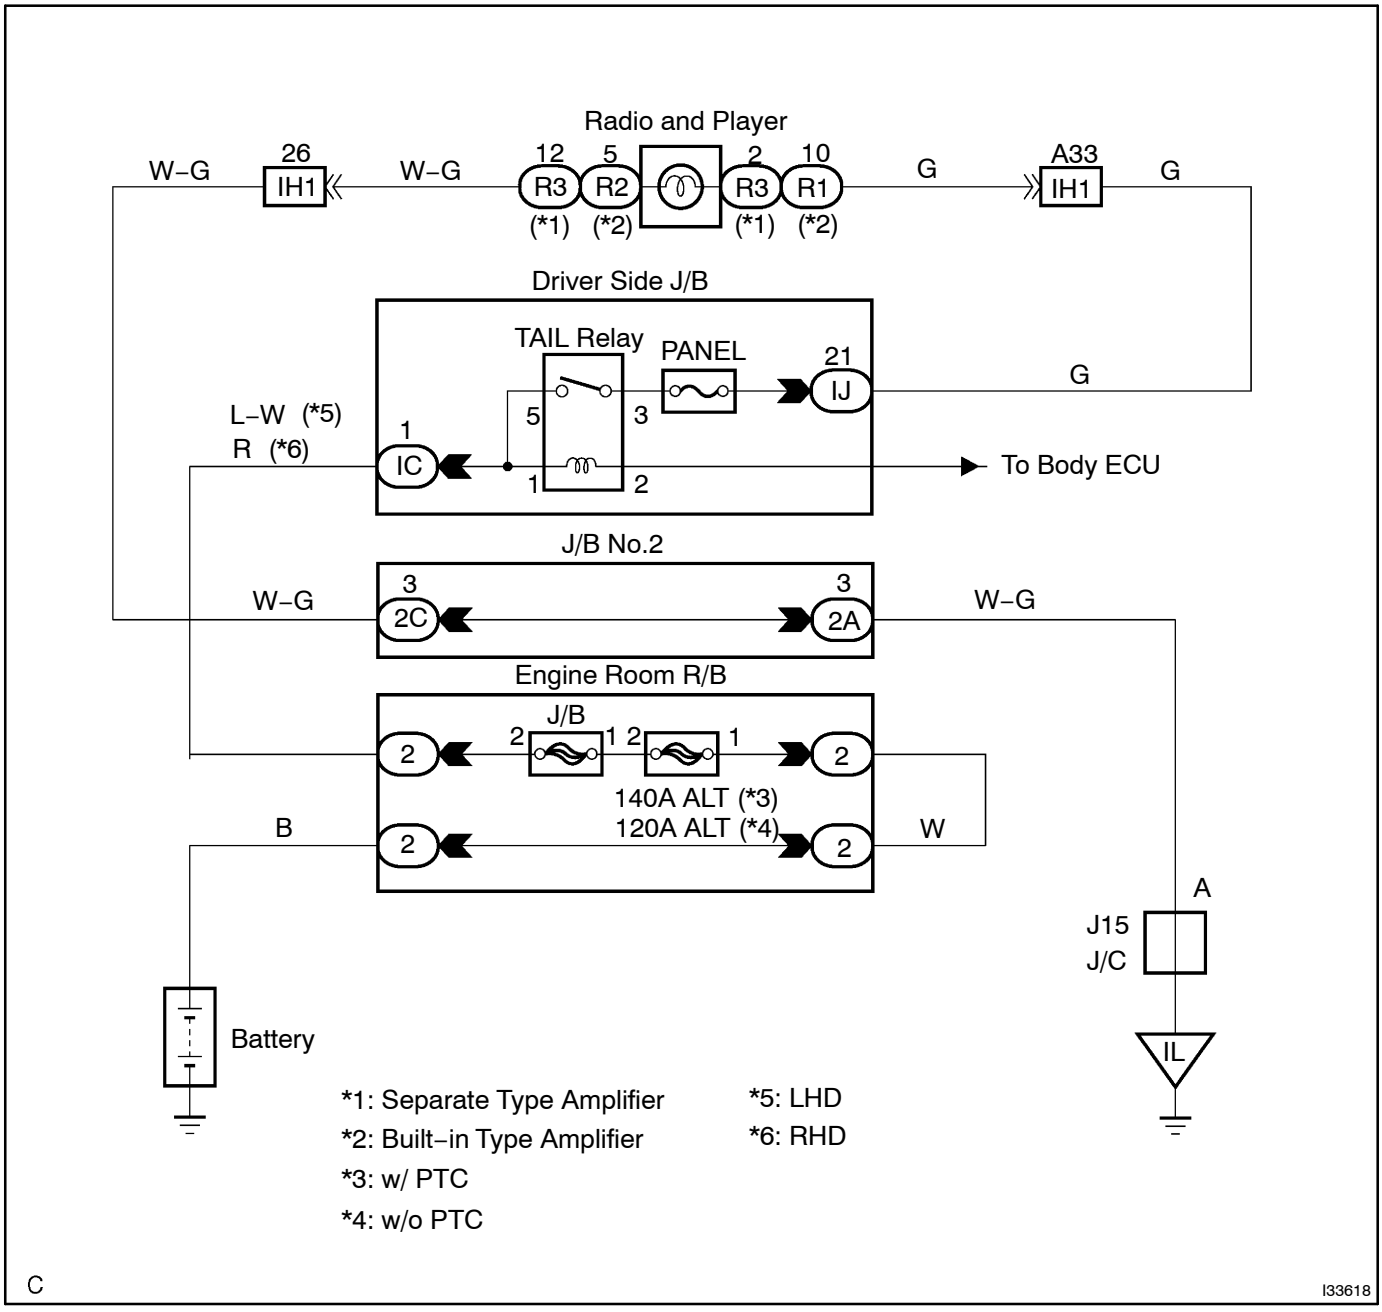


INSPECTION PROCEDURE

1	INSPECT RADIO RECEIVER ASSY(ILL+)

Except 9 Speakers Models:

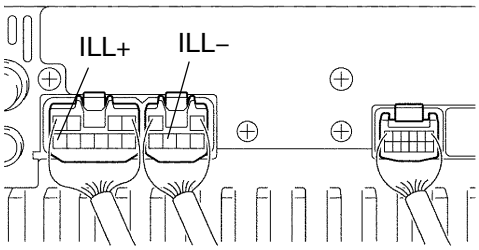

9 Speakers Models:

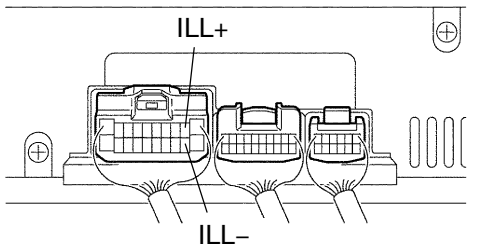

(a) Check that the continuity between terminal at each condition, as shown in the chart.

Standard:

Tester connection	Condition	Specified condition
ILL– – Body ground	Constant	Continuity

(b) Check that the voltage between terminal at each condition, as shown in the chart.

Standard:

Tester connection	Condition	Specified condition
ILL+ – Body ground	Light control switch TAIL	10 – 14 V

OK → **CHECK AND REPLACE RADIO RECEIVER ASSY**

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR