TAPE IS TANGLED DUE TO INCORRECT TAPE SPEED OR AUTO–REVERSE MALFUNCTION

INSPECTION PROCEDURE

1	CHECK FOR ANY FOREIGN OBJECT

(a) Check for any foreign object.
  (1) Check that no foreign material and troubles are detected in the radio receiver assembly cassette tape player.

Standard: No foreign material and trouble detected.

NG > **REMOVE FOREIGN OBJECT**

OK

2	REPLACE CASSETTE TAPE WITH ANOTHER AND RECHECK(BELOW 90 MIN.)


(a) Replace the cassette tape with another and recheck.
  (1) Replace the faulty cassette tape with the normal one (90min or less) to see if the same trouble occurs again.

Standard: malfunction disappear.

OK > **CASSETTE TAPE FAULTY**

NG

3	CLEAN HEAD AND CHECK OPERATION

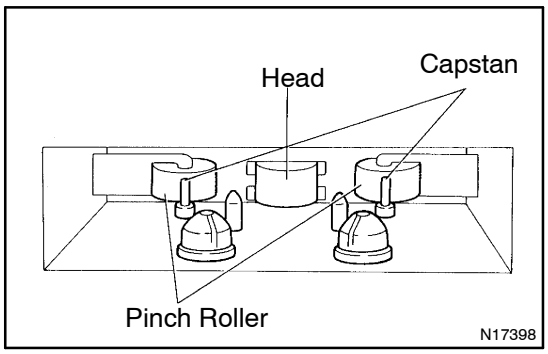

(a) Head cleaning
  (1) Raise the cassette door with your finger. Next, using a pencil or similar object, push in the guide.
  (2) Using a cleaning pen or cotton applicator soaked in cleaner, clean the head surface, pinch rollers and capstans.
  (3) Check that the same trouble occurs again.

OK > **HEAD DIRTY**

NG

CHECK AND REPLACE RADIO RECEIVER ASSY